OIL CONTROL VALVE (OCV) REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0110q3801300


Warning

- **A hot engine can cause severe burns. Turn off the engine and wait until it is cool before servicing.**

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the plug hole plate. (See PLUG HOLE PLATE REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
3. Remove the ignition coils. (SKYACTIV-G 1.3, SKYACTIV-G 1.5 (with 4-1 exhaust system)) (See IGNITION COIL/ION SENSOR REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
4. Remove the ignition coil/ion sensors. (SKYACTIV-G 1.5 (with 4-2-1 exhaust system)) (See IGNITION COIL/ION SENSOR REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
5. Remove the cylinder head cover. (See TIMING CHAIN REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
6. Remove in the order indicated in the table.
7. Install in the reverse order of removal.

SKYACTIV-G 1.3, SKYACTIV-G 1.5 (with 4-1 exhaust system)


1	OCV installation bolt
2	OCV

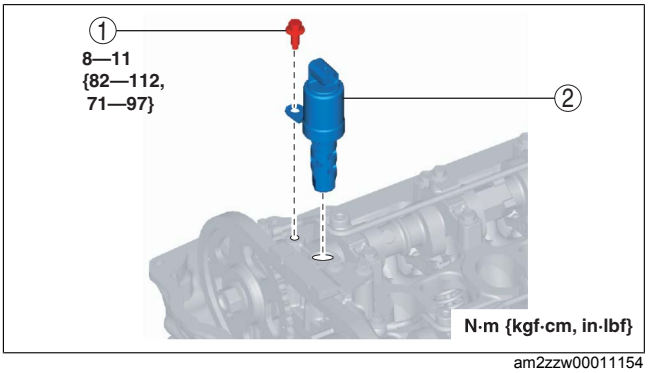

am2zzw00011154

SKYACTIV-G 1.5 (with 4-2-1 exhaust system)

1	OCV installation bolt
2	OCV

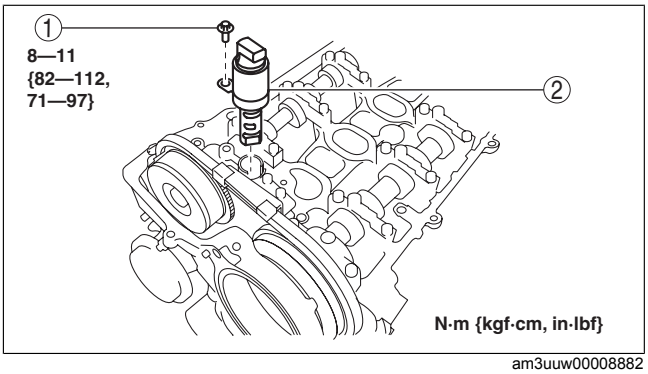

am3uuw00008882