
ENGINE MOUNT DISASSEMBLY/ASSEMBLY [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0110q3806900

No.1 Engine Mount

1. Remove the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)
2. Remove in the order indicated in the table.
3. Install in the reverse order of removal.

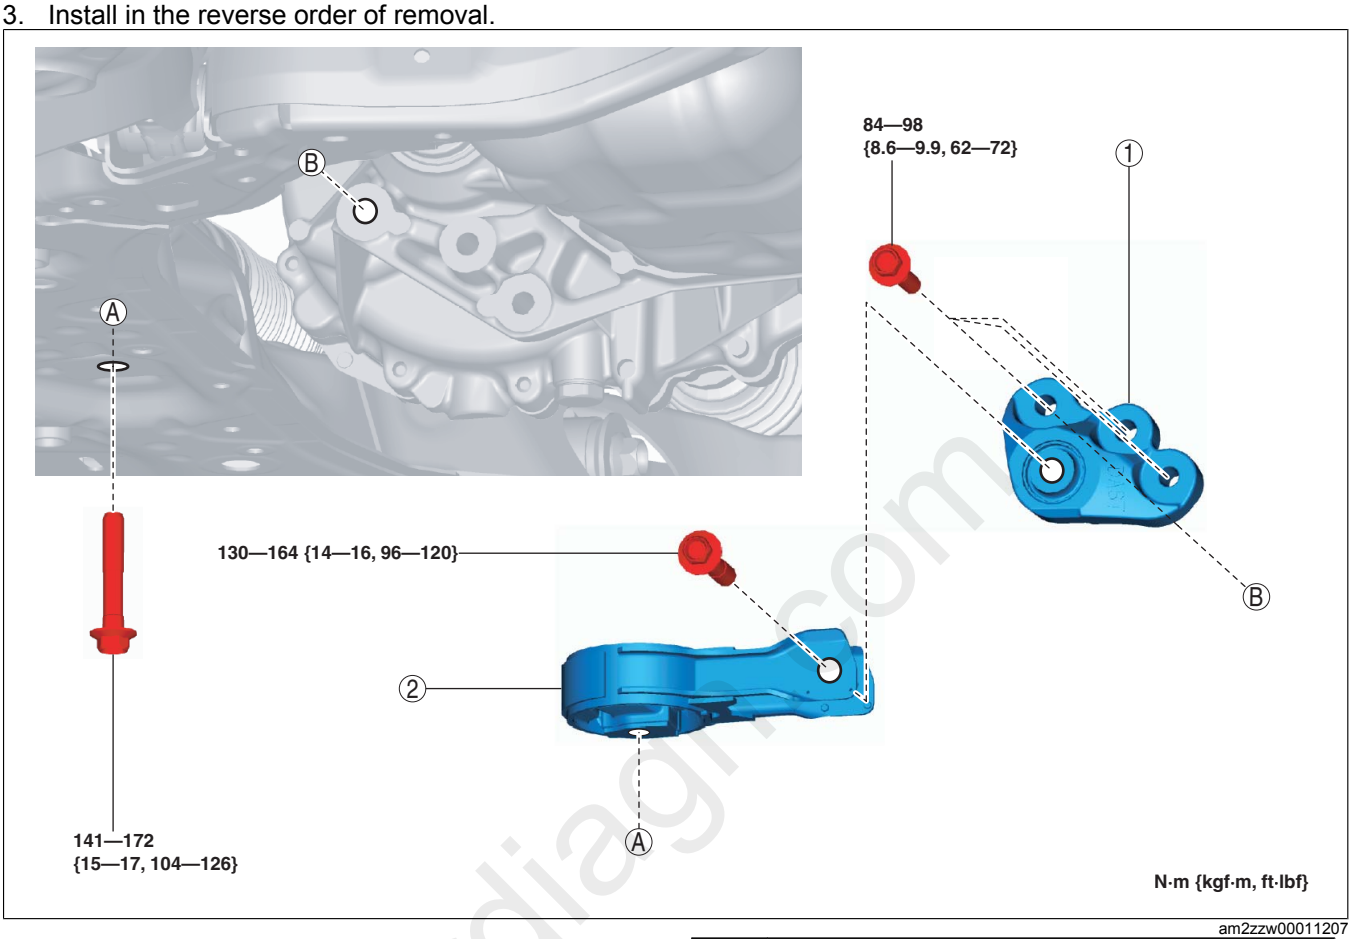


am2zzw00011207

1	No.1 engine mount bracket (See No.1 engine mount installation note.)
2	No.1 engine mount rubber (See No.1 engine mount installation note.)

No.1 engine mount installation note

1. Install the No.1 engine mount rubber and bracket, and temporarily tighten the bolts shown in the figure.

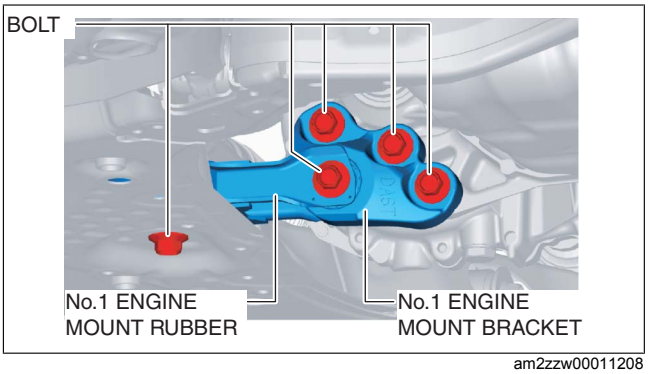


am2zzw00011208

cardiagn.com

2. Tighten the No.1 engine mount bracket installation bolts in the order shown in the figure.

   Tightening torque
   84—98 N·m {8.6—9.9 kgf·m, 62—72 ft·lbf}

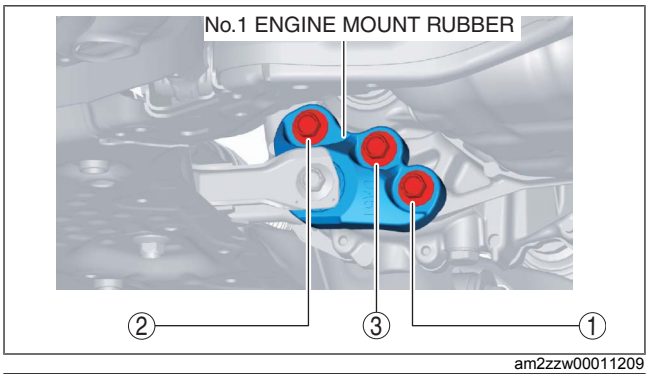


am2zzw00011209

3. Tighten the No.1 engine mount rubber installation bolts in the order shown in the figure.

Tightening torque

Installation position	Tightening torque
1	141—172 N·m {15—17 kgf·m, 104—126 ft·lbf}
2	130—164 N·m {14—16 kgf·m, 96—120 ft·lbf}

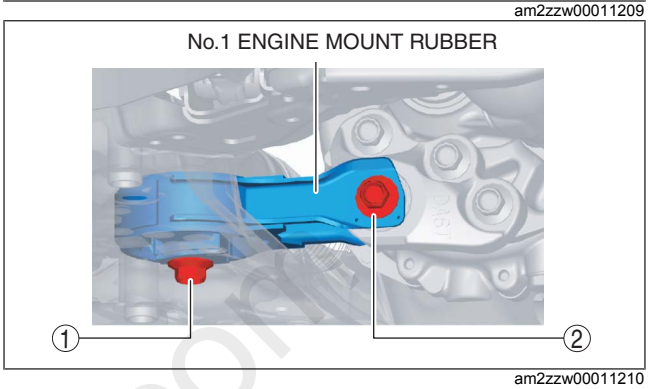

am2zzw00011210


No.3 Engine Mount

Caution
- **Slots have been adopted for the No.3 engine mount installation holes. If the No.3 engine mount is deviated from the original position when installing the No.3 engine mount, engine noise or vibration could increase. Before removing the No.3 engine mount, place alignment marks on the No.3 engine mount and body so that they can be assembled to the same positions as before removal.**

1. Remove the plug hole plate. (See PLUG HOLE PLATE REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
2. Remove in the order indicated in the table.
3. Install in the reverse order of removal.

cardiagn.com


SKYACTIV-G 1.3, SKYACTIV-G 1.5 (with 4-1 exhaust system)

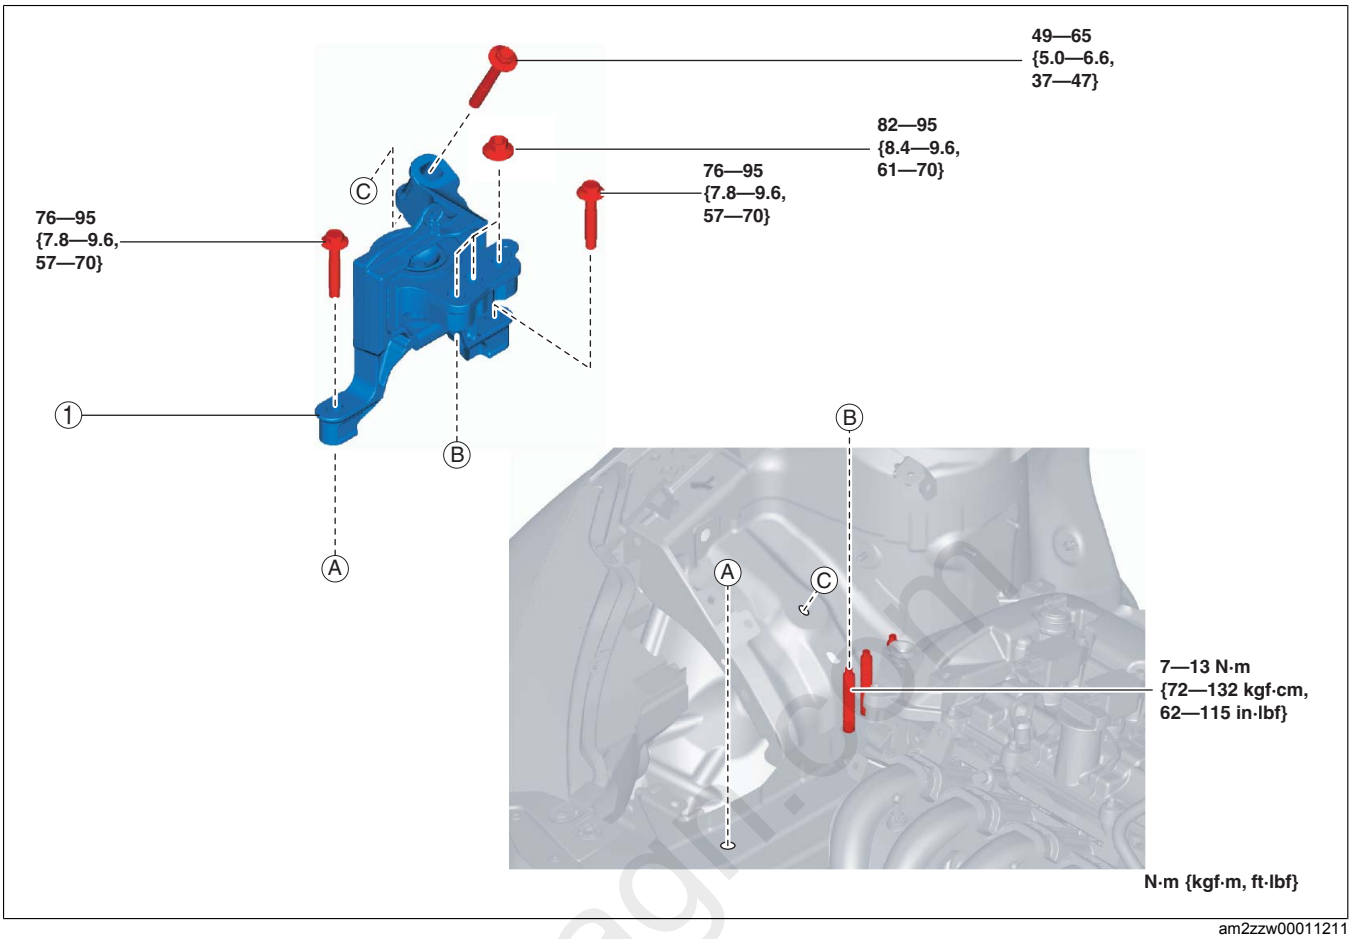

am2zzw00011211

cardiagn.com

SKYACTIV-G 1.5 (with 4-2-1 exhaust system)

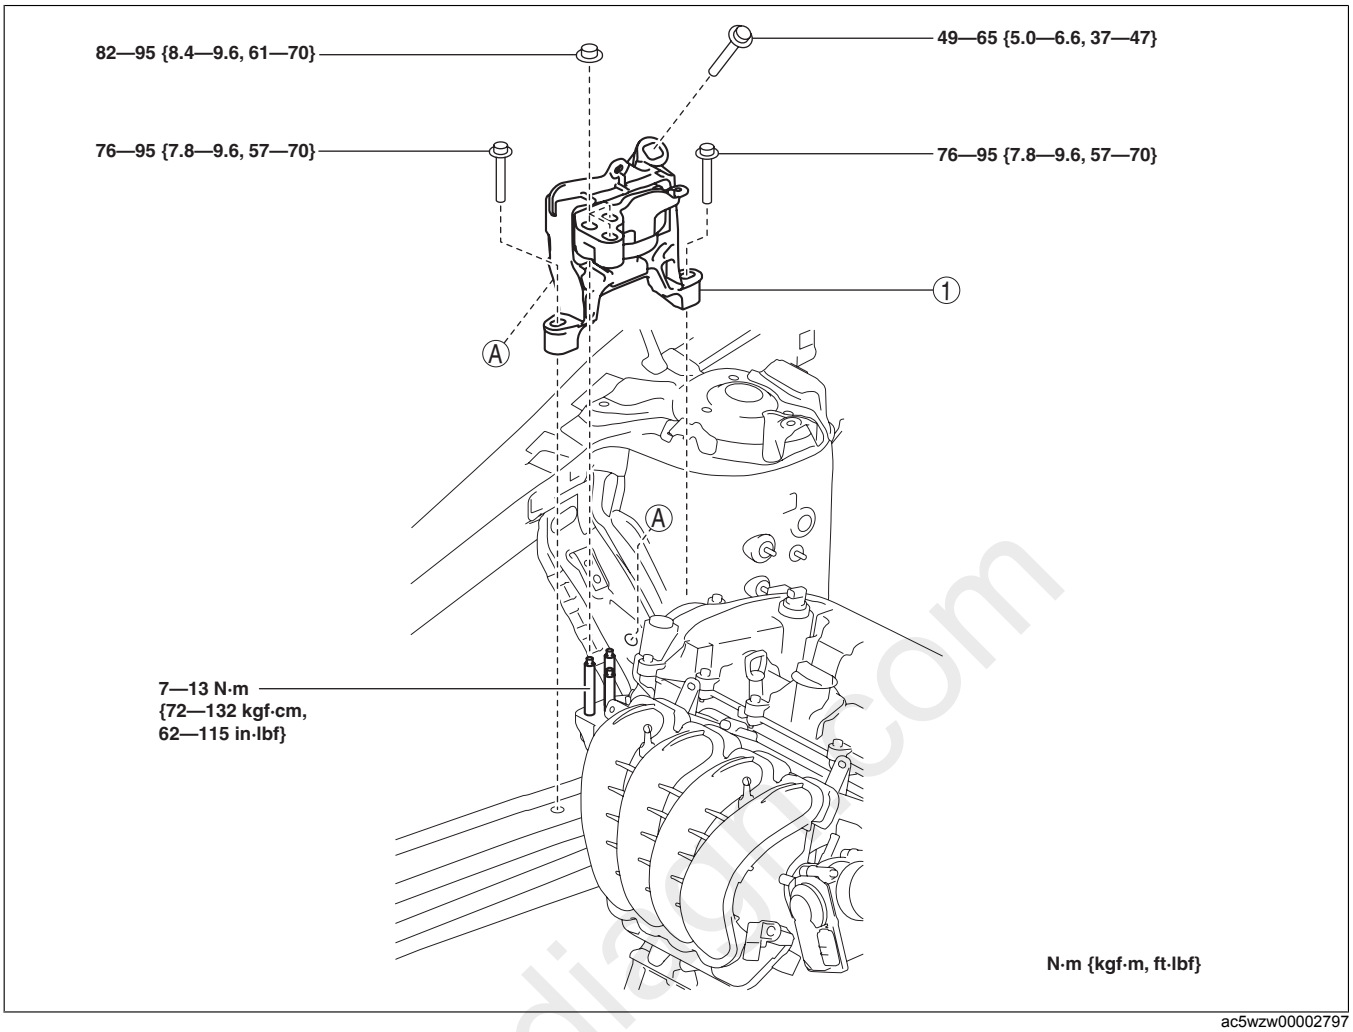


ac5wzw00002797

1	No.3 engine mount (See No.3 engine mount removal note.) (See No.3 engine mount installation note.)

No.3 engine mount removal note

1. Remove the clips shown in the figure and set the ground cable aside.
2. Remove the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/ INSTALLATION.)

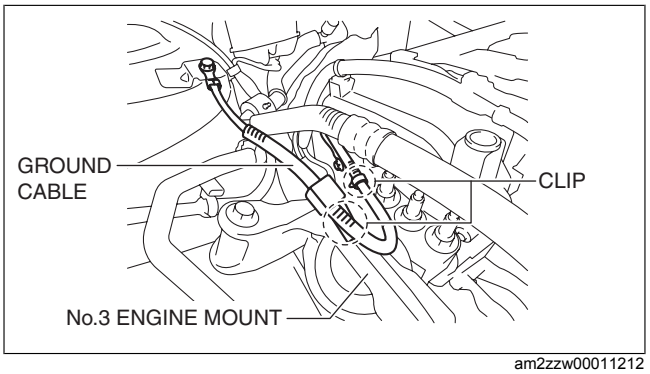


am2zzw00011212

Caution

- **To prevent deformation of the oil pan, support the engine using the following methods.**
  - **— When using an engine lifter, insert rubber of appropriate size (approx. 20 mm {0.79 in} thickness) between the engine lifter and the oil pan to support the oil pan.**
  - **— When using a garage jack, place rubber of appropriate size (approx. 20 mm {0.79 in} thickness) on a batten which is large enough to cover and support the oil pan.**


3. Before removing the No.3 engine mount, support the engine (oil pan) using a commercially available engine lifter or garage jack.

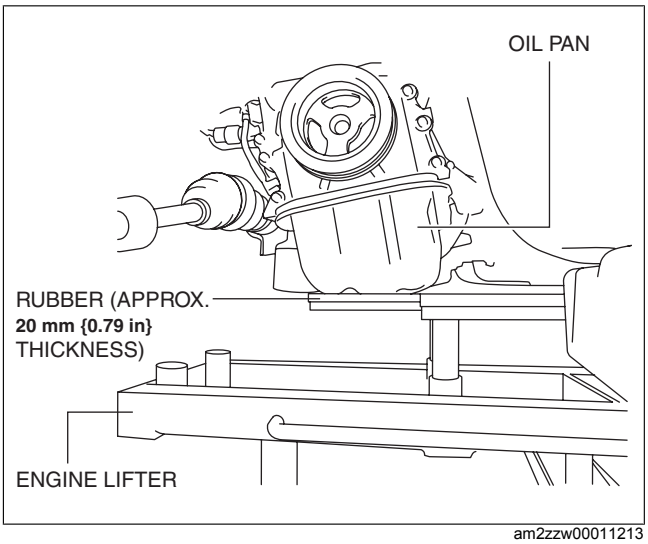

am2zzw00011213

4. Place alignment marks on the locations shown in the figure so that they can be assembled to the same positions as before removal.

SKYACTIV-G 1.3, SKYACTIV-G 1.5 (with 4-1 exhaust system)

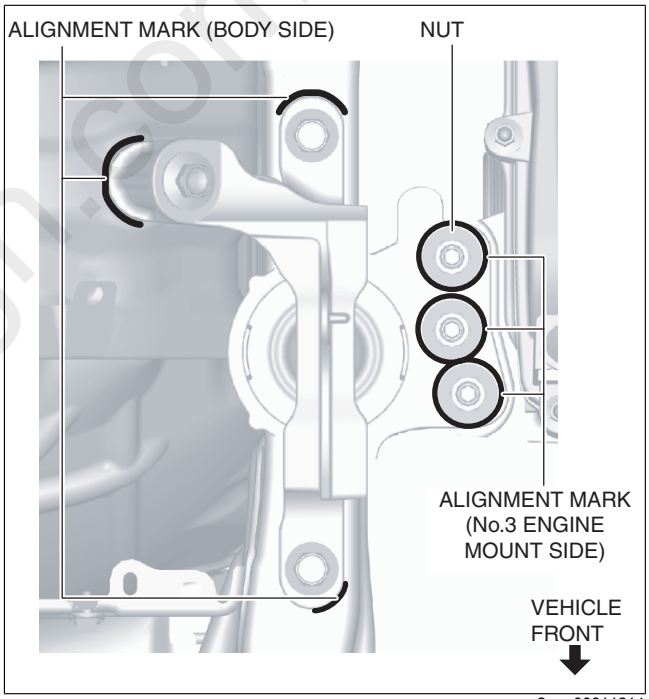


am2zzw00011214

cardiagn.com

SKYACTIV-G 1.5 (with 4-2-1 exhaust system)

Note
- Paint so that the No.3 engine mount is framed on the body side and the outline of the nut is framed on the No.3 engine mount side.

5. Remove the No.3 engine mount.

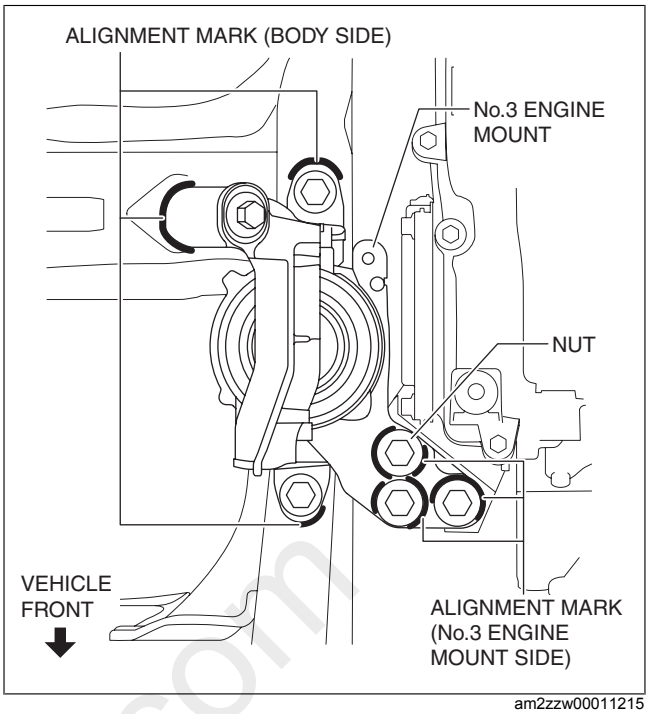


am2zzw00011215

No.3 engine mount installation note

Note
- When replacing the No.3 engine mount, place a mark at the same position as the one placed before removal.
- If the No.3 engine mount nut is loosened, tighten the engine front cover stud bolts because they may have loosened.

1. Tighten the engine front cover stud bolts.


SKYACTIV-G 1.3, SKYACTIV-G 1.5 (with 4-1 exhaust system)

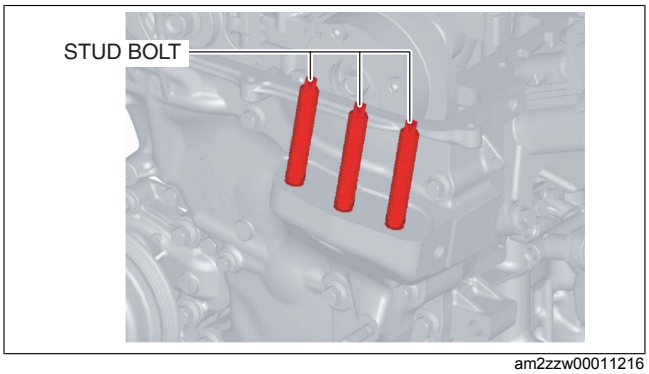

am2zzw00011216

SKYACTIV-G 1.5 (with 4-2-1 exhaust system)

Tightening torque
7—13 N·m {72—132 kgf·cm, 62—115 in·lbf}

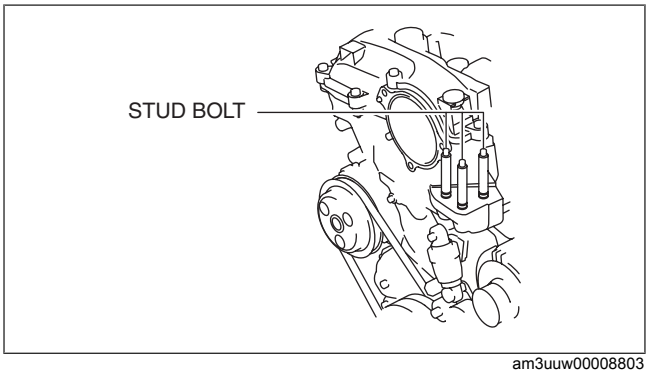


am3uuw00008803

2. Temporarily tighten the No.3 engine mount installation bolts and nuts using the following procedure:

cardiagn.com


(1) Align the alignment marks on the body side and No.3 engine mount, and temporarily tighten the bolts shown in the figure.

SKYACTIV-G 1.3, SKYACTIV-G 1.5 (with 4-1 exhaust system)

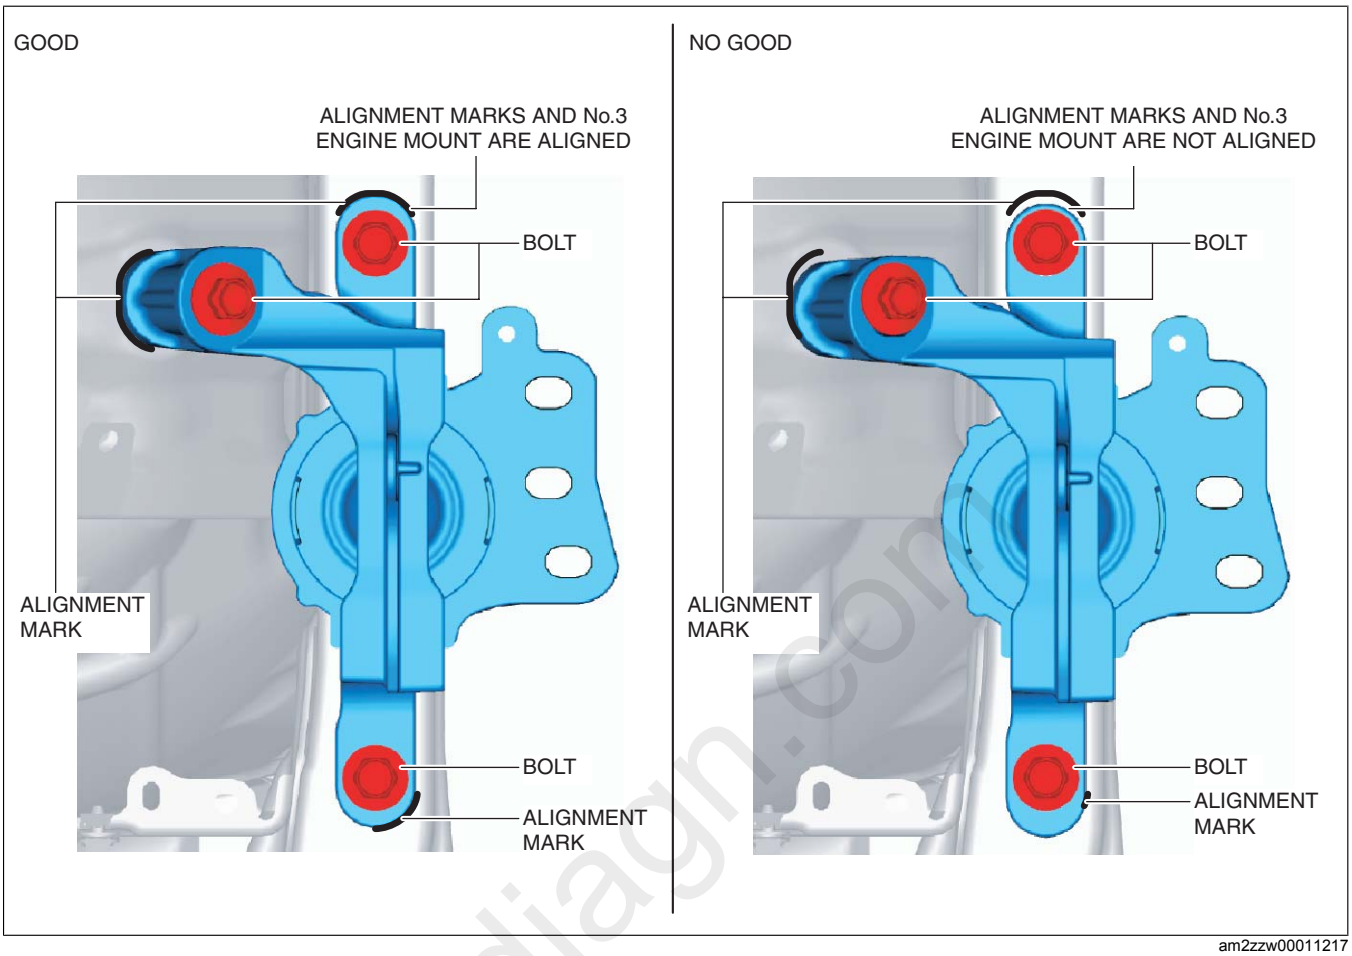

am2zzw00011217

SKYACTIV-G 1.5 (with 4-2-1 exhaust system)

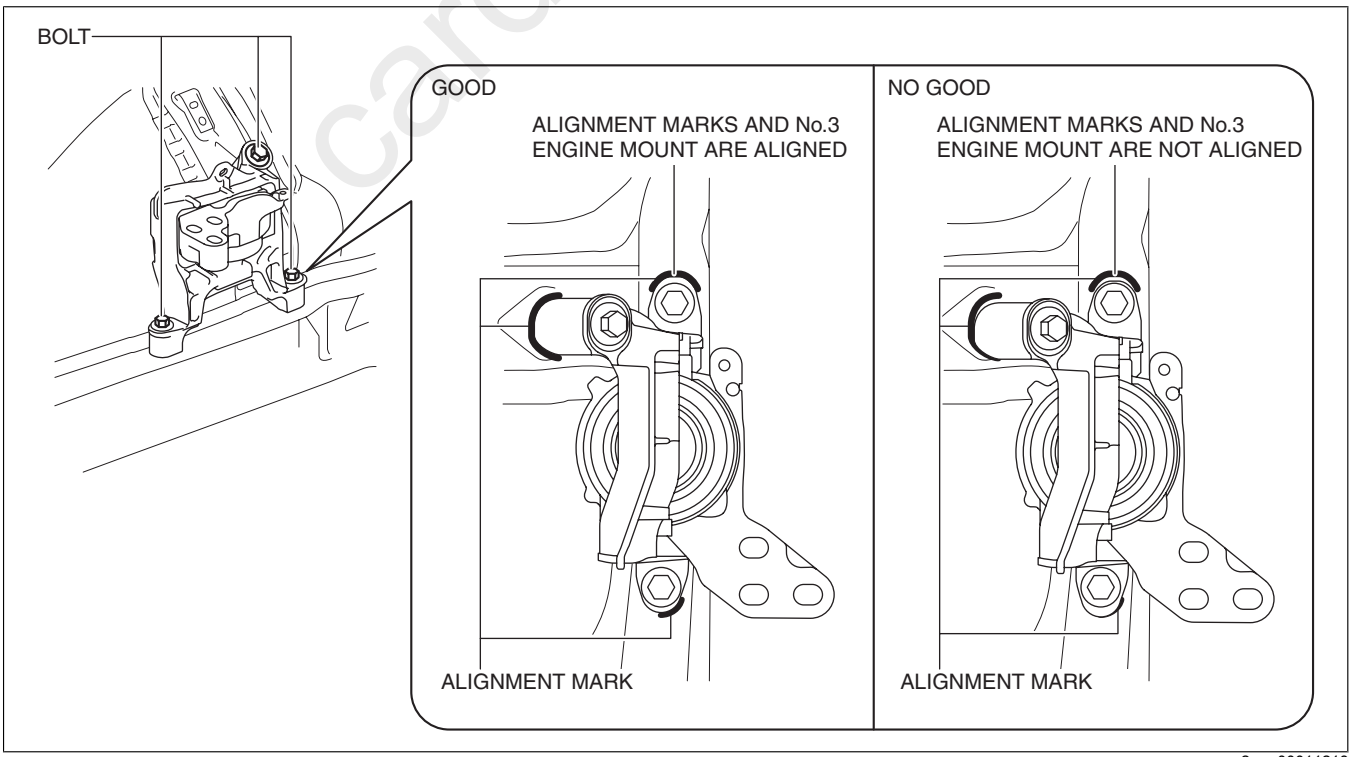


am2zzw00011218

(2) Temporarily tighten the nuts shown in the figure while aligning the alignment marks of the No.3 engine mount and nuts.


cardiagn.com

SKYACTIV-G 1.3, SKYACTIV-G 1.5 (with 4-1 exhaust system)

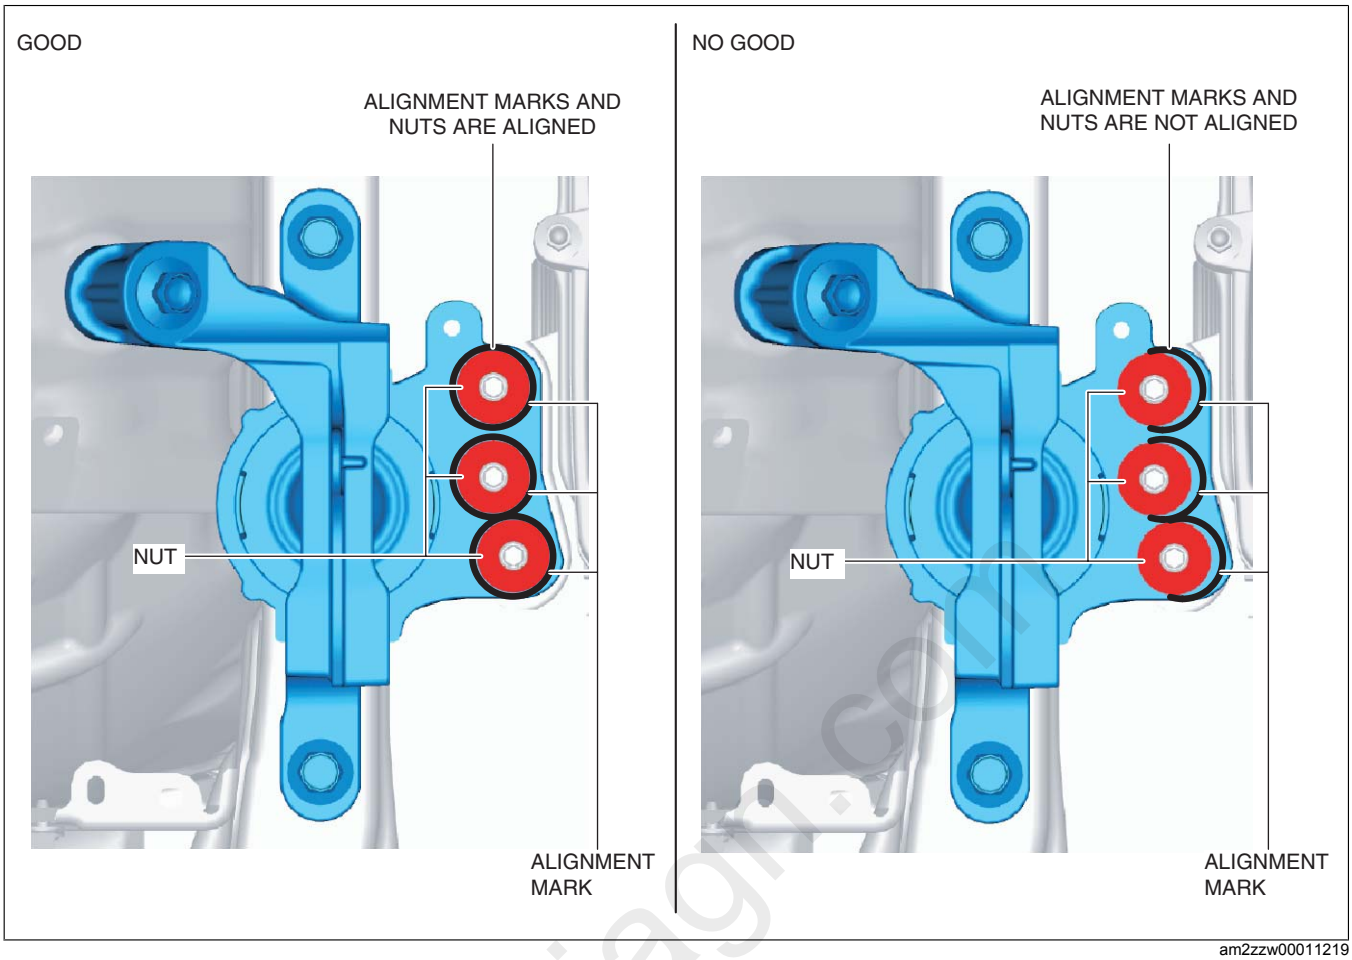

am2zzw00011219

SKYACTIV-G 1.5 (with 4-2-1 exhaust system)

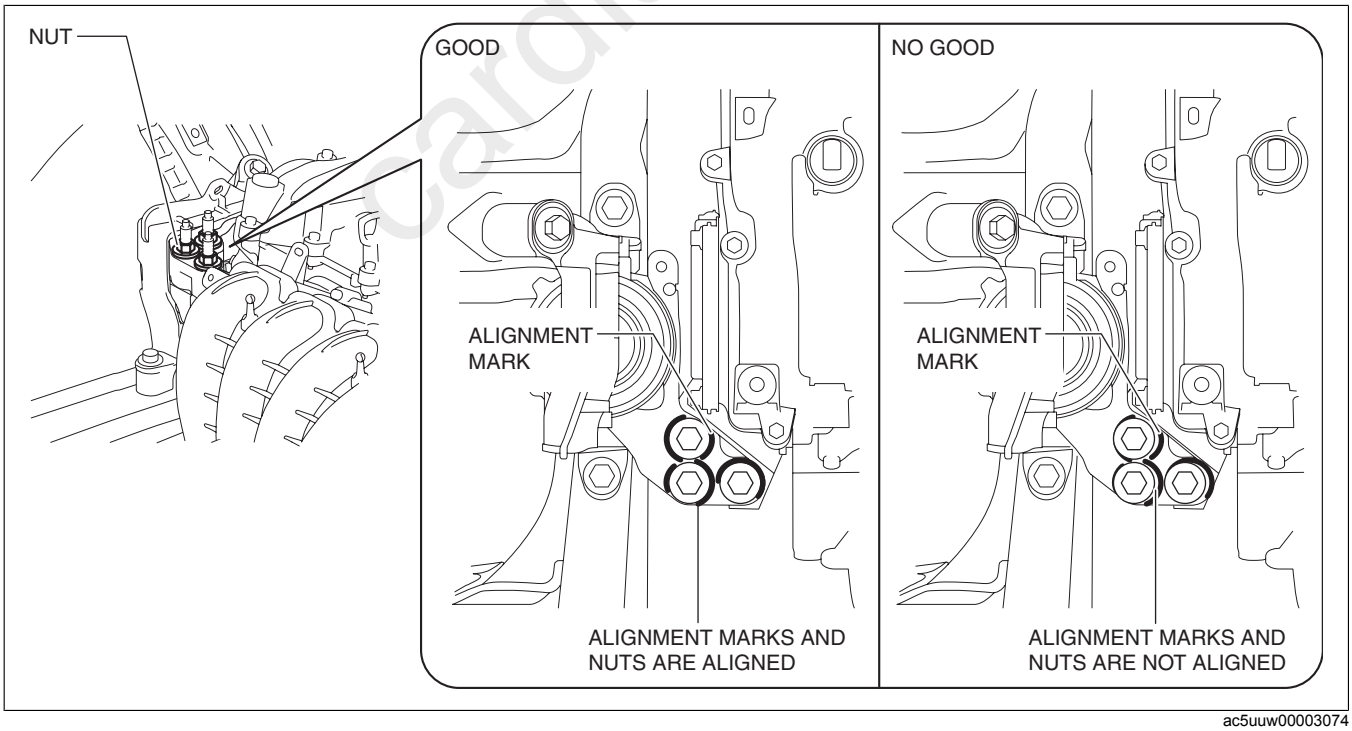

ac5uuw00003074


Note

- If the alignment marks are not aligned, align the alignment marks while slightly moving the engine and temporarily tighten the nuts.

cardiagn.com


3. Tighten the No.3 engine mount installation bolts and nuts in the order shown in the figure.

SKYACTIV-G 1.3, SKYACTIV-G 1.5 (with 4-1 exhaust system)

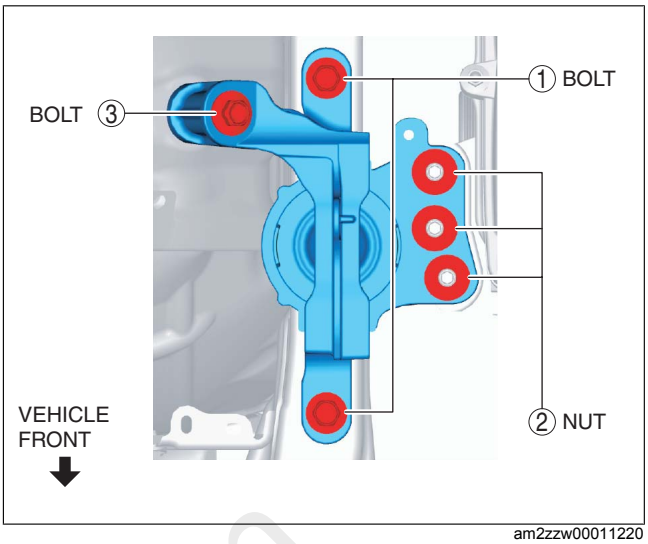

am2zzw00011220

SKYACTIV-G 1.5 (with 4-2-1 exhaust system)

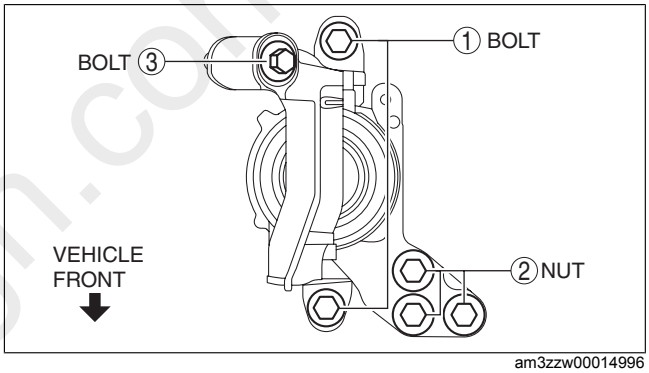

am3zzw00014996

Tightening torque

Installation position	Tightening torque
1	76—95 N·m {7.8—9.6 kgf·m, 57—70 ft·lbf}
2	82—95 N·m {8.4—9.6 kgf·m, 61—70 ft·lbf}
3	49—65 N·m {5.0—6.6 kgf·m, 37—47 ft·lbf}


4. Remove the engine lifter or garage jack.
5. Install in the reverse order of removal.

No.4 Engine Mount

Caution

- **Slots have been adopted for the No.4 engine mount bracket installation holes. If the No.4 engine mount bracket is deviated from the original position when installing the No.4 engine mount bracket, engine noise or vibration could increase. Before removing the No.4 engine mount bracket, place alignment marks on the No.4 engine mount bracket so that they can be assembled to the same positions as before removal.**


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the air cleaner, air hose and fresh air duct as a single unit. (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
3. Remove the battery tray and PCM component. (See BATTERY REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
4. Remove the DC-DC converter (i-ELOOP). (See DC-DC CONVERTER (i-ELOOP) REMOVAL/INSTALLATION [WITH i-ELOOP (SKYACTIV-G 1.3, SKYACTIV-G 1.5)].)
5. Remove the bolts shown in the figure and set the ground cable aside.
6. Remove in the order indicated in the table.
7. Install in the reverse order of removal.

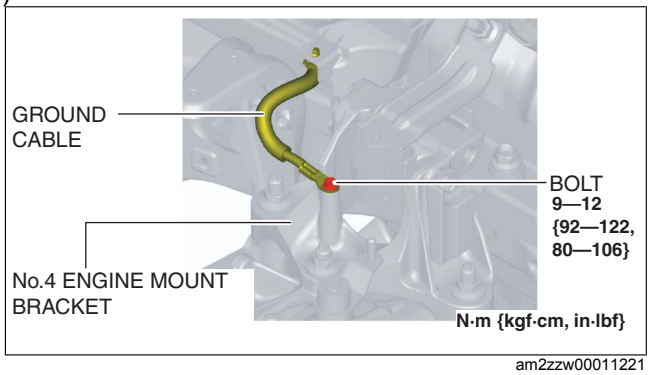

am2zzw00011221

Cardiagn.com


SKYACTIV-G 1.3, SKYACTIV-G 1.5 (with 4-1 exhaust system)

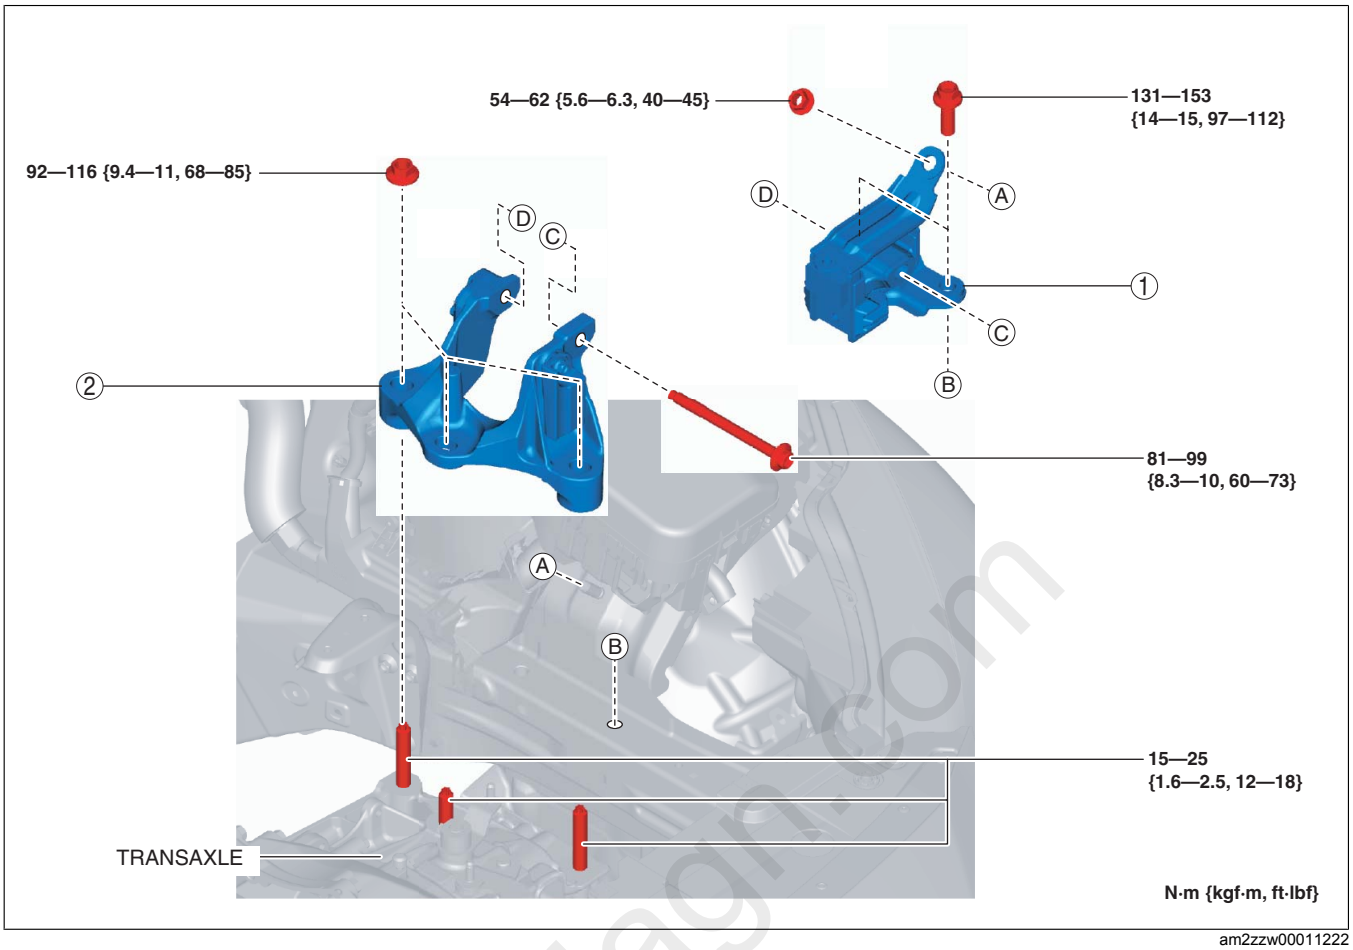

am2zzw00011222

cardiagn.com

SKYACTIV-G 1.5 (with 4-2-1 exhaust system)

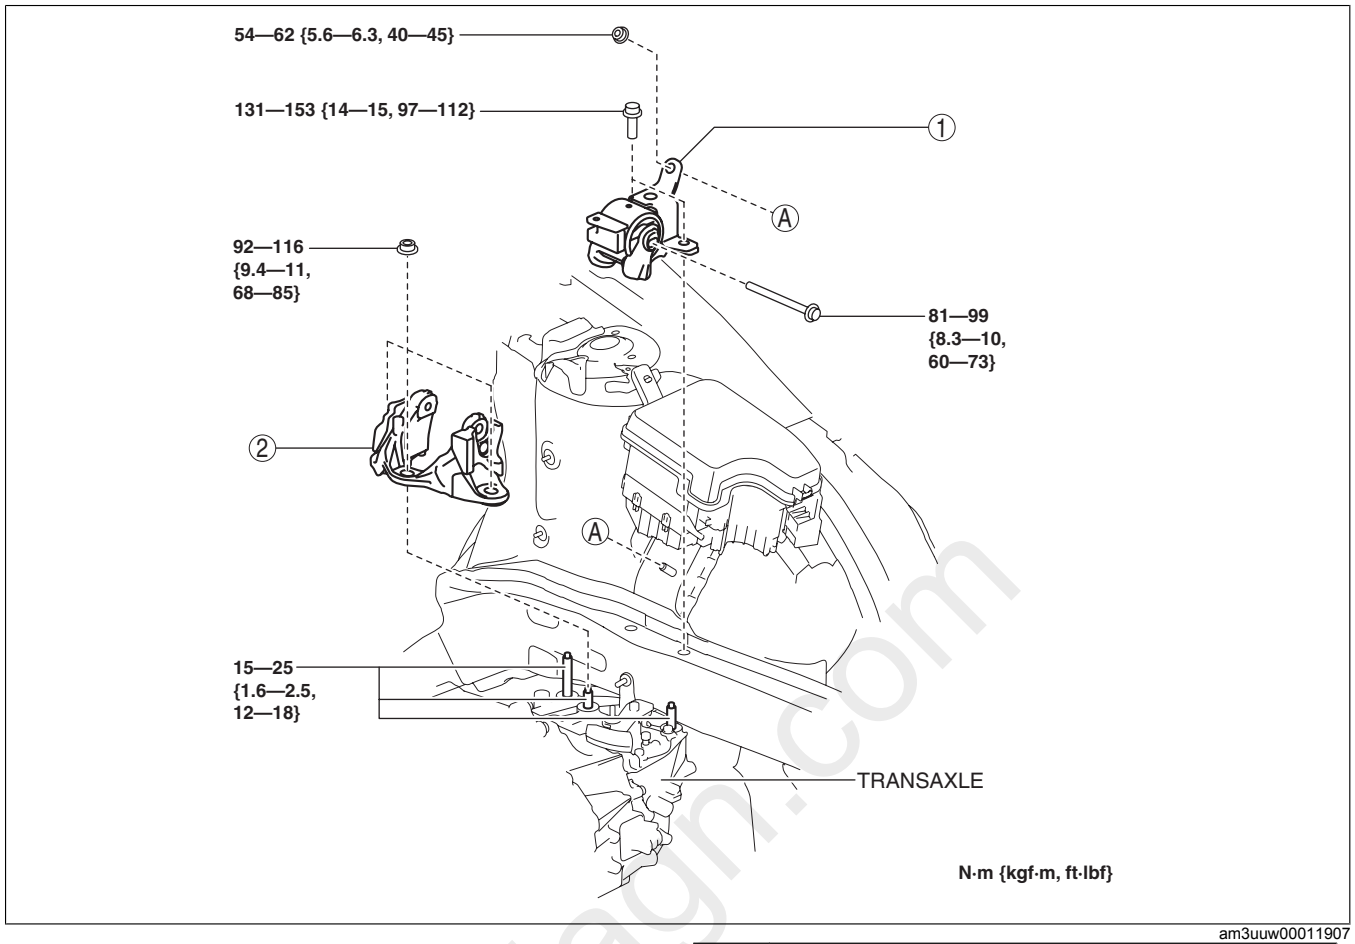

am3uuw00011907


1	No.4 engine mount rubber (See No.4 engine mount rubber removal note.) (See No.4 engine mount rubber installation note.)
2	No.4 engine mount bracket (See No.4 engine mount bracket removal note.) (See No.4 engine mount bracket installation note.)

No.4 engine mount rubber removal note

1. Set the front wiring harness protector aside. (See RELAY AND FUSE BLOCK REMOVAL/INSTALLATION)
2. Remove the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)

Caution

- **To prevent damage to the transaxle, support the transaxle using the following methods.**
  - **— MTX: Support the clutch housing using a batten of appropriate size.**

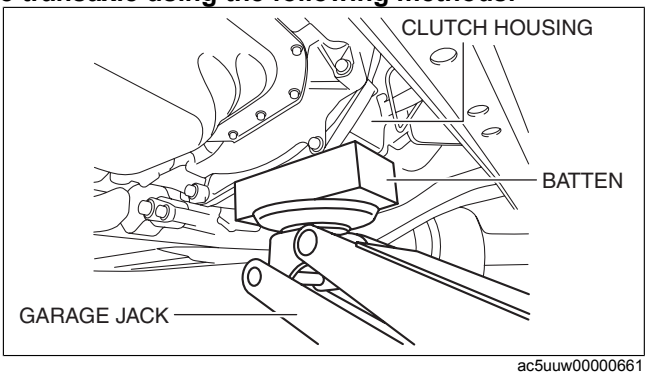


ac5uuw00000661

carlagn.com

— **ATX: Place rubber of appropriate size (approx. 20 mm {0.79 in} thickness) on a batten which is large enough to cover and support the oil pan.**

3. Before removing the No.4 engine mount rubber, support the transaxle using a commercially available engine lifter or garage jack.
4. Remove the No.4 engine mount rubber.

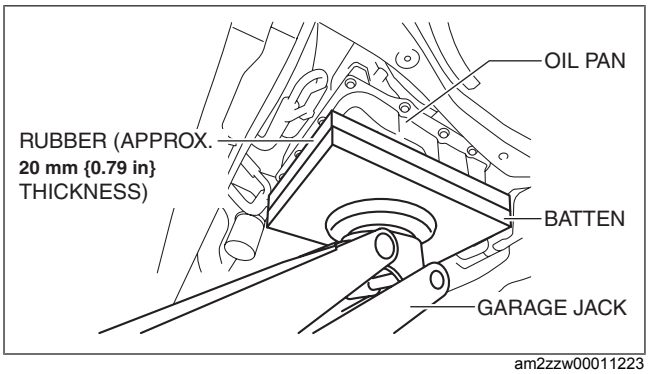


am2zzw00011223

No.4 engine mount bracket removal note

1. Place alignment marks on the locations shown in the figure so that they can be assembled to the same positions as before removal.

   Note
   - Paint so that the outline of the nut is framed on the bracket side.

2. Remove the No.4 engine mount bracket.

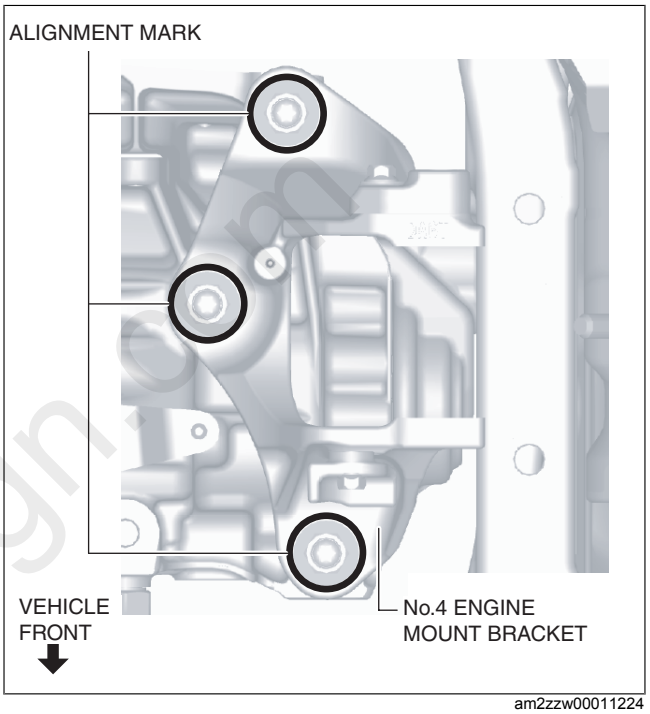

am2zzw00011224


No.4 engine mount bracket installation note

Note
- When replacing the No.4 engine mount bracket, place a mark at the same position as the one placed before removal.
- When loosening the No.4 engine mount bracket nut, the transaxle stud bolt may loosen.

1. Measure the projection of the transaxle stud bolts.

   Projection A of stud bolt No.1
   70.7—72.7 mm
   Projection B of stud bolt No.2
   40.0—42.0 mm
   Projection C of stud bolt No.3
   70.7—72.7 mm


   - If the projection amount is not within the range, adjust the projection amount of the stud bolt.

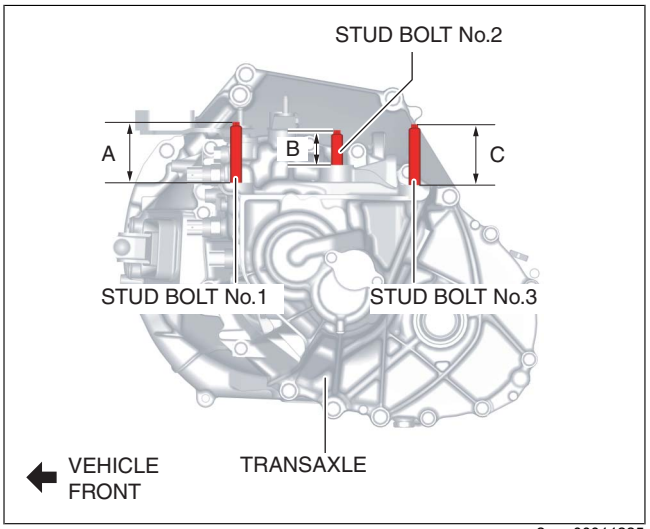

am2zzw00011225

cardiagn.com


2. Align the alignment marks on the No.4 engine mount bracket and nuts, and temporarily tighten the nuts shown in the figure.

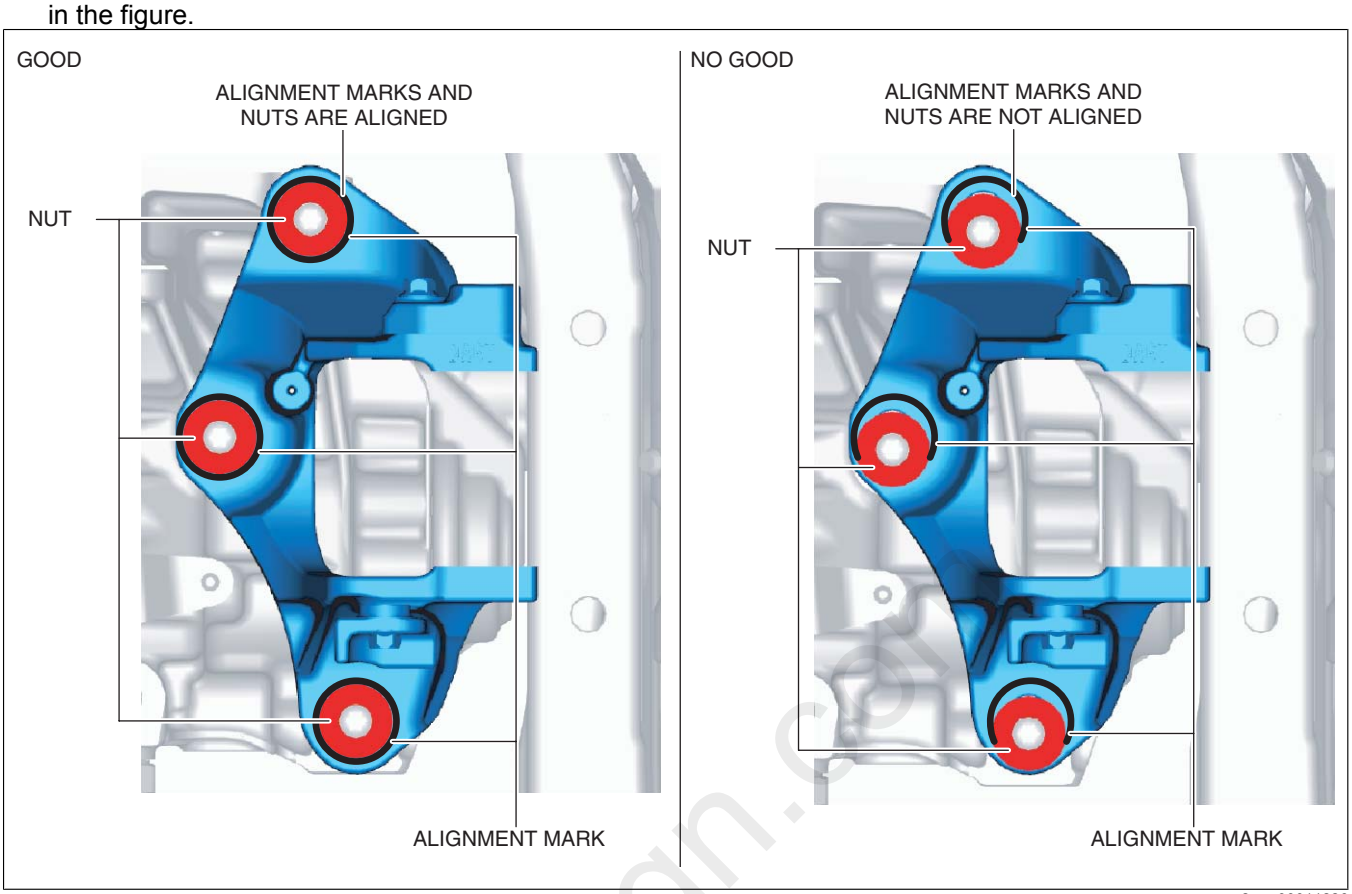

am2zzw00011226

3. Tighten the No.4 engine mount bracket installation nuts in the order shown in the figure.


Tightening torque
92—116 N·m {9.4—11 kgf·m, 68—85 ft·lbf}

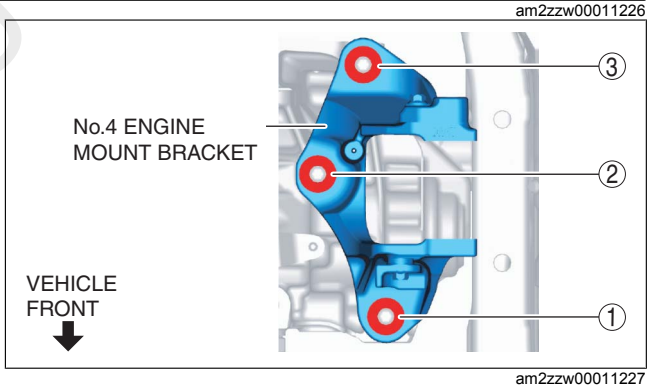

am2zzw00011227

No.4 engine mount rubber installation note

1. Install the No.4 engine mount rubber and temporarily tighten the bolts and nut shown in the figure.

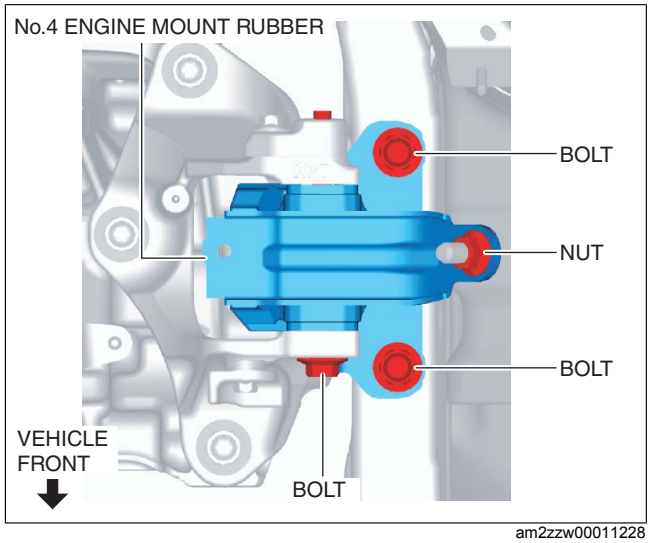

am2zzw00011228


cardiagn.com

2. Tighten the No.4 engine mount rubber installation bolts and nut in the order shown in the figure.

Tightening torque

Installation position	Tightening torque
1, 2	131—153 N·m {14—15 kgf·m, 97—112 ft·lbf}
3	54—62 N·m {5.6—6.3 kgf·m, 40—45 ft·lbf}
4	81—99 N·m {8.3—10 kgf·m, 60—73 ft·lbf}

3. Remove the engine lifter or garage jack.
4. Install in the reverse order of removal.

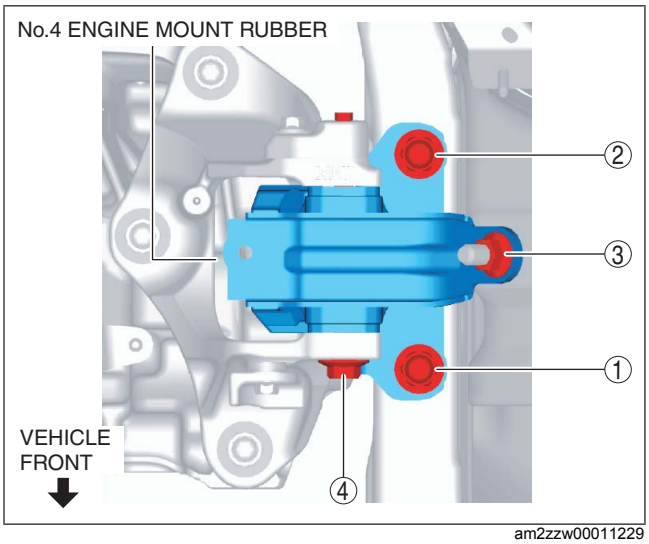

am2zzw00011229

cardiagn.com