## ELECTRIC VARIABLE VALVE TIMING MOTOR/DRIVER INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0110q3828100


**Warning**
- **A hot engine can cause severe burns. Turn off the engine and wait until it is cool before servicing.**

**Caution**
- **Do not disassemble the electric variable valve timing motor/driver because it is a precision unit.**
- **Do not apply excessive force when rotating the electric variable valve timing motor joint. If it is rotated with excessive force, the electric variable valve timing motor could be damaged.**

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the plug hole plate. (See PLUG HOLE PLATE REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
3. Remove the electric variable valve timing motor/driver. (See ELECTRIC VARIABLE VALVE TIMING MOTOR/ DRIVER REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
4. Rotate the electric variable valve timing motor joint to the left and right by your fingers and verify that it rotates smoothly in **15°** increments.

   **Note**
   - Rotate the joint area smoothly using only the tips of your fingers.
   - The electric variable valve timing motor joint moves in **15°** increments, and if the joint is moved **24** times, it rotates one full rotation.

   - If it does not rotate smoothly, replace the electric variable valve timing motor/driver.(See ELECTRIC VARIABLE VALVE TIMING MOTOR/DRIVER REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
5. Install in the reverse order of removal.

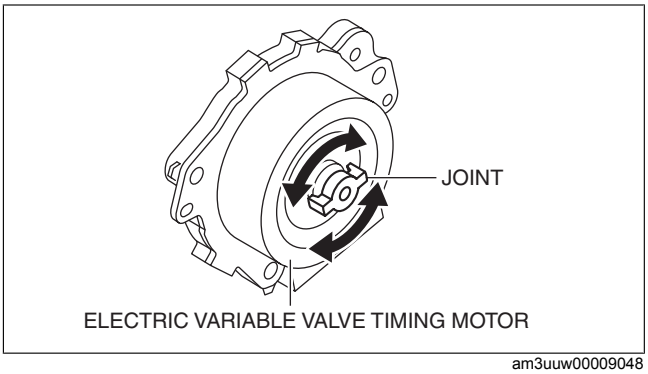


am3uuw00009048