OIL STRAINER [SKYACTIV-D 1.5]


id0111q2002400

Purpose, Function

- The oil strainer suctions the engine oil in the oil pan using the oil pump vacuum. The engine oil is filtered by the internal filter at that time.


Construction

- The oil strainer is located at the oil pump inlet.

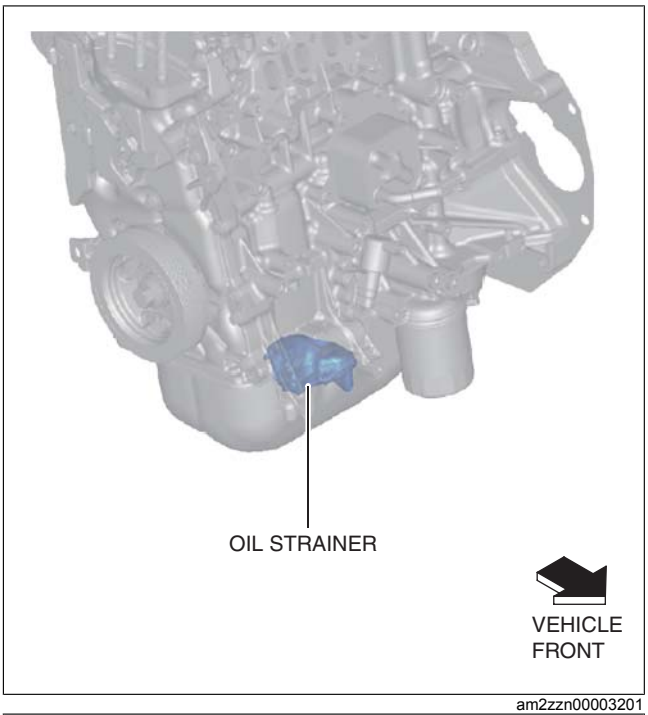

am2zzn00003201

- The filter is located in the oil strainer.

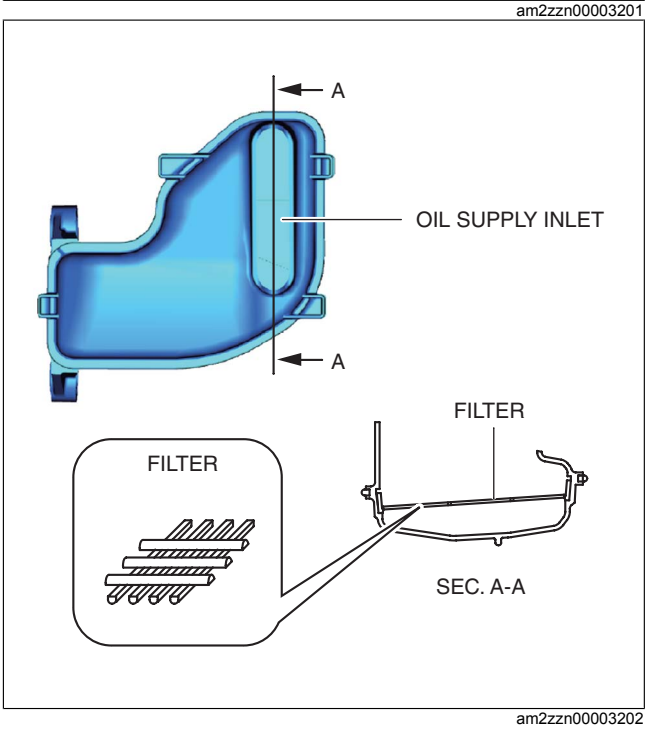

am2zzn00003202