ENGINE OIL SOLENOID VALVE [SKYACTIV-D 1.5]


id0111q2002700

Purpose, Function

- The engine oil solenoid valve switches the hydraulic transmission passage in accordance with the driving conditions and the oil pump drive resistance is reduced by controlling oil pump discharging pressure in two steps.


Construction

- The engine oil solenoid valve is located on the left side surface of the cylinder block.

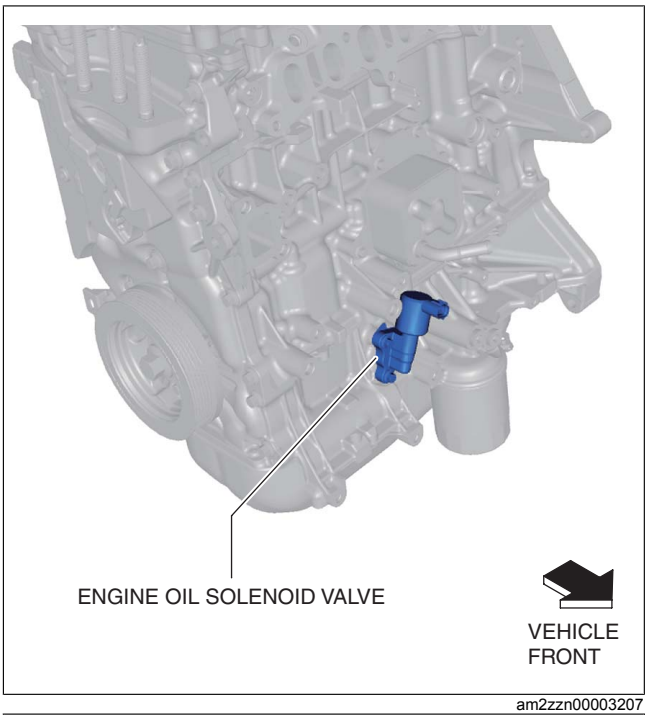

am2zzn00003207


- The engine oil solenoid valve has the following parts:

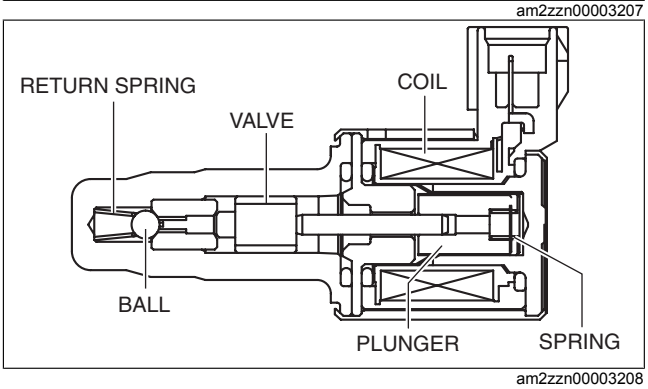

am2zzn00003208

Operation

- The oil passage in the solenoid valve is switched according to the control signal (duty signal) from the PCM.

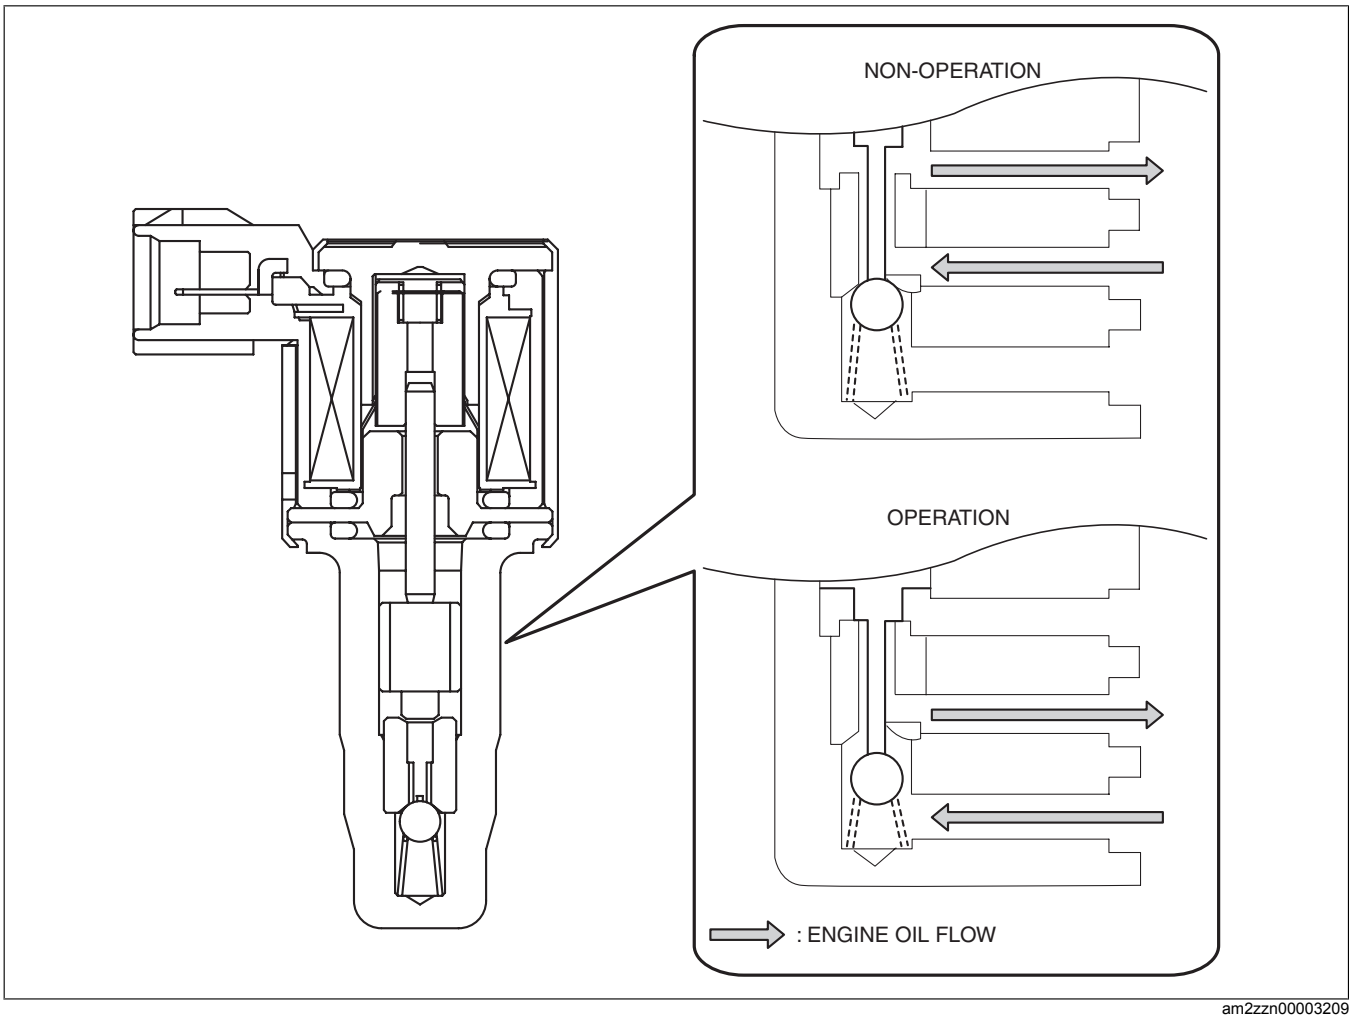

am2zzn00003209

Fail-safe

DTC No.	Fail-safe function
P06DB:00	• PCM restricts engine torque.
P06DC:00	