OIL SHOWER PIPE [SKYACTIV-D 1.5]


id0111q2002800

Purpose, Function

- The oil shower pipe injects engine oil to lubricate the contact points of the cam and rocker arm. As a result, wear resistance of sliding part is reduced.


Construction

- The oil shower pipe is located on the camshaft cap.
- The oil shower pipe has engine oil injection holes at the top of the camshaft.

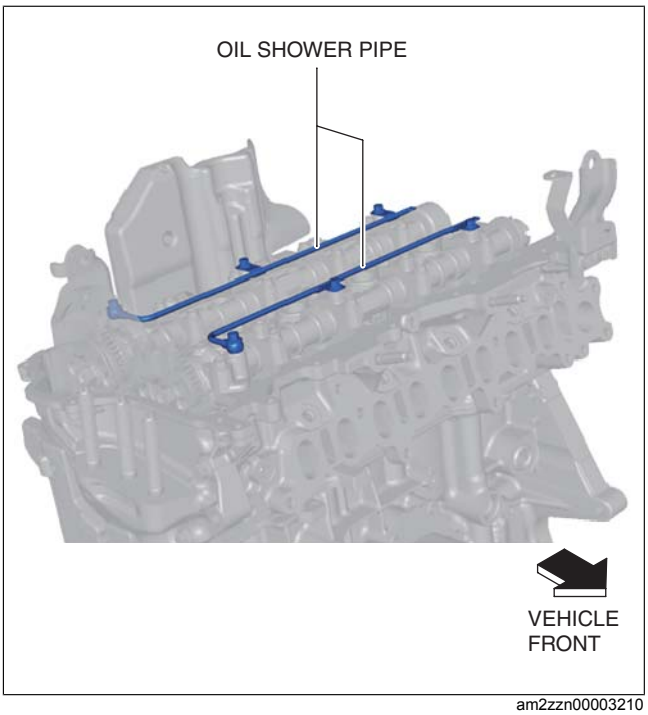


am2zzn00003210

- The oil shower pipe utilizes the engine oil injection holes at the top of the camshaft.

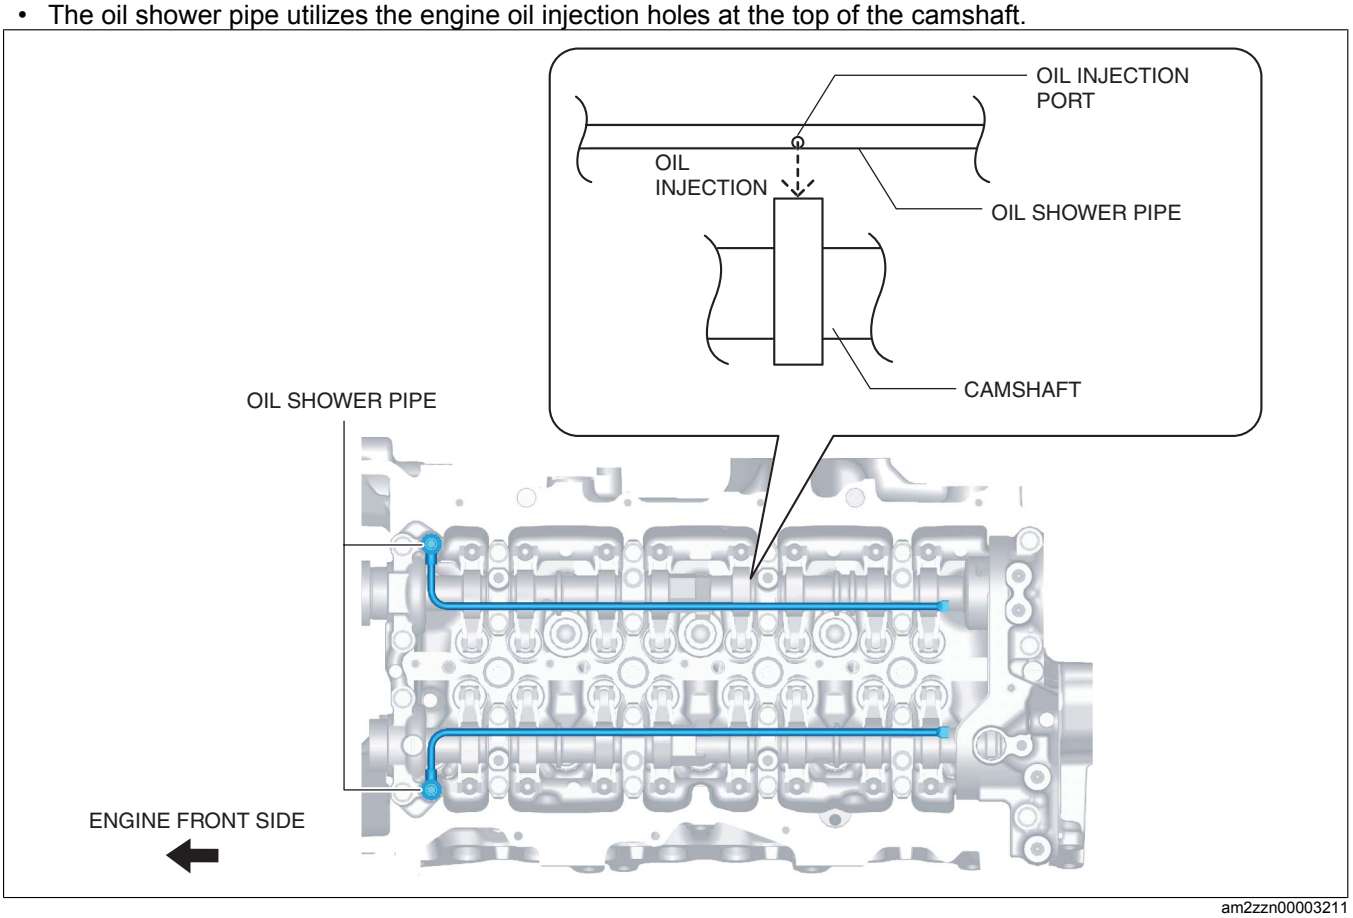

am2zzn00003211

- The oil shower pipe injects engine oil from the engine oil injection holes using hydraulic pressure.

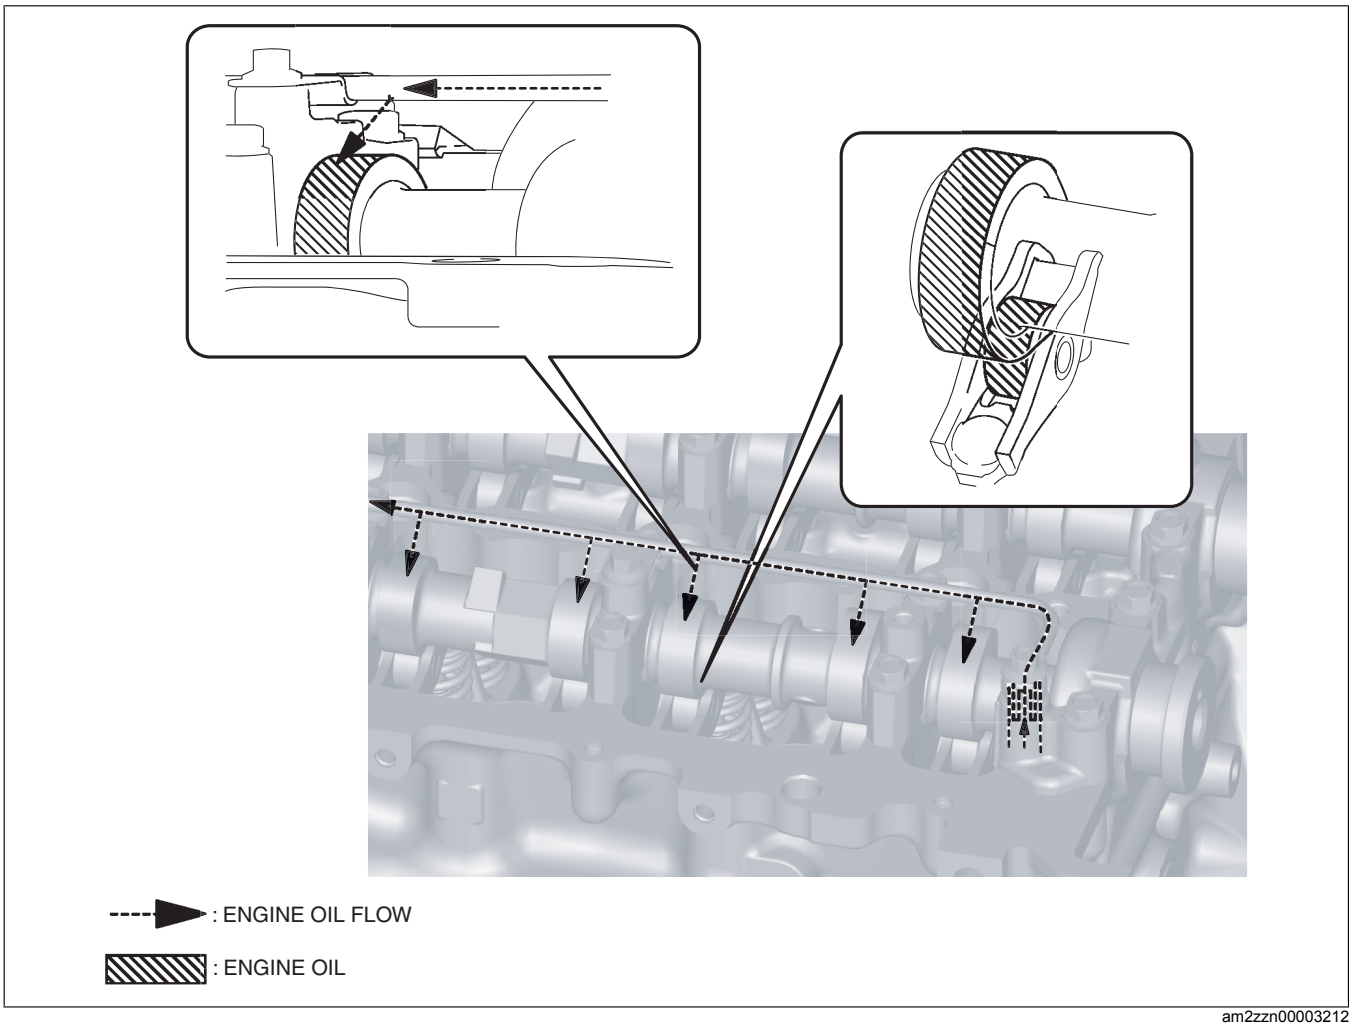

am2zzn00003212