OIL SHOWER PIPE [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0111q3002800

Outline


- Mechanical resistance loss has been reduced through structural changes to achieve optimum fuel economy. An oil shower pipe has been adopted as a part of this structural change.

Purpose, Function

- The oil shower pipe injects engine oil to lubricate the contact points of the cam and rocker arm. As a result, wear resistance of sliding part is reduced.


Construction

- The oil shower pipe is located on the camshaft cap.

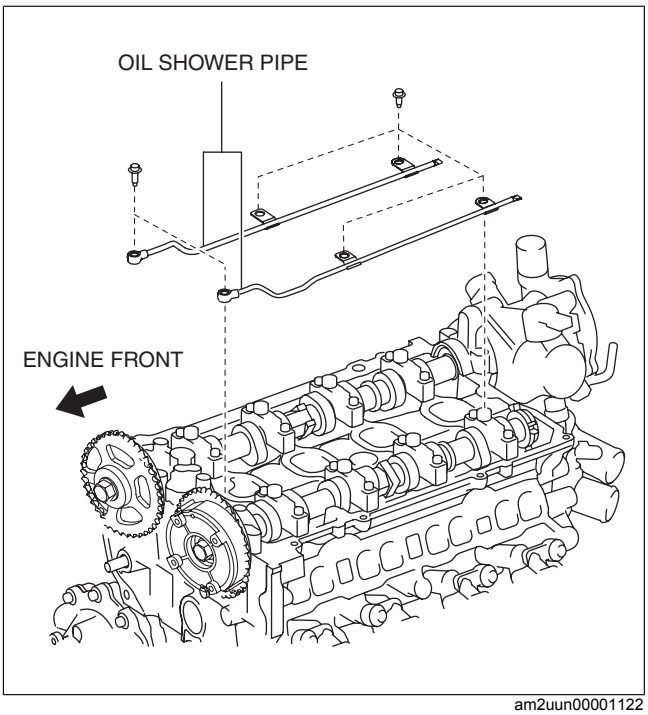

am2uun00001122


- The oil shower pipe utilizes the engine oil injection holes at the top of the camshaft.

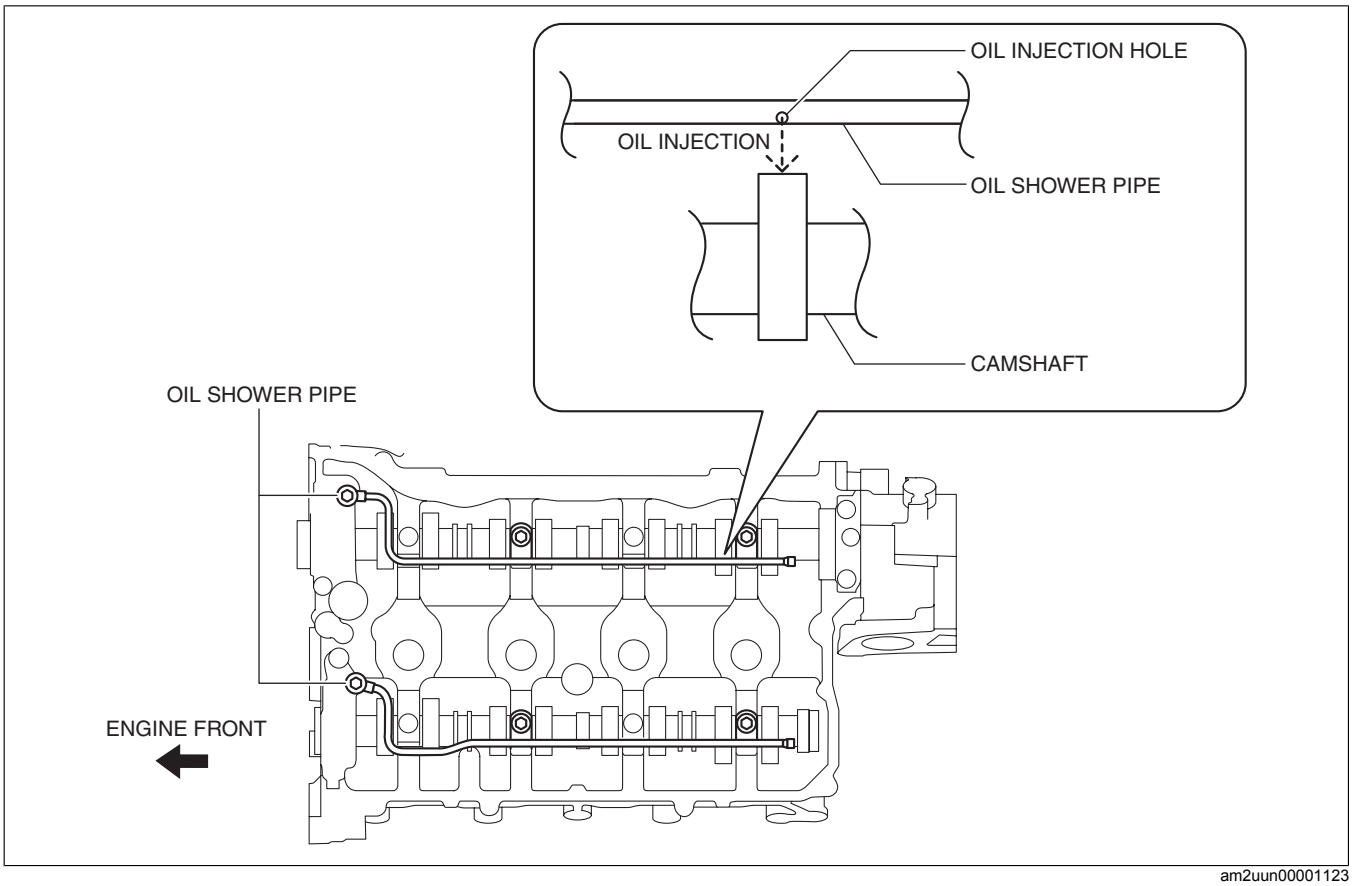

am2uun00001123

Operation

- The oil shower pipe injects engine oil from the engine oil injection holes using hydraulic pressure.

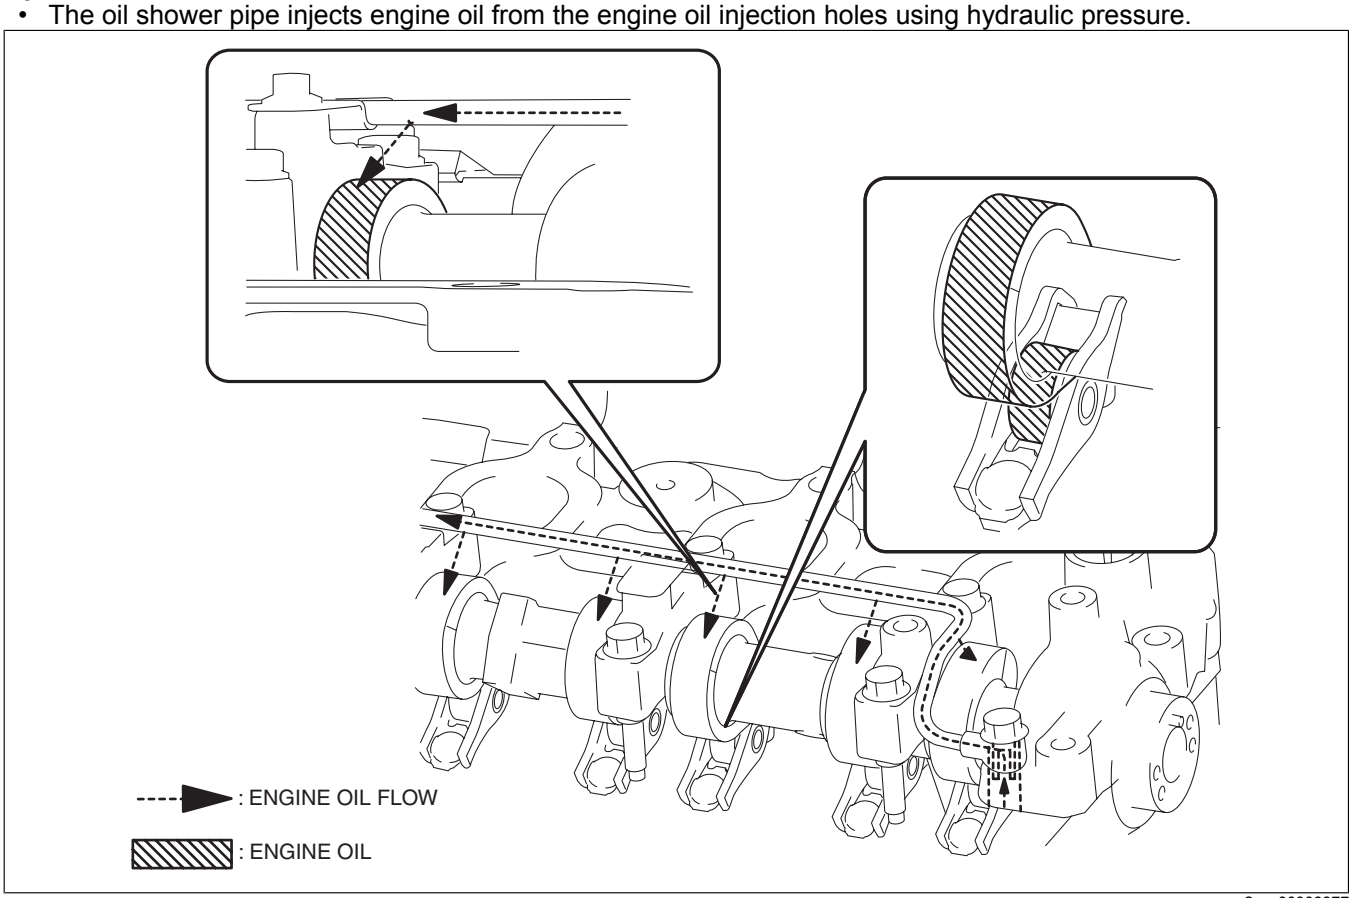

am2zzn00003877