ENGINE OIL SOLENOID VALVE REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5]


id0111q3003000

Warning

- **Hot engines and engine oil can cause severe burns. Turn off the engine and wait until it and the engine oil have cooled.**
- **A vehicle that is lifted but not securely supported on safety stands is dangerous. It can slip or fall, causing death or serious injury. Never work around or under a lifted vehicle if it is not securely supported on safety stands.**
- **Continuous exposure to USED engine oil has caused skin cancer in laboratory mice. Protect your skin by washing with soap and water immediately after working with engine oil.**

SKYACTIV-G 1.5 (with 4-2-1 exhaust system)

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)
3. Remove the splash shield (RH). (See SPLASH SHIELD REMOVAL/INSTALLATION.)
4. Remove in the order indicated in the table.
5. Install in the reverse order of removal.
6. Start the engine and confirm that there is no oil leakage.
   - If there is oil leakage, repair or replace the applicable part.

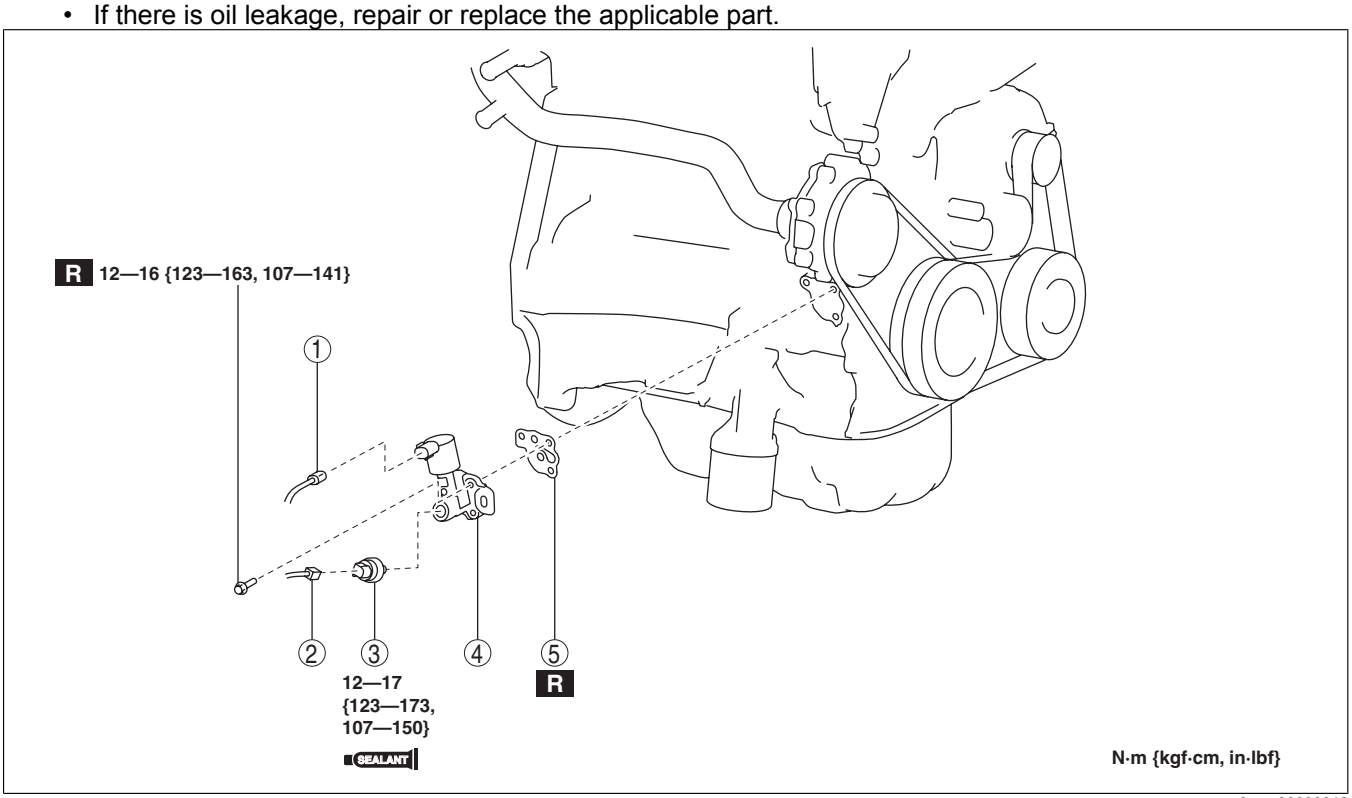

am3uuw00008912

1	Engine oil solenoid valve connector
2	Oil pressure switch connector
3	Oil pressure switch (See Oil Pressure Switch Installation Note.)
4	Engine oil solenoid valve (See Engine Oil Solenoid Valve Removal Note.) (See Engine Oil Solenoid Valve Installation Note.)
5	Gasket

Engine Oil Solenoid Valve Removal Note

1. Cover the area around the engine oil solenoid valve with a rag because a small amount of engine oil will leak from the engine oil solenoid valve installation area.

Caution


- **Do not let any leaked engine oil contact the adjacent water pump gasket and O-ring of the water inlet pipe. Otherwise, the gasket could swell causing a seal malfunction.**

Engine Oil Solenoid Valve Installation Note

1. After tightening the three bolts shown in the figure, tighten the first tightened bolt to the specified tightening torque again.

   Note
   - The tightening order for the three bolts is optional.

   Tightening torque
   12—16 N·m {123—163 kgf·cm, 107—141 in·lbf}

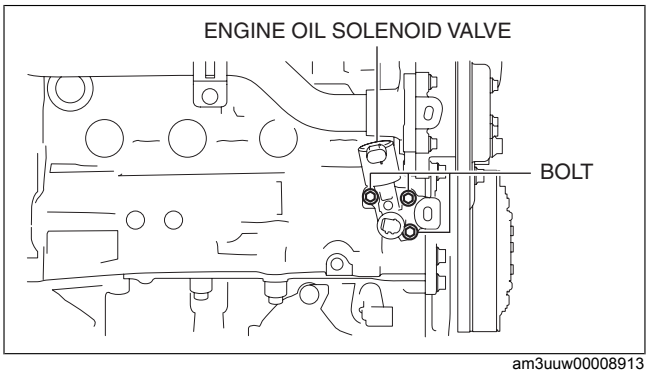

am3uuw00008913

Oil Pressure Switch Installation Note


Caution
- **Verify that there is no sealant between 1.7—2.7 mm {0.07—0.10 in} from the end of the oil pressure switch to prevent a possible operation malfunction.**

1. When reusing the oil pressure switch, apply silicone sealant (TB1207B or equivalent) to the threads of the oil pressure switch.

   Caution
   - **Install the oil pressure switch before the applied sealant starts to harden.**

2. Install the oil pressure switch.

   Tightening torque
   12—17 N·m {123—173 kgf·cm, 107—150 in·lbf}

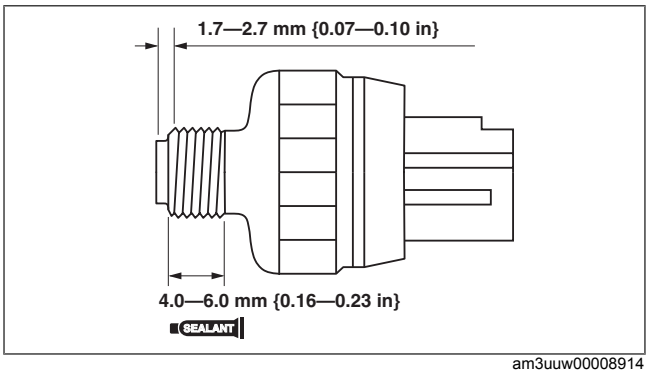

am3uuw00008914