
LUBRICATION SYSTEM LOCATION INDEX [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0111q3800100

SKYACTIV-G 1.3, SKYACTIV-G 1.5 (with 4-1 exhaust system)

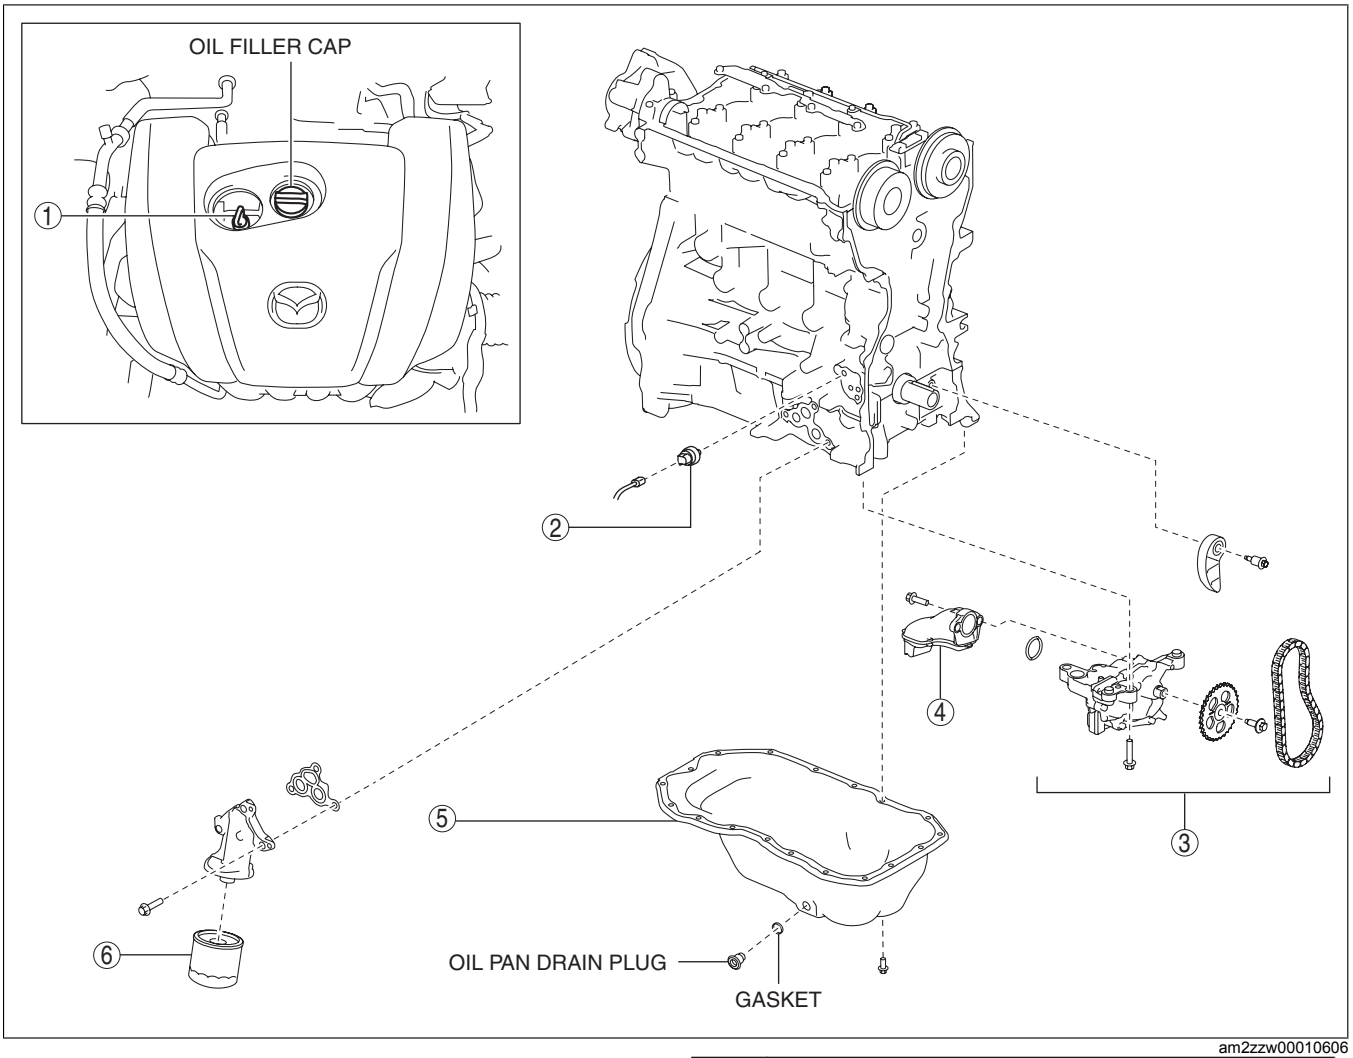


am2zzw00010606

1	Dipstick (See ENGINE OIL LEVEL INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See ENGINE OIL REPLACEMENT [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
2	Oil pressure switch (See OIL PRESSURE INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
3	Oil pump component (See OIL PUMP REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

4	Oil strainer (See OIL PUMP REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
5	Oil pan (See OIL PAN REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
6	Oil filter (See OIL FILTER REPLACEMENT [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

SKYACTIV-G 1.5 (with 4-2-1 exhaust system)

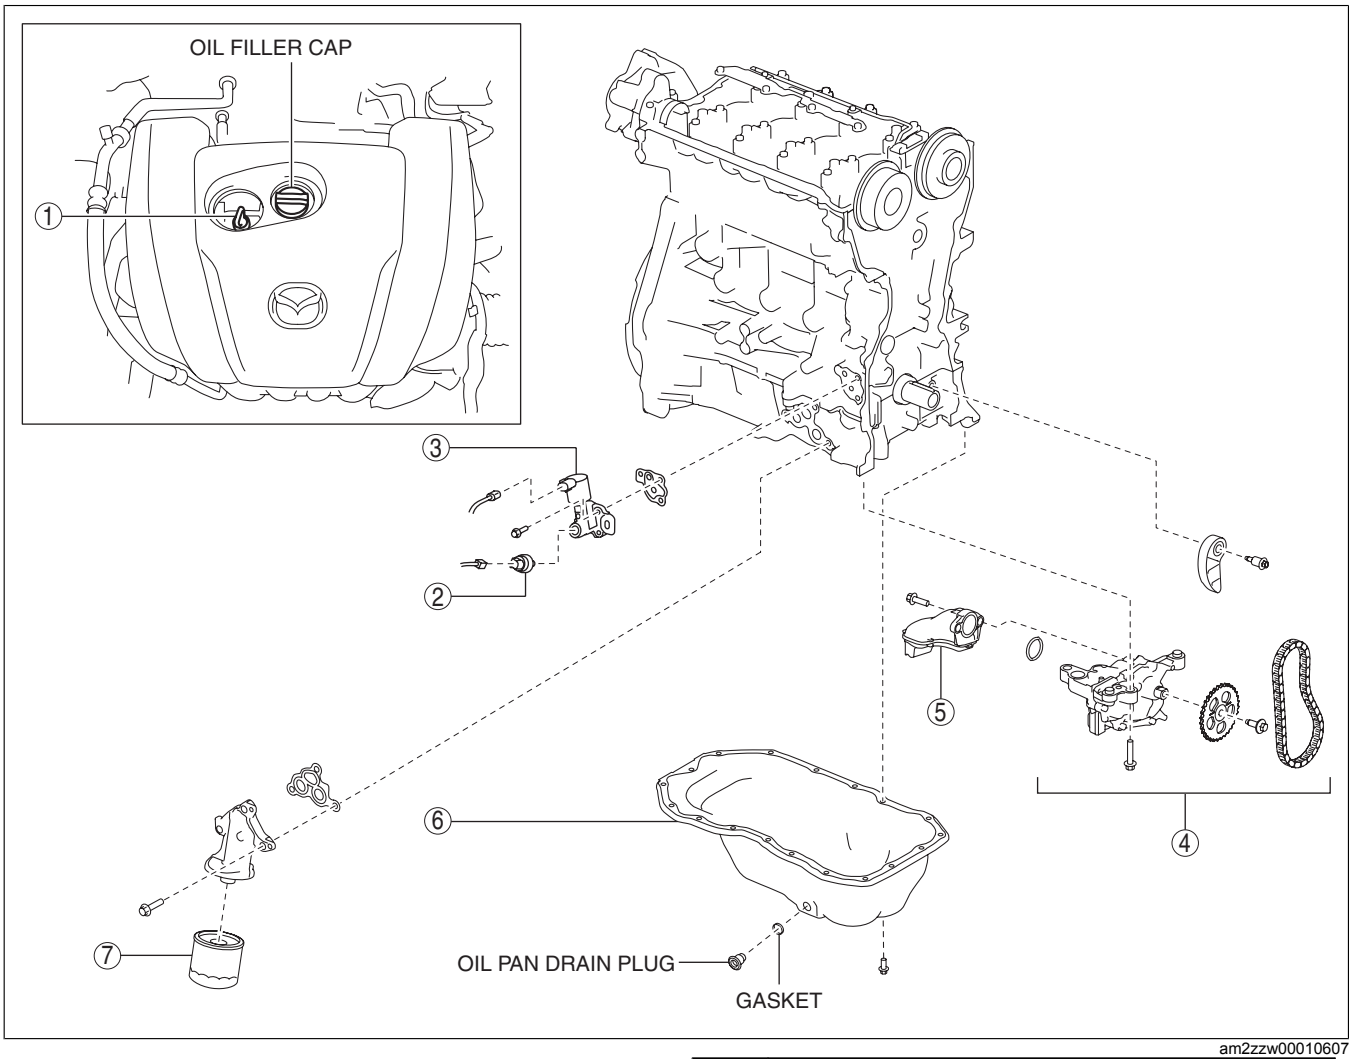

am2zzw00010607

1	Dipstick (See ENGINE OIL LEVEL INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See ENGINE OIL REPLACEMENT [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
2	Oil pressure switch (See OIL PRESSURE INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
3	Engine oil solenoid valve (See ENGINE OIL SOLENOID VALVE REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See ENGINE OIL SOLENOID VALVE INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

4	Oil pump component (See OIL PUMP REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
5	Oil strainer (See OIL PUMP REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
6	Oil pan (See OIL PAN REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
7	Oil filter (See OIL FILTER REPLACEMENT [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)