OIL PRESSURE INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0111q3800300


Warning

- **Hot engines and engine oil can cause severe burns. Turn off the engine and wait until it and the engine oil have cooled.**
- **A vehicle that is lifted but not securely supported on safety stands is dangerous. It can slip or fall, causing death or serious injury. Never work around or under a lifted vehicle if it is not securely supported on safety stands.**
- **Continuous exposure to USED engine oil has caused skin cancer in laboratory mice. Protect your skin by washing with soap and water immediately after working with engine oil.**

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)
3. Remove the oil pressure switch.

Note

- Use the following SSTs in this inspection.
  - **49 D019 908 (gauge)**
  - **49 D019 909 (hose)**
  - **49 D019 910 (adapter)**
  - **49 D019 911 (adapter)**

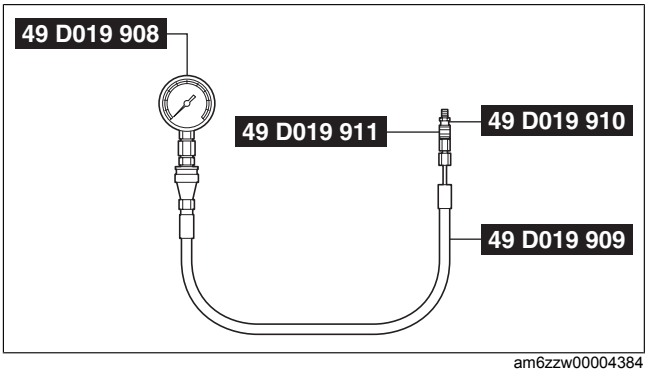

am6zzw00004384

4. Install the **SSTs** to the oil pressure switch installation hole using the following procedure.
   (1) Assemble **SSTs 49 D019 908**, **49 D019 909**, and **49 D019 911** outside of the engine compartment beforehand.
   (2) Install **SST 49 D019 910** to the oil pressure switch installation hole.
   (3) Install **SST 49 D019 911** to the **SST 49 D019 910**.
5. Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
6. Warm up the engine to normal operating temperature.
7. Run the engine at the specified speed, and note the gauge readings.
   - If not within the specification, inspect for the cause and repair or replace if necessary.

Note

- The oil pressure can vary with oil viscosity, temperature and engine speed.

Oil pressure (reference value) [SKYACTIV-G 1.3, SKYACTIV-G 1.5 (with 4-1 exhaust system)] [coolant temperature: 80—90 °C {176—194 °F}]

230—400 kPa {2.35—4.07 kgf/cm^2, 33.4—58.0 psi} [3,000 rpm]

Oil pressure (reference value) [SKYACTIV-G 1.5 (with 4-2-1 exhaust system)] [coolant temperature: 80—90 °C {176—194 °F}]

Lo: 110—175 kPa {1.13—1.78 kgf/cm^2, 16.0—25.3 psi} [1,500 rpm]

Hi: 300—430 kPa {3.06—4.38 kgf/cm^2, 43.6—62.3 psi} [4,500 rpm]

8. Stop the engine and wait until it is cools.
9. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
10. Remove the **SSTs.**

Caution


- **Verify that there is no sealant between 1.7—2.7 mm {0.07—0.10 in} from the end of the oil pressure switch to prevent a possible operation malfunction.**

11. When reusing the oil pressure switch, apply silicone sealant (TB1207B or equivalent) to the threads of the oil pressure switch.

    Caution
    - **Install the oil pressure switch before the applied sealant starts to harden.**

12. Install the oil pressure switch.

    Tightening torque
    12—17 N·m {123—173 kgf·cm, 107—150 in·lbf}

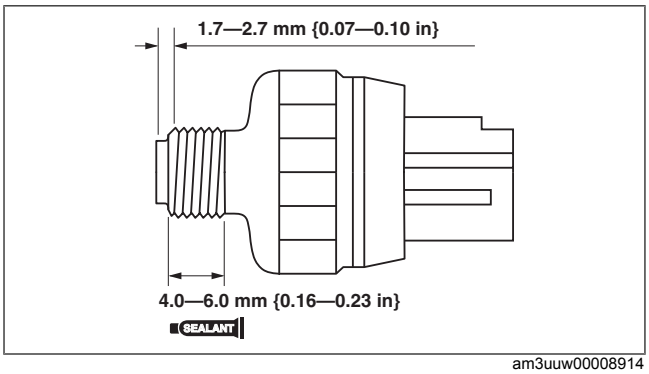

am3uuw00008914

13. Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
14. Start the engine and confirm that there is no oil leakage.
    - If there is oil leakage, repair or replace the applicable part.
15. Install the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)