OIL FILTER REPLACEMENT [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0111q3800700


Warning

- **Hot engines and engine oil can cause severe burns. Turn off the engine and wait until it and the engine oil have cooled.**
- **A vehicle that is lifted but not securely supported on safety stands is dangerous. It can slip or fall, causing death or serious injury. Never work around or under a lifted vehicle if it is not securely supported on safety stands.**
- **Continuous exposure to USED engine oil has caused skin cancer in laboratory mice. Protect your skin by washing with soap and water immediately after working with engine oil.**

Caution

- **If engine oil is spilled on the exhaust system, wipe it off completely. If you fail to wipe the spilled engine oil, it will produce fumes because of the heat.**

1. Remove the service hole cover (installed to front under cover No.2) used to remove the oil filter.

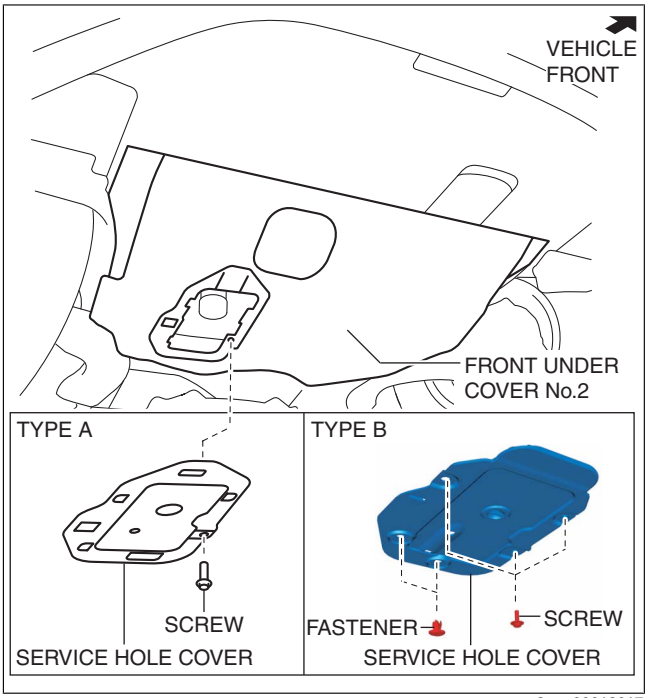


am2zzw00013017

2. Remove the oil filter using the commercially available, cup-type oil filter wrench (**67 mm {2.6 in} diameter, 14 sided**).
3. Use a clean rag to wipe off the mounting surface.
4. Apply clean engine oil to the O-ring of a new oil filter.
5. Tighten the oil filter according to the instructions on the package or side of the oil filter.

   Tightening torque (reference value)
   12—16 N·m {123—163 kgf·cm, 107—141 in·lbf}

6. Start the engine and confirm that there is no oil leakage.
   - If there is oil leakage, repair or replace the applicable part.
7. Inspect the oil level. (See ENGINE OIL LEVEL INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
8. Install the service hole cover.

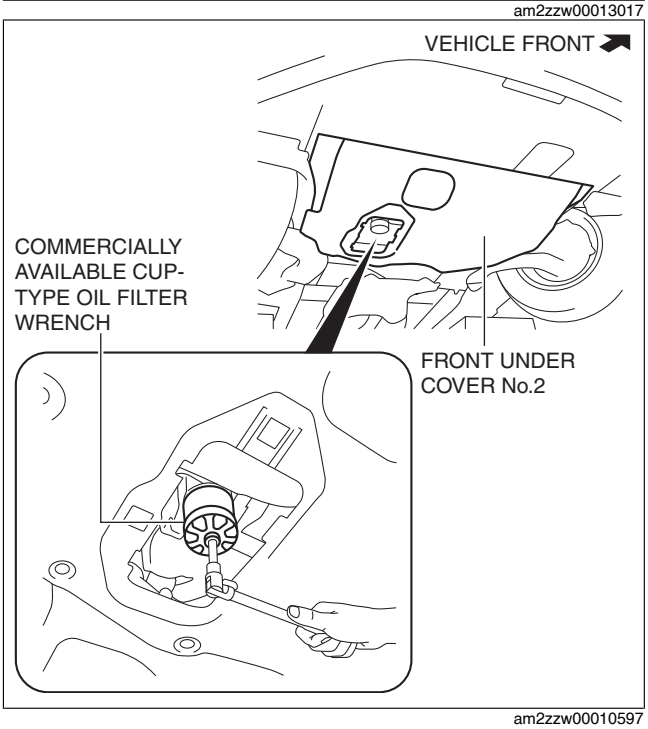

am2zzw00010597