ELECTRIC WATER PUMP [SKYACTIV-D 1.5]


id0112q2004000

Purpose, Function

- The electric water pump adjusts the cooling performance of the charge air cooler.


Construction

- The electric water pump is located underneath the intake manifold.

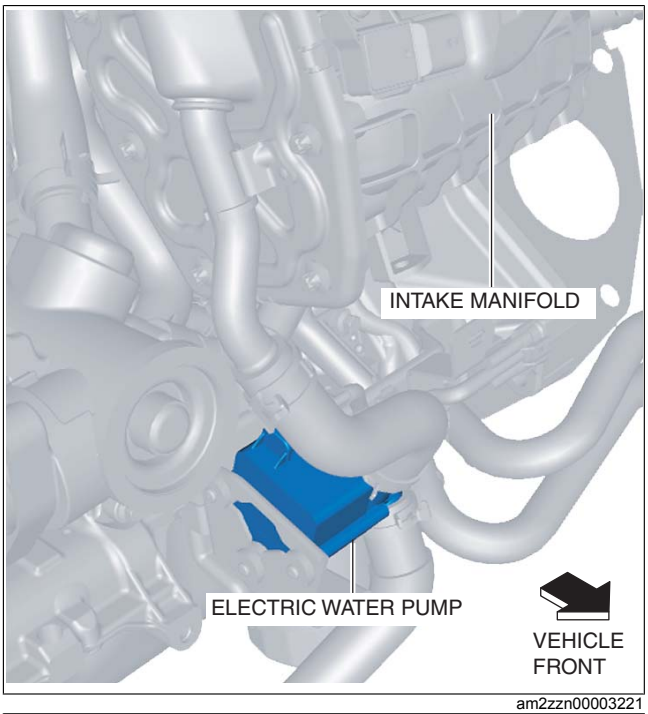

am2zzn00003221


- The electric water pump consists of the housing and impeller.

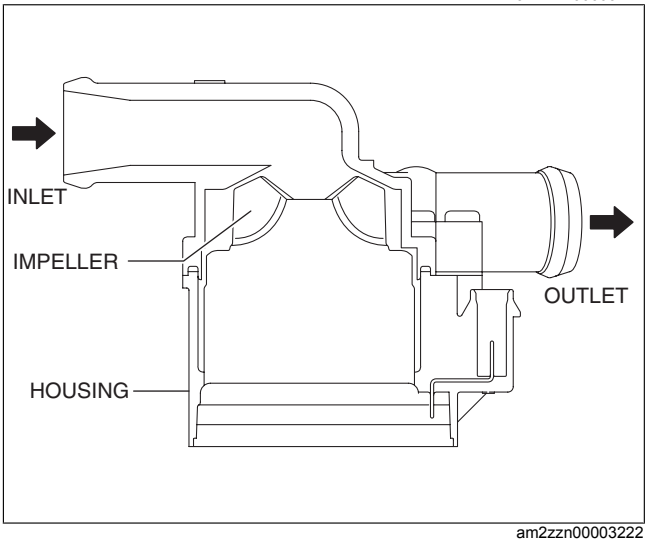

am2zzn00003222

Operation

- The electric water pump is driven by the control signal sent from the PCM to maintain an appropriate intake air temperature.
- For the electric water pump control, refer to the CONTROL SYSTEM.

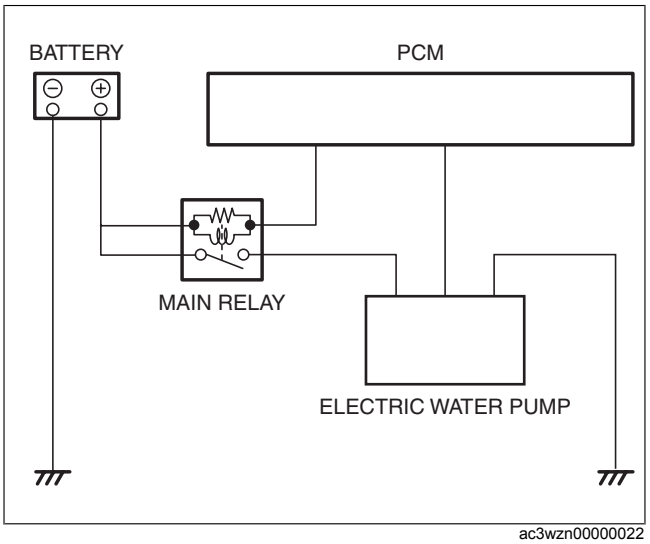

ac3wzn00000022

Fail-safe

DTC No.	Fail-safe function
P026A:00	• PCM restricts engine torque. • Restricts the upper limit of the engine speed. • Inhibits the EGR control. • Inhibits the auto diesel particulate filter regeneration control. • Inhibits the compulsory diesel particulate filter regeneration control. • Inhibits engine-stop by operating the i-stop function.