COOLANT CONTROL VALVE INSPECTION [SKYACTIV-D 1.5]

id0112q2224900

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Disconnect the coolant control valve connector. (See COOLANT CONTROL VALVE REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
3. Inspect for continuity between coolant control valve terminals B—C.
   - If there is continuity, the coolant control valve is normal.
   - If there is no continuity, replace the coolant control valve. (See COOLANT CONTROL VALVE REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)

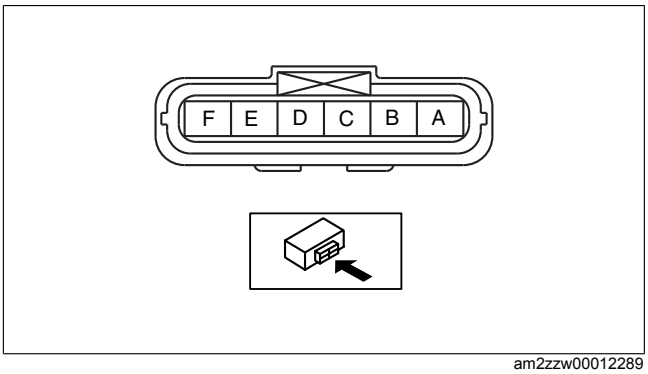

am2zzw00012289