
COOLING FAN MOTOR INSPECTION [SKYACTIV-D 1.5]

id0112q2801800

1. Verify that the battery is fully charged.
2. Remove the air cleaner. (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
3. Disconnect the cooling fan motor connector (2 terminals).
4. Connect the cooling fan motor connector (2 terminals) and a tester as shown in the figure.
5. Verify that cooling fan motor operates smoothly at the standard current.
   - If there is any malfunction, replace the cooling fan motor (See COOLING FAN MOTOR REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)

Cooling fan motor standard current
16.0—20.0 A [12 V]

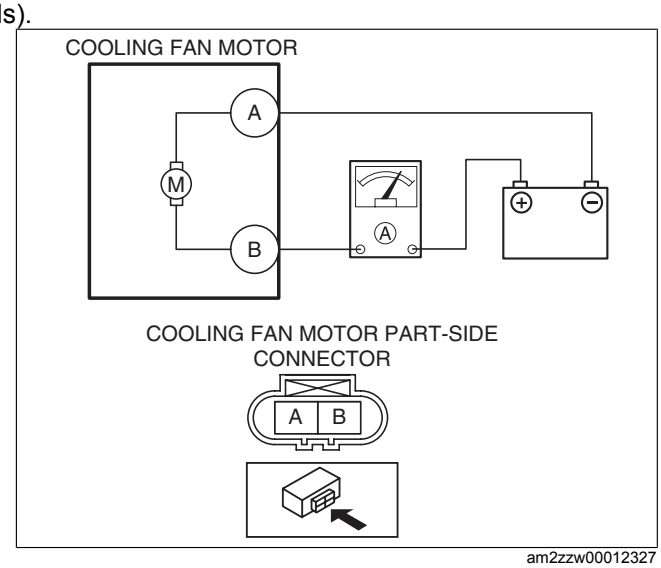

am2zzw00012327