
COOLING FAN MOTOR REMOVAL/INSTALLATION [SKYACTIV-D 1.5]

id0112q2801900

Warning

- **If the cooling system cap or the water-cooled charge air cooler reserve tank cap is removed when the engine is hot, steam and boiling water may be injected, causing severe burns or severe injury. Perform the removal of the cooling system cap and water-cooled charge air cooler reserve tank cap when the engine is cool.**
- **Turn off the engine and wait until it is cool. Even then, be very careful when removing the cap. Wrap a thick cloth around it and slowly turn it counterclockwise to the first stop. Step back while the pressure escapes.**
- **When you are sure all the pressure is gone, press down on the cap using the cloth, turn it, and remove it.**

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Drain the engine coolant. (See ENGINE COOLANT REPLACEMENT [SKYACTIV-D 1.5].)
3. Remove the engine cover. (See ENGINE COVER REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
4. Remove the air cleaner and fresh air duct component. (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
5. Remove the coolant reserve tank. (See COOLANT RESERVE TANK REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
6. Remove in the order indicated in the table.
7. Install in the reverse order of removal.
8. Refill the engine coolant. (See ENGINE COOLANT REPLACEMENT [SKYACTIV-D 1.5].)
9. Inspect for engine coolant leakage. (See ENGINE COOLANT LEAKAGE INSPECTION [SKYACTIV-D 1.5].)

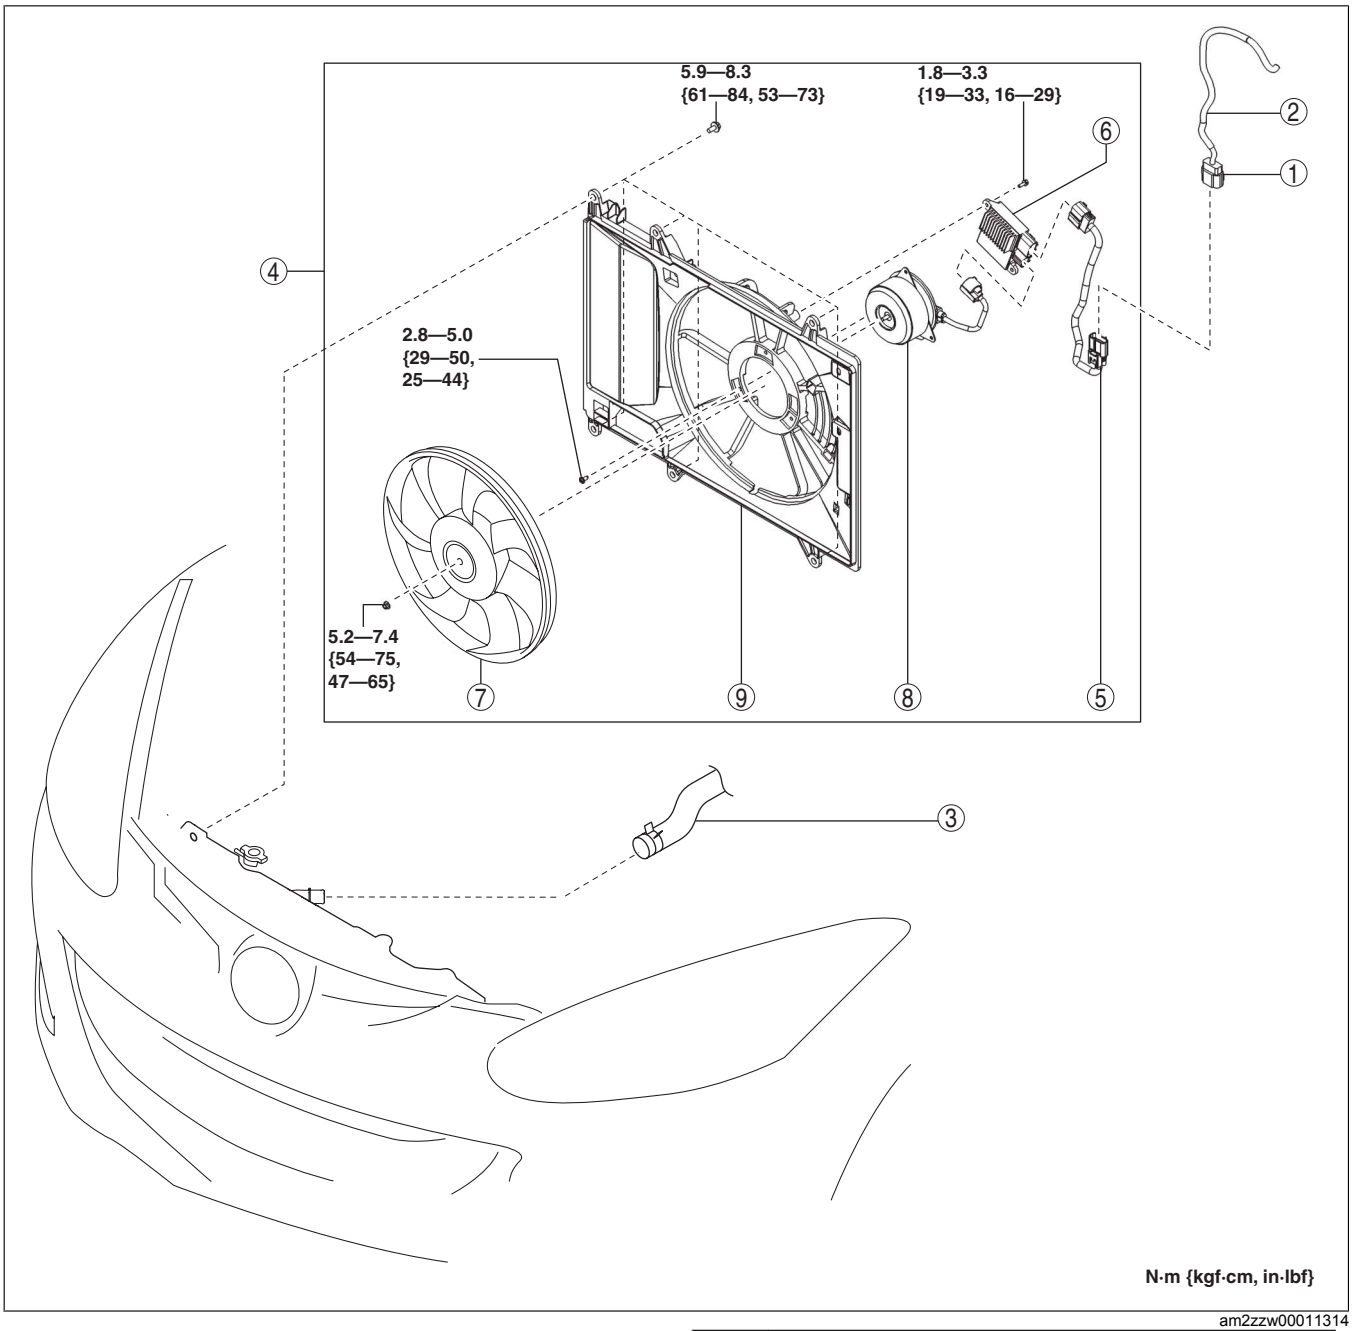


am2zzw00011314

1	Fan control module connector
2	Wiring harness
3	Upper radiator hose
4	Cooling fan component (See Cooling Fan Component Removal Note.)
5	Wiring harness

6	Fan control module
7	Cooling fan
8	Cooling fan motor
9	Radiator cowling

Cooling Fan Component Removal Note

1. Remove the cooling fan component from above the engine compartment.

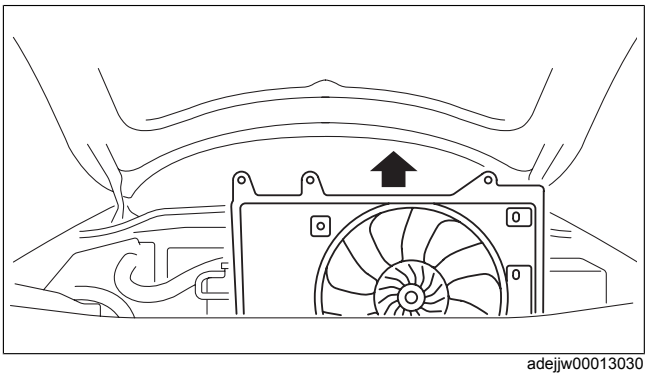

adejjw00013030