
COOLANT RESERVE TANK REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0112q3801000

1. Remove in the order indicated in the table.
2. Install in the reverse order of removal.


1	Hose
2	Coolant reserve tank (See Coolant Reserve Tank Installation Note.)

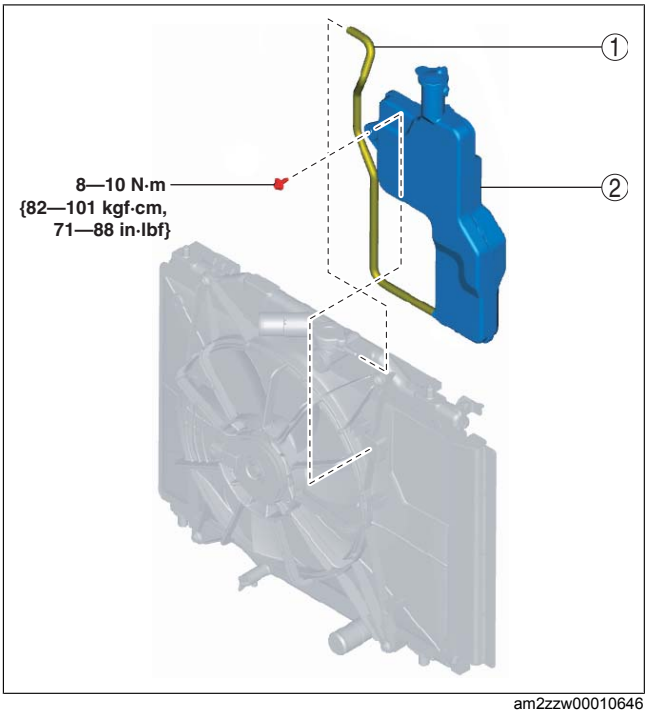

am2zzw00010646

Coolant Reserve Tank Installation Note

1. Insert the projection on the lower side of the coolant reserve tank into the insertion hole of the radiator cowling, then tighten the installation bolt.

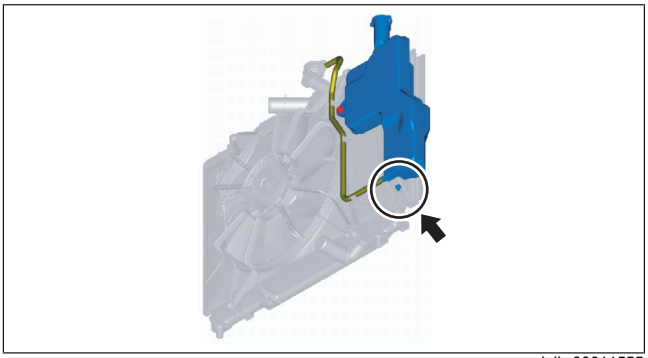

adejjw00011555