THROTTLE BODY [SKYACTIV-G 1.3, SKYACTIV-G 1.5]


id0113q1003600

Purpose, Function

- The throttle body opens/closes the throttle valve to adjust the amount of air supplied to the cylinders.
- Opens/closes the throttle valve according to the control signal from the PCM.


Construction

- The throttle body is located on the intake manifold.

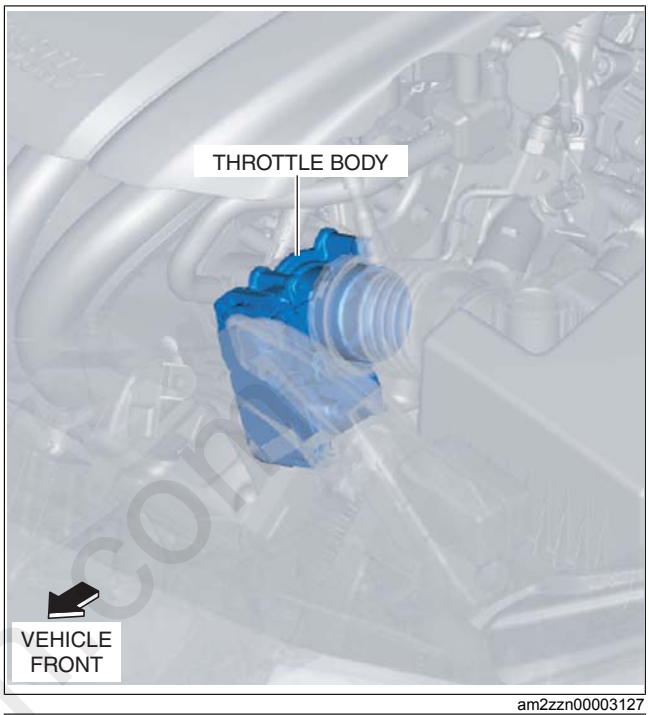

am2zzn00003127

- The throttle body consists of a throttle valve, throttle valve actuator, and throttle position sensor.
- For the throttle position sensor, refer to CONTROL SYSTEM. (See THROTTLE POSITION (TP) SENSOR [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

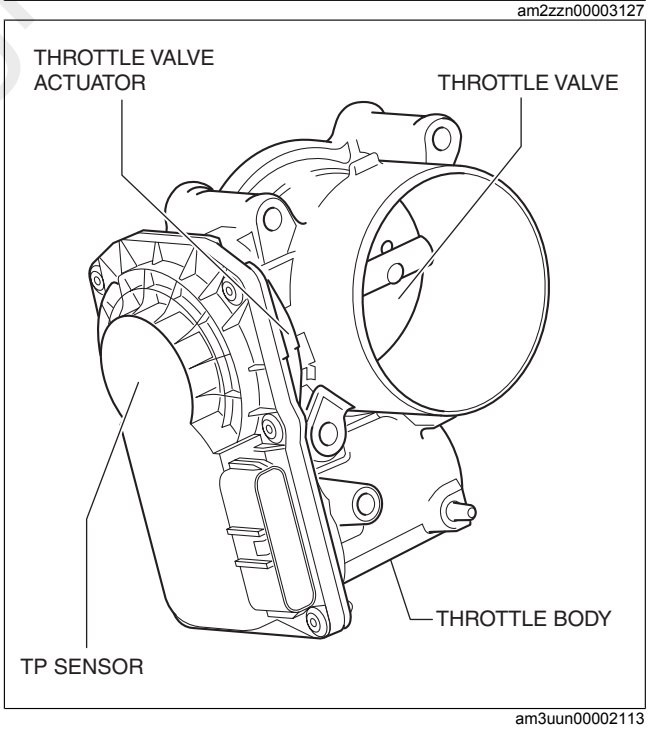


am3uun00002113

cardiagn.com

Operation

- The throttle valve actuator opens/closes the throttle valve according to the control signal from the PCM. If there is a malfunction in the throttle valve actuator, the throttle valve is opened approx. 8 degrees by the return spring in the throttle body.
- For the drive-by-wire control, refer to CONTROL SYSTEM. (See DRIVE-BY-WIRE CONTROL [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

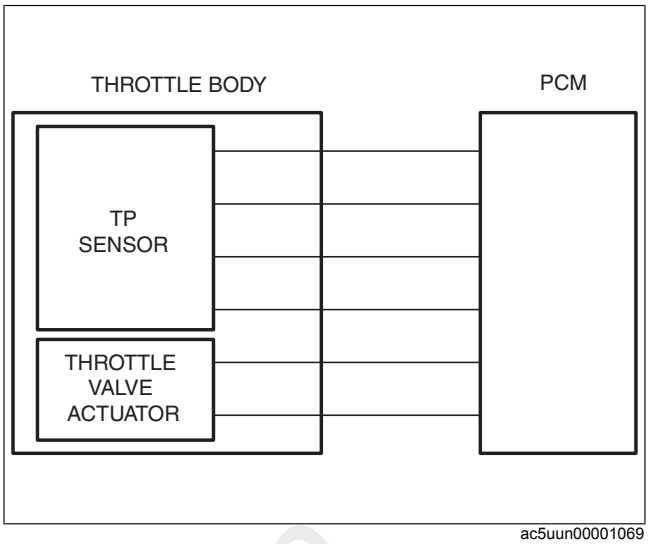

ac5uun00001069

Fail-safe

DTC	Fail-safe
P2101:00	• Stops the idle air control. • Stops the drive-by-wire control and sets to a throttle valve opening angle necessary for minimum driveability.
P2107:00	
P2110:00	
P2112:00	
P2119:00	• Restricts the upper limit of the engine speed.

cardiagn.com