
INTAKE-AIR SYSTEM LOCATION INDEX [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0113q1801700

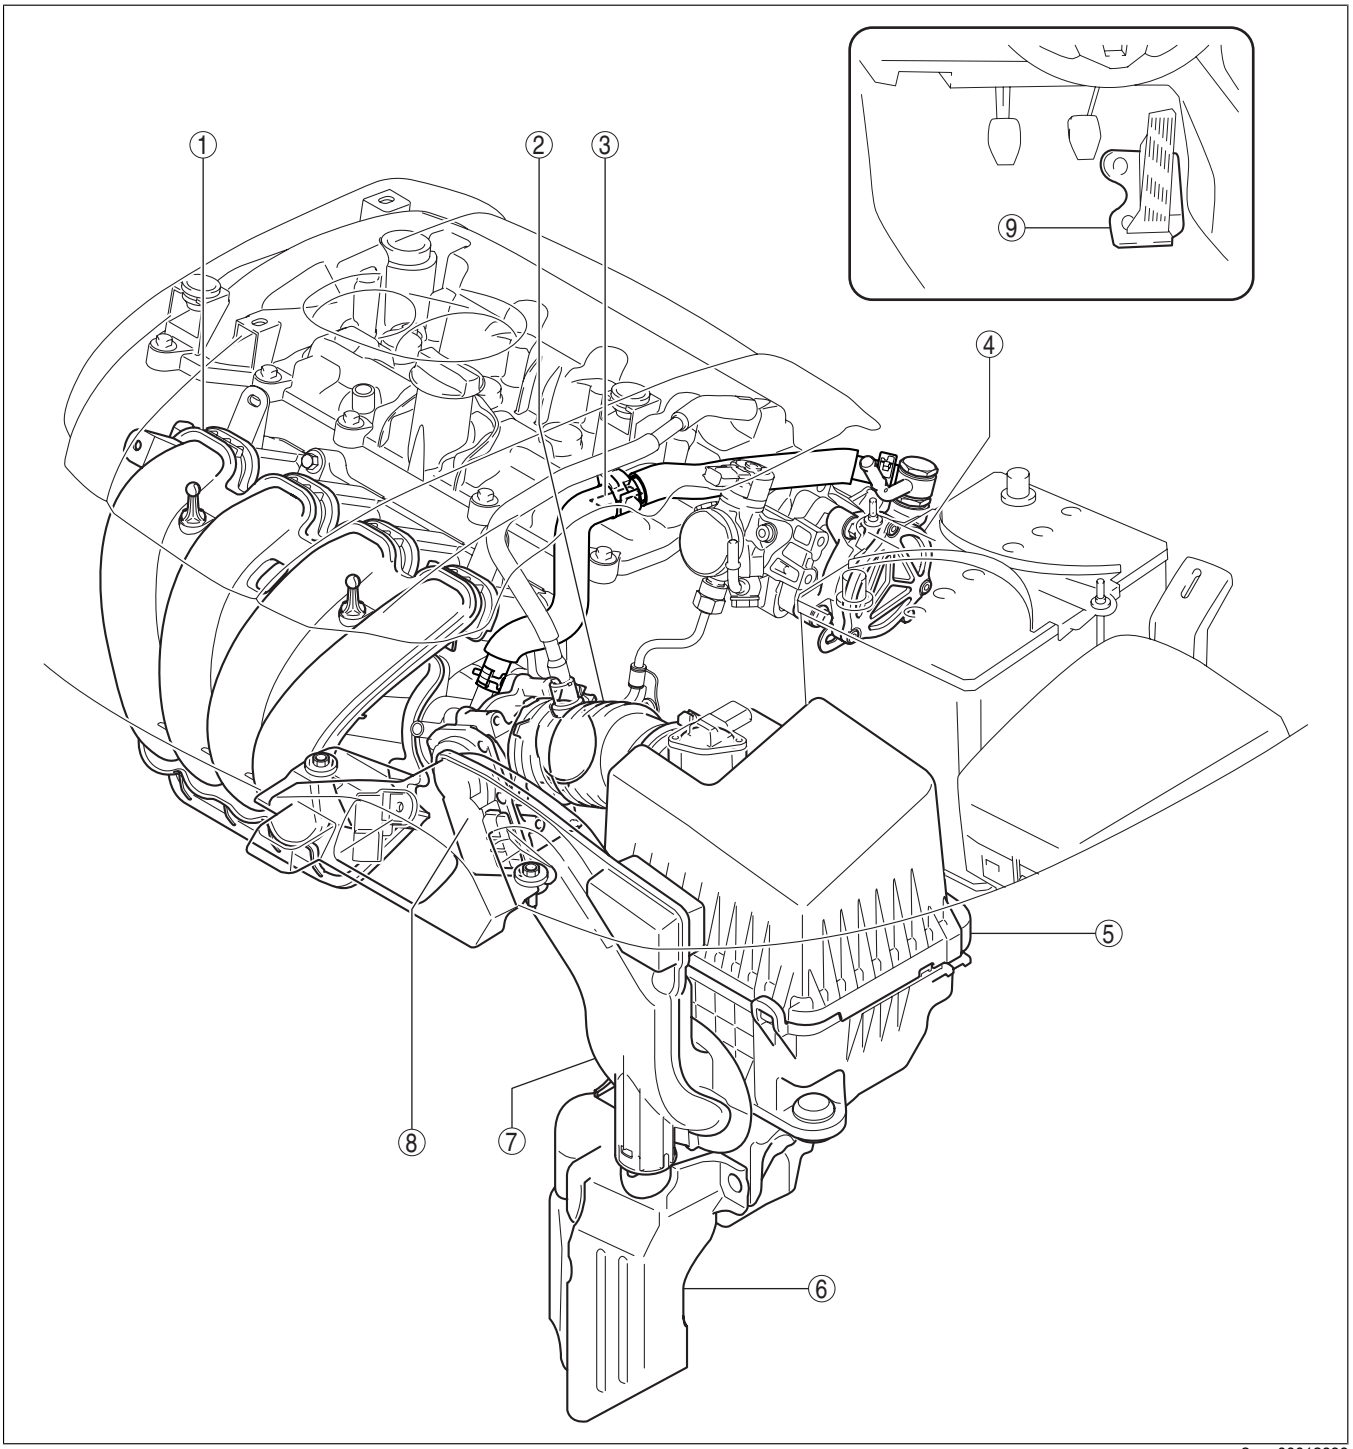

am2zzw00012838

1	Intake manifold (See INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See INTAKE MANIFOLD VACUUM INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
2	Air hose (See INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

3	Check valve (See INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See CHECK VALVE INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
4	Vacuum pump (See VACUUM PUMP REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See VACUUM PUMP INSPECTION.)

5	Air cleaner (See INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See AIR CLEANER ELEMENT REMOVAL/ INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See AIR CLEANER ELEMENT INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
6	Resonance chamber (SKYACTIV-G 1.5) (See INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
7	Fresh-air duct (See INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

8	Throttle body (See INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See THROTTLE BODY INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
9	Accelerator pedal (See ACCELERATOR PEDAL REMOVAL/ INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)