THROTTLE BODY INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5]


id0113q1802600

Resistance Inspection

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Disconnect the throttle body connector.
3. Measure the resistance between throttle body terminals E and F.

   Throttle body resistance
   0.3—100 ohms [20°C {68 °F}]

   - If not as specified, replace the throttle body. (See INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

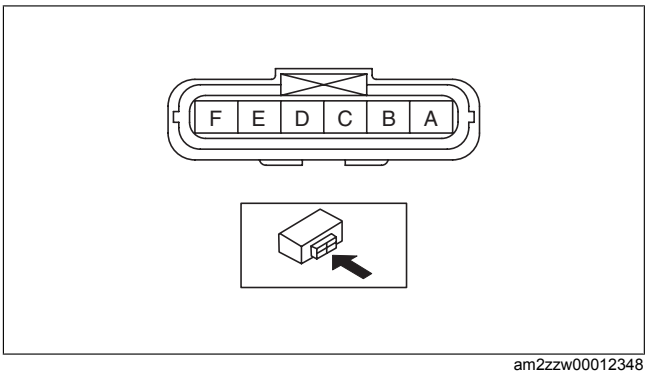

am2zzw00012348