
INTAKE-AIR SYSTEM [SKYACTIV-D 1.5]

id0113q2003300

Purpose, Outline


- A vacuum pump has been adopted to supply stable vacuum to the brakes and the turbocharger with variable turbine geometry.

Structural View

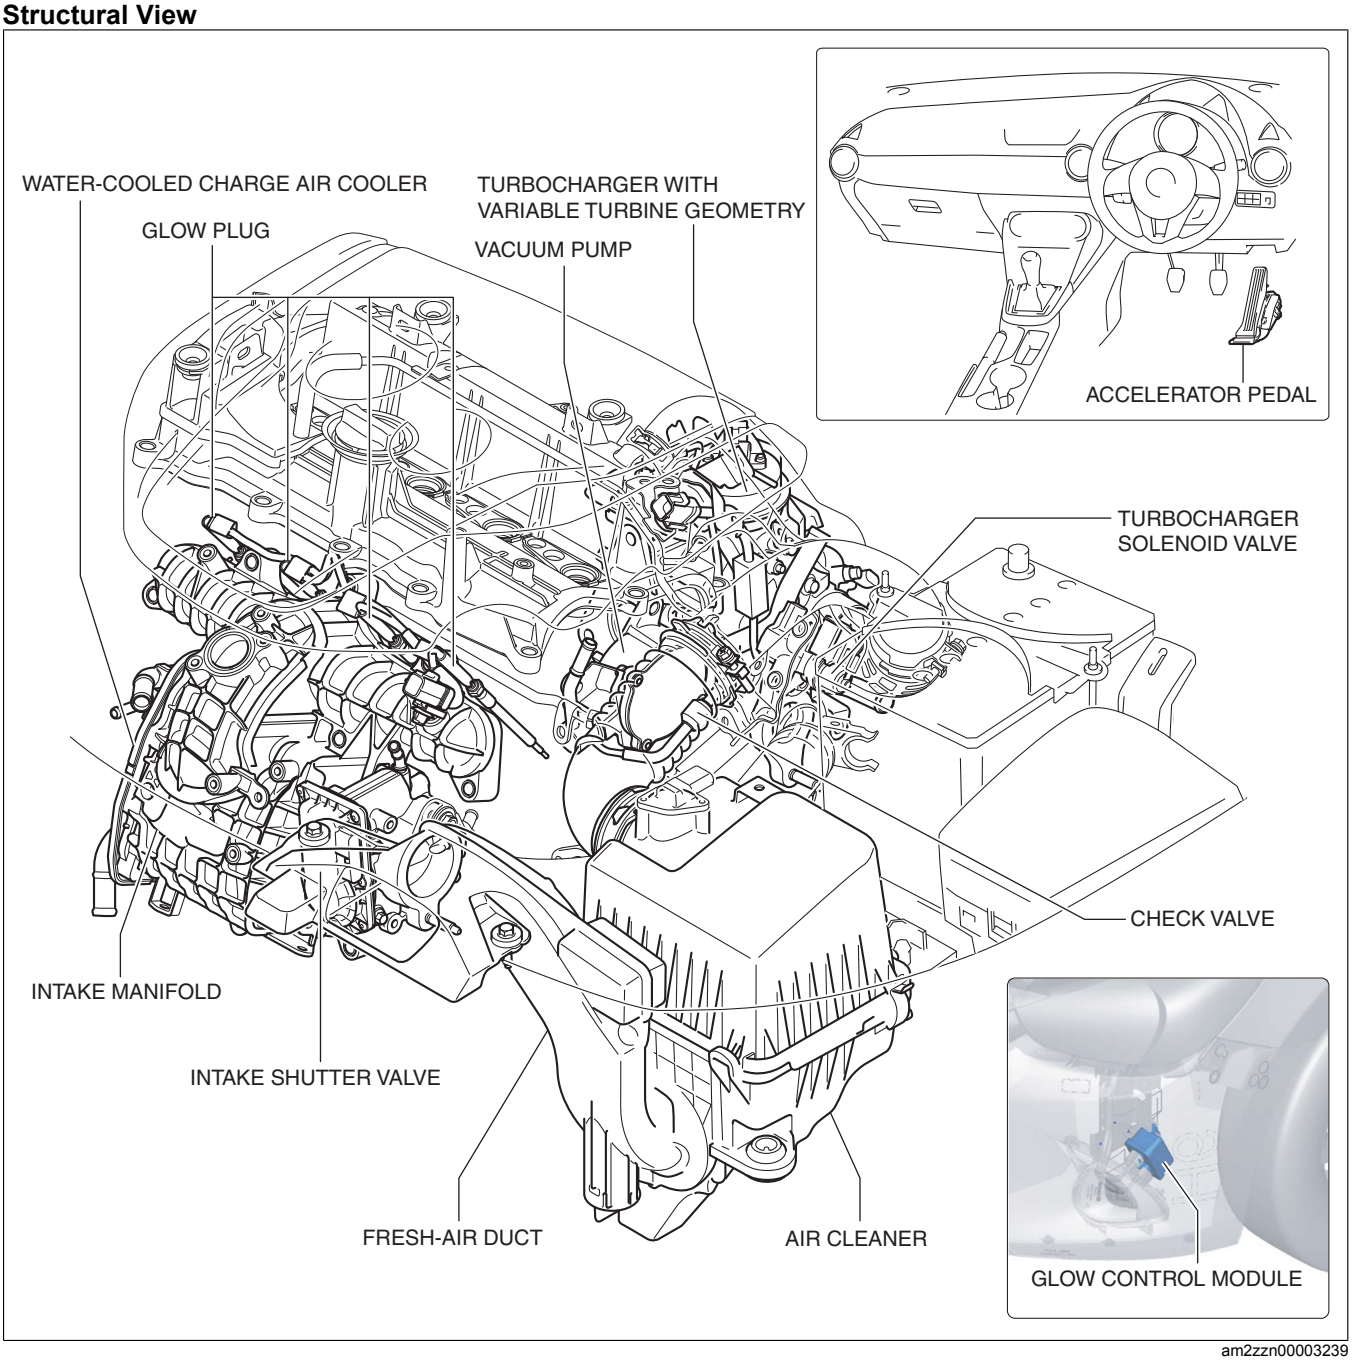

am2zzn00003239


System diagram

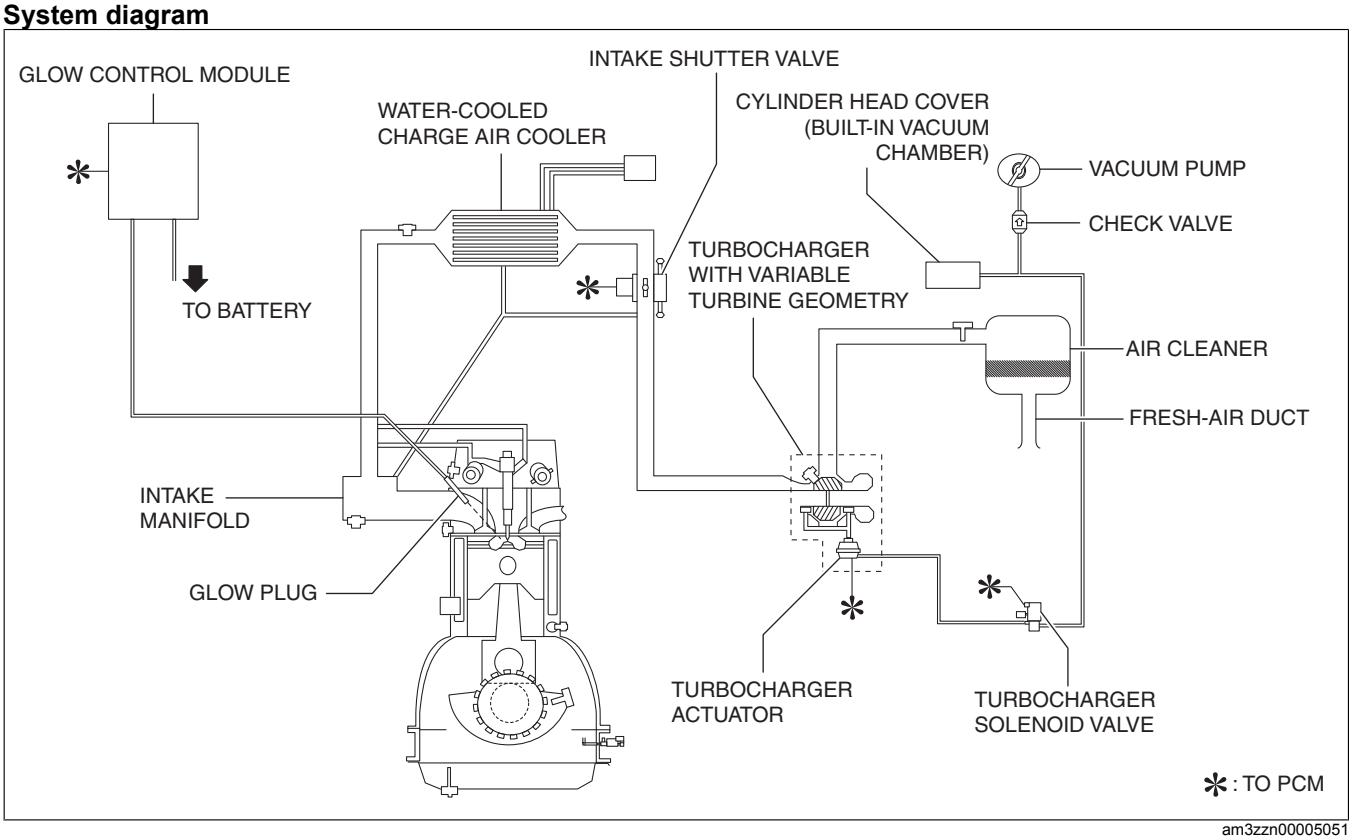

am3zzn00005051


Vacuum piping diagram

L.H.D.

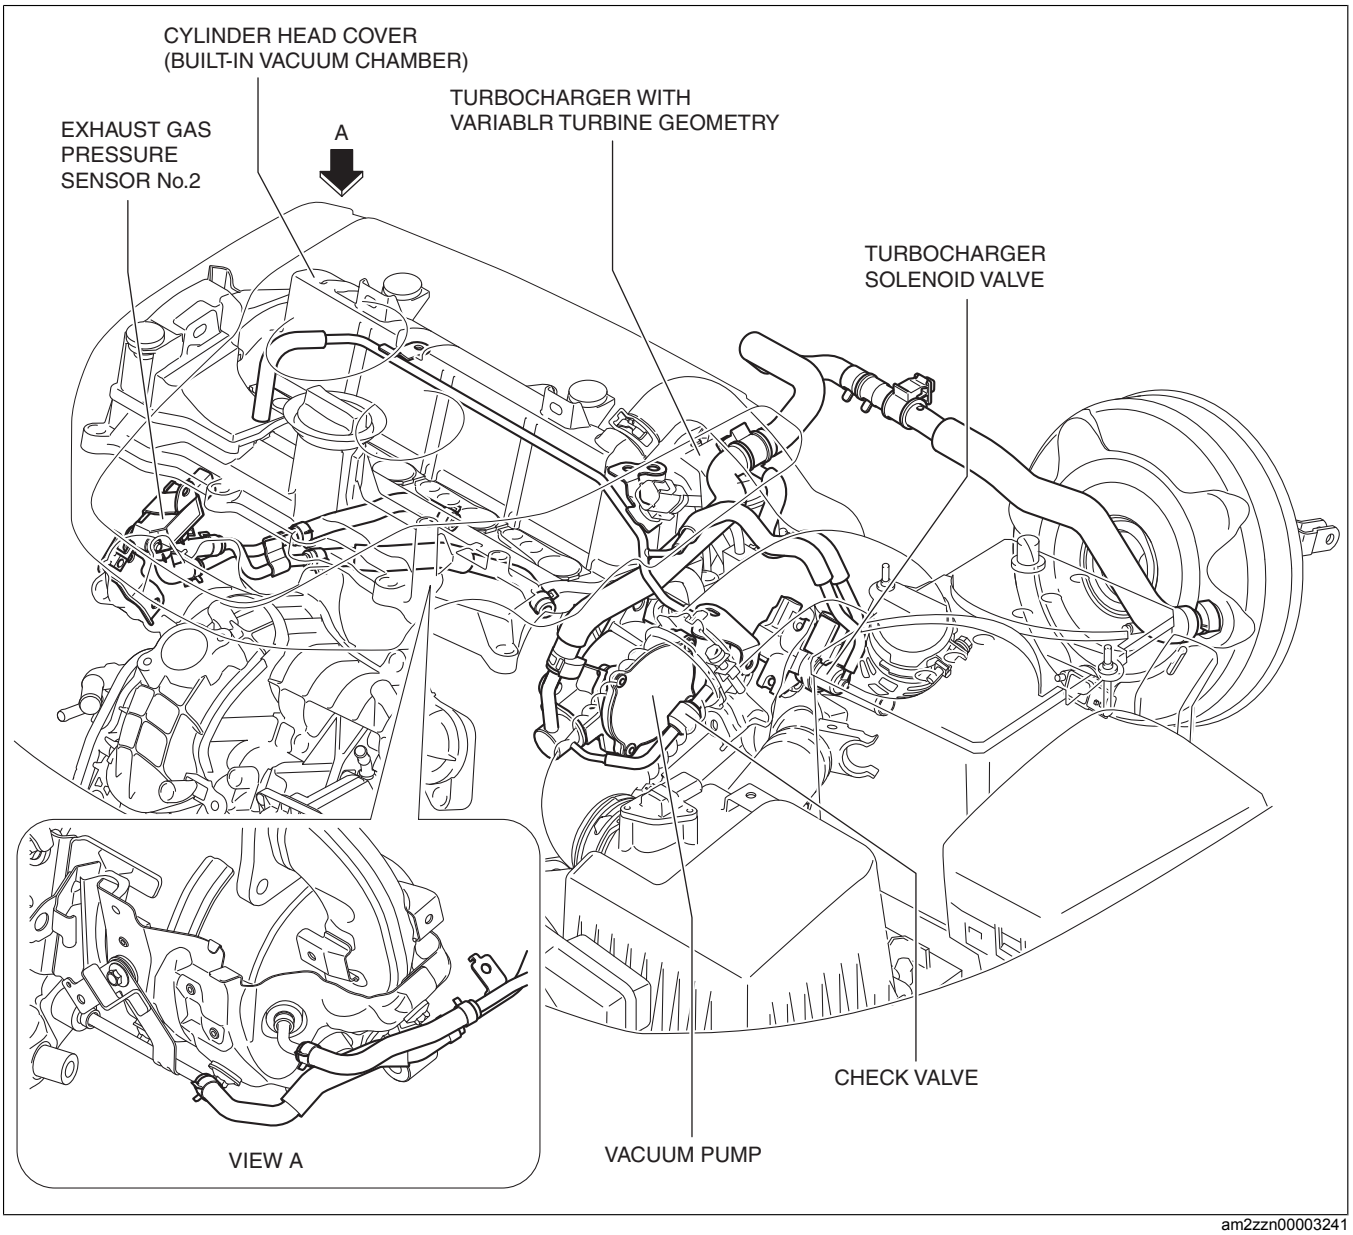

am2zzn00003241

R.H.D.

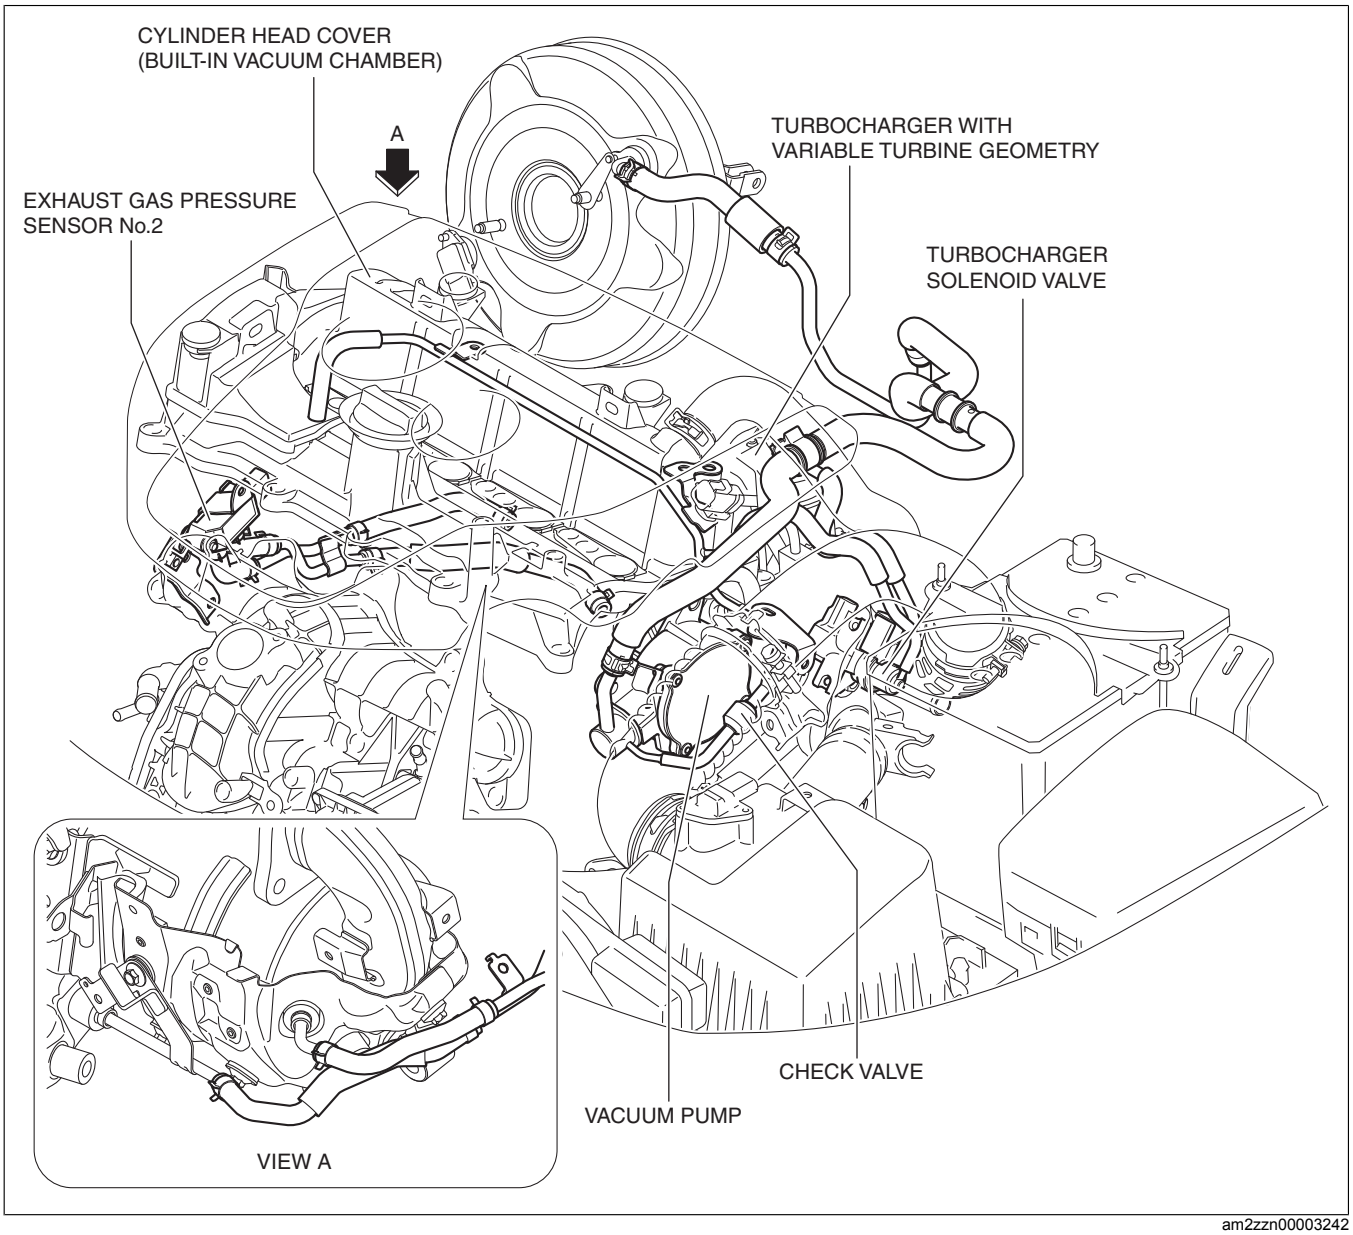

am2zzn00003242

Structure

- The intake air system consists of the following parts:

Part/System name		Reference
Fresh-air duct		(See FRESH-AIR DUCT [SKYACTIV-D 1.5].)
Air cleaner		(See AIR CLEANER [SKYACTIV-D 1.5].)
Intake manifold		(See INTAKE MANIFOLD [SKYACTIV-D 1.5].)
Air charging system (See AIR CHARGING SYSTEM [SKYACTIV-D 1.5].)	Turbocharger with variable turbine geometry	(See TURBOCHARGER WITH VARIABLE TURBINE GEOMETRY [SKYACTIV-D 1.5].)
	Turbocharger actuator	
	Turbocharger solenoid valve	(See TURBOCHARGER SOLENOID VALVE [SKYACTIV-D 1.5].)
	Check valve	(See CHECK VALVE [SKYACTIV-D 1.5].)
	Water-cooled charge air cooler	(See WATER-COOLED CHARGE AIR COOLER [SKYACTIV-D 1.5].)
Glow system (See GLOW SYSTEM [SKYACTIV-D 1.5].)	Glow plug	(See GLOW PLUG [SKYACTIV-D 1.5].)
	Glow control module	(See GLOW CONTROL MODULE [SKYACTIV-D 1.5].)
Vacuum pump		(See VACUUM PUMP [SKYACTIV-D 1.5].)
Cylinder head cover (built-in vacuum chamber)		(See CYLINDER HEAD COVER [SKYACTIV-D 1.5].)

Part/System name	Reference
Accelerator pedal	(See ACCELERATOR PEDAL, KICKDOWN SWITCH [SKYACTIV-D 1.5].)