
CHECK VALVE INSPECTION [SKYACTIV-D 1.5]

id0113q2082800

Airflow Inspection

1. Remove the check valve. (See CHECK VALVE REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
2. Verify that there is airflow through port B when pressure is applied from port A.
   - If there is no airflow, replace the check valve. (See CHECK VALVE REMOVAL/ INSTALLATION [SKYACTIV-D 1.5].)
3. Verify that there is no airflow through port A when pressure is applied from port B.
   - If there is airflow, replace the check valve. (See CHECK VALVE REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)

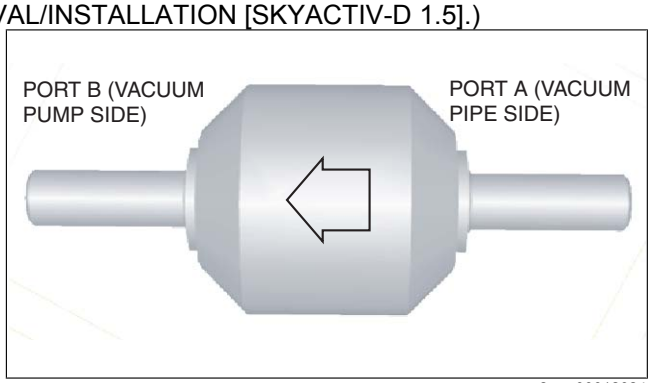

am2zzw00012024