CHECK VALVE [SKYACTIV-D 1.5]


id0113q2266200

Purpose, Function

- The check valve prevents pressure backflow generated in the vacuum pump.


Construction

- The check valve is located on the engine (rear).

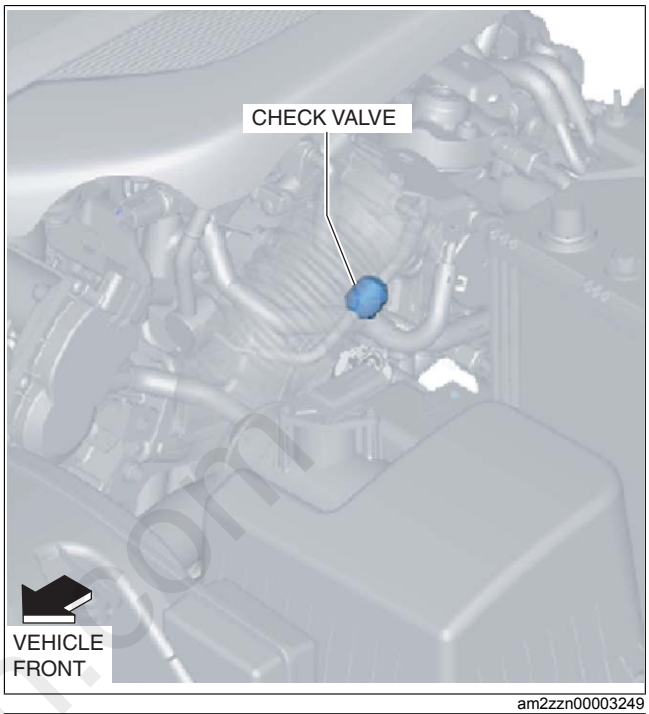

am2zzn00003249


- The check valve consists of the body and filter.
- A one-way valve is integrated in the check valve.

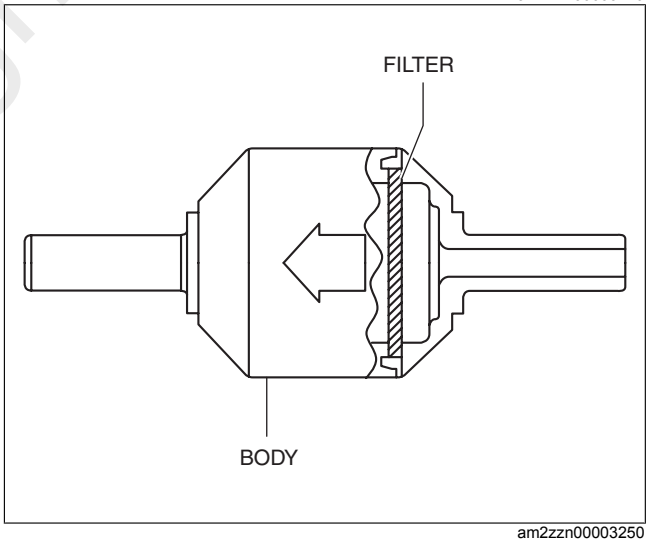

am2zzn00003250

Operation

- The one-way valve opens by the vacuum from the vacuum pump to introduce vacuum to the vacuum chamber.

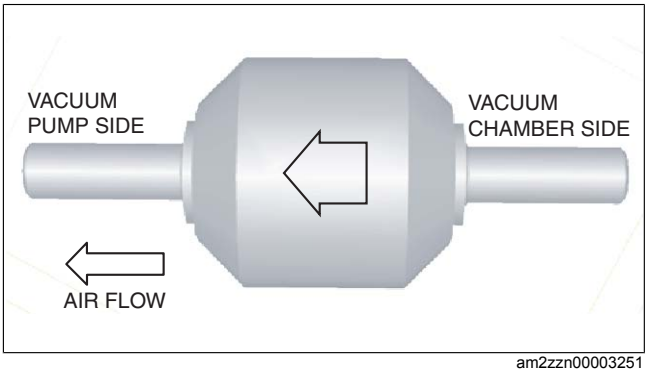

am2zzn00003251

cardiagn.com