
TURBOCHARGER SOLENOID VALVE REMOVAL/INSTALLATION [SKYACTIV-D 1.5]

id0113q2702700

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the battery and the battery tray. (See BATTERY REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
3. Set the DC-DC converter (i-ELOOP) aside so that it does not interfere with the servicing. (With i-ELOOP) (See DC-DC CONVERTER (i-ELOOP) REMOVAL/INSTALLATION [WITH i-ELOOP (SKYACTIV-D 1.5)].)
4. Remove the following parts:
   - Fresh-air duct
   - Air cleaner
   - Air hose
   - Air inlet pipe
   - Turbocharger air inlet hose
   - Blow-by heater
   - Breather hose
5. Remove in the order shown in the figure.

1	Turbocharger solenoid valve connector
2	vacuum hose No.1 (See Vacuum Hose No.1 Installation Note.)
3	vacuum hose No.2 (See Vacuum Hose No.2 Installation Note.)
4	Turbocharger solenoid valve


6. Install in the reverse order of removal.

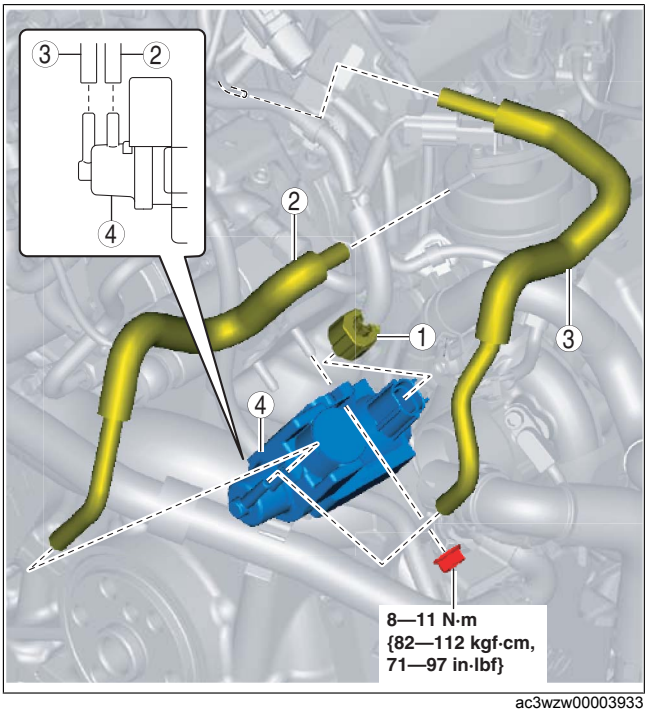

ac3wzw00003933

Vacuum Hose No.2 Installation Note


1. Install vacuum hose No.2 as shown in the figure.

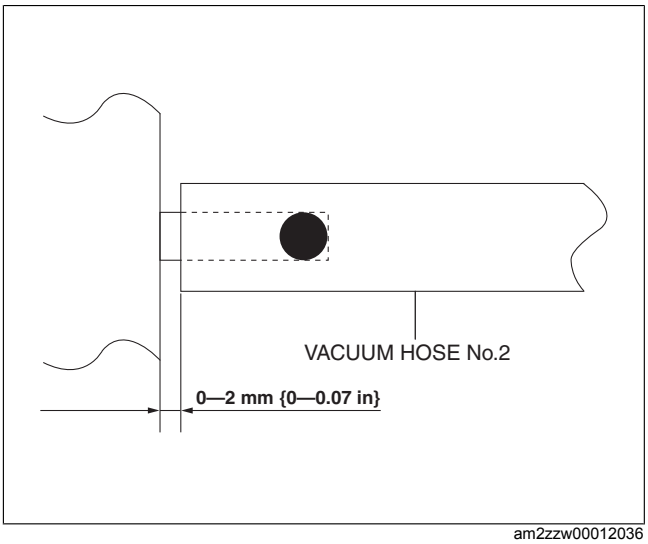

am2zzw00012036

Vacuum Hose No.1 Installation Note

1. Install vacuum hose No.1 as shown in the figure.

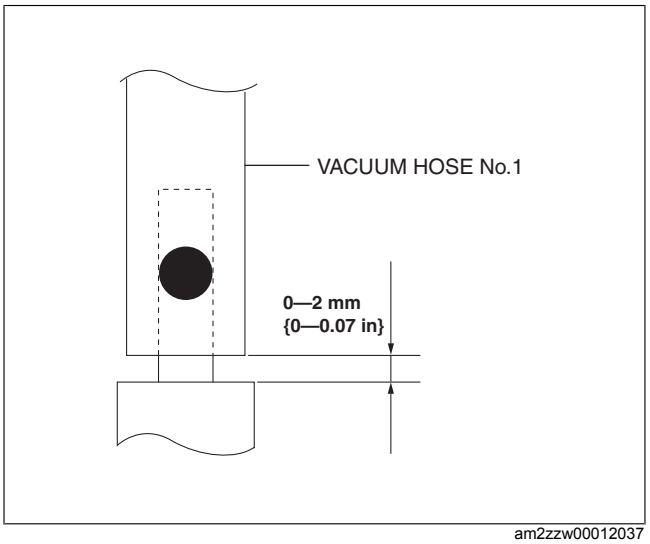

am2zzw00012037