
GLOW PLUG CONTROL MODULE REMOVAL/INSTALLATION [SKYACTIV-D 1.5]

id0113q2705400

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Partially peel back the mudguard (LH).
3. Remove in the order shown in the figure.

Without i-ELOOP

1	Glow control module connector
2	Glow control module

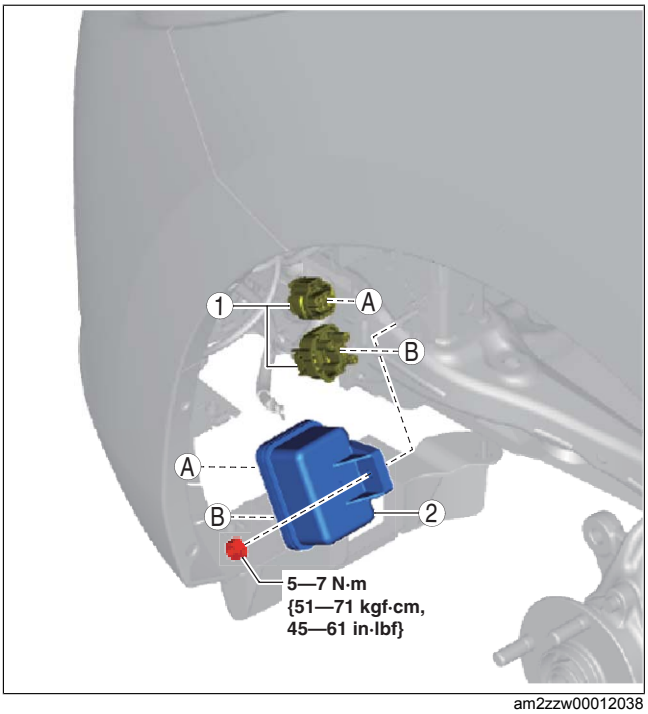


am2zzw00012038

With i-ELOOP

1	Glow control module connector
2	Glow control module bracket (SeeGlow Control Module Bracket Removal Note.)
3	Glow control module

4. Install in the reverse order of removal.

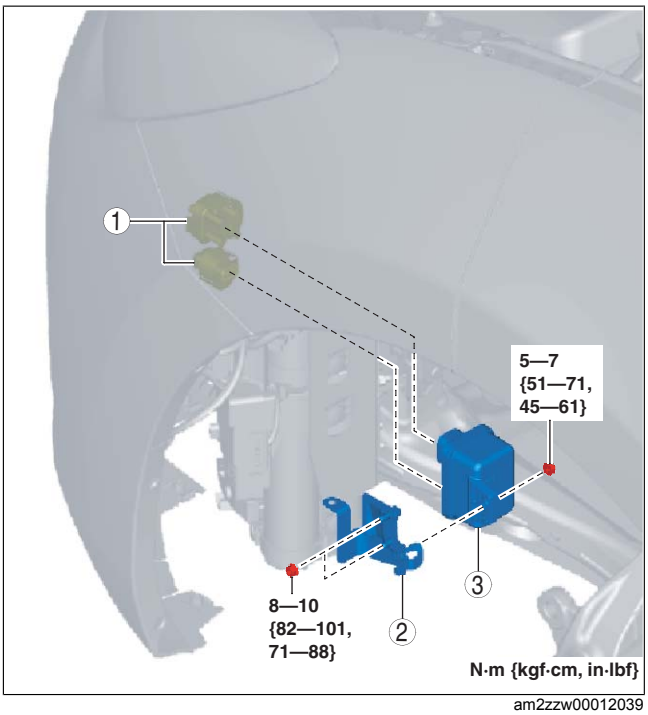

am2zzw00012039

Glow Control Module Bracket Removal Note

1. Remove the glow control module and glow control module bracket as a single unit.
2. Remove the glow control module bracket.