
## VACUUM CHAMBER INSPECTION [SKYACTIV-D 1.5]


id0113q2705700

1. Remove the engine cover. (See ENGINE COVER REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
2. Disconnect the vacuum hose from the cylinder head cover.

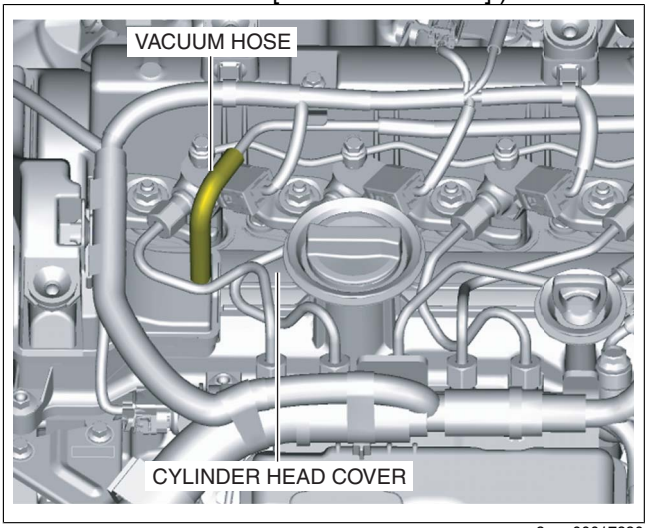


am3zzw00017830

3. Apply negative pressure (**-94 kPa {-705 mmHg, -28 inHg}** on the port A for one minute to check the leakage of negative pressure.
   - If there is air leakage, replace the cylinder head cover. (See TIMING CHAIN REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)

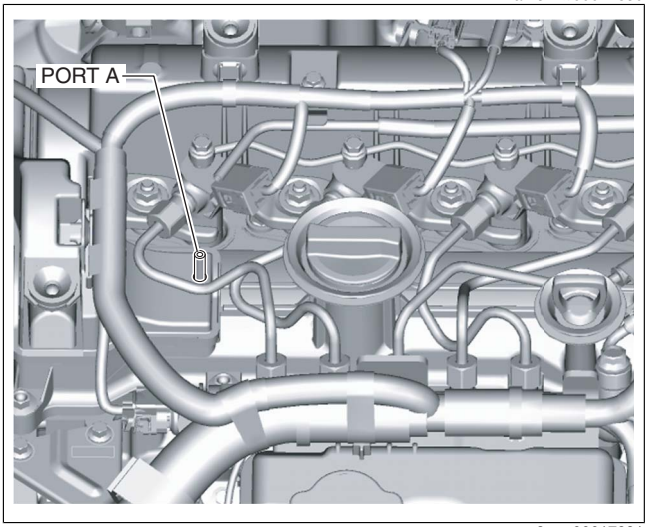


am3zzw00017831