GLOW CONTROL MODULE [SKYACTIV-D 1.5]


id0113q2706100

Purpose, Function

- The glow control module controls the voltage applied to the glow plugs for improved startability during cold temperatures.
- The glow control module controls the voltage based on the control signal from the PCM.

Construction


- The glow control module is located underneath the front combination light (LH).

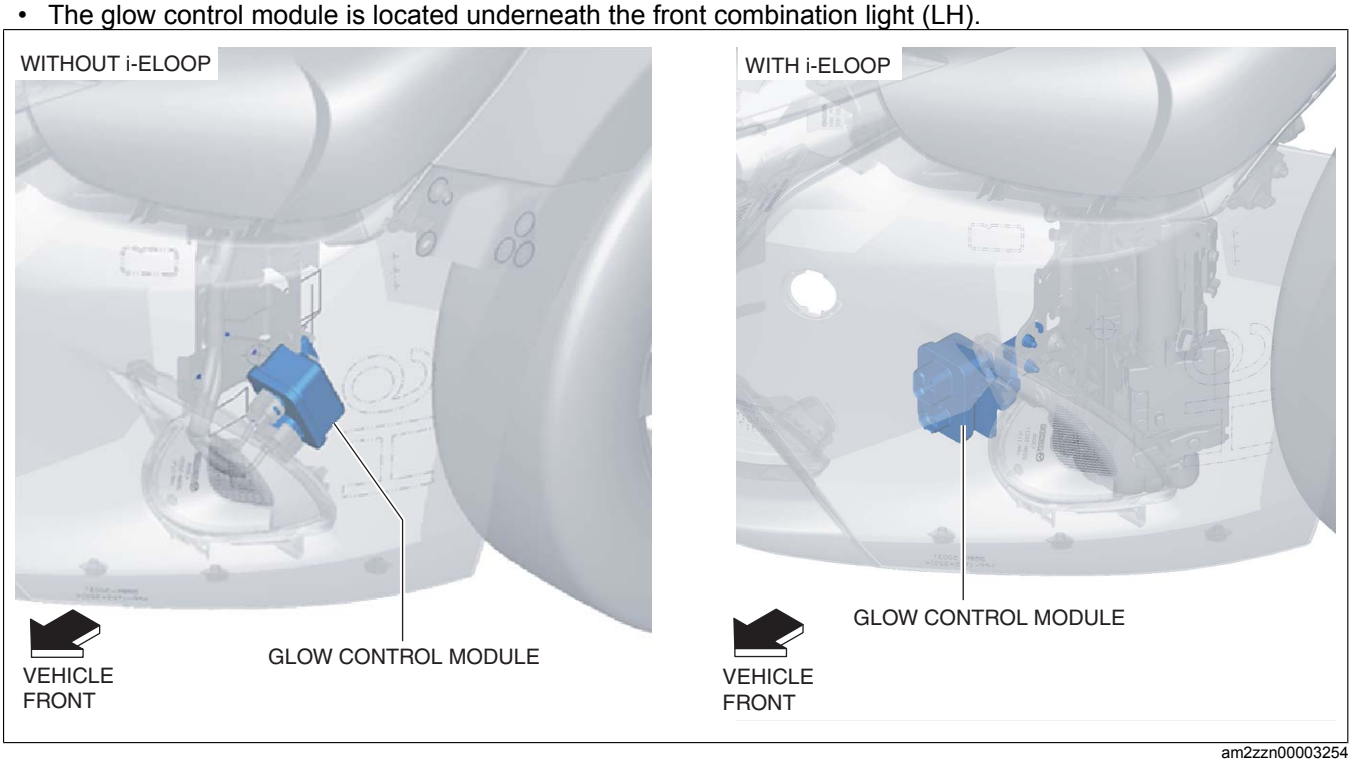

am2zzn00003254

Operation

- Controls the voltage applied to the glow plugs based on the control signal from the PCM. In addition, the on-board diagnostic function is equipped and if there is a malfunction in the glow control module, a diagnostic signal is sent to the PCM. The PCM stores a DTC if necessary according to the received diagnostic signal.

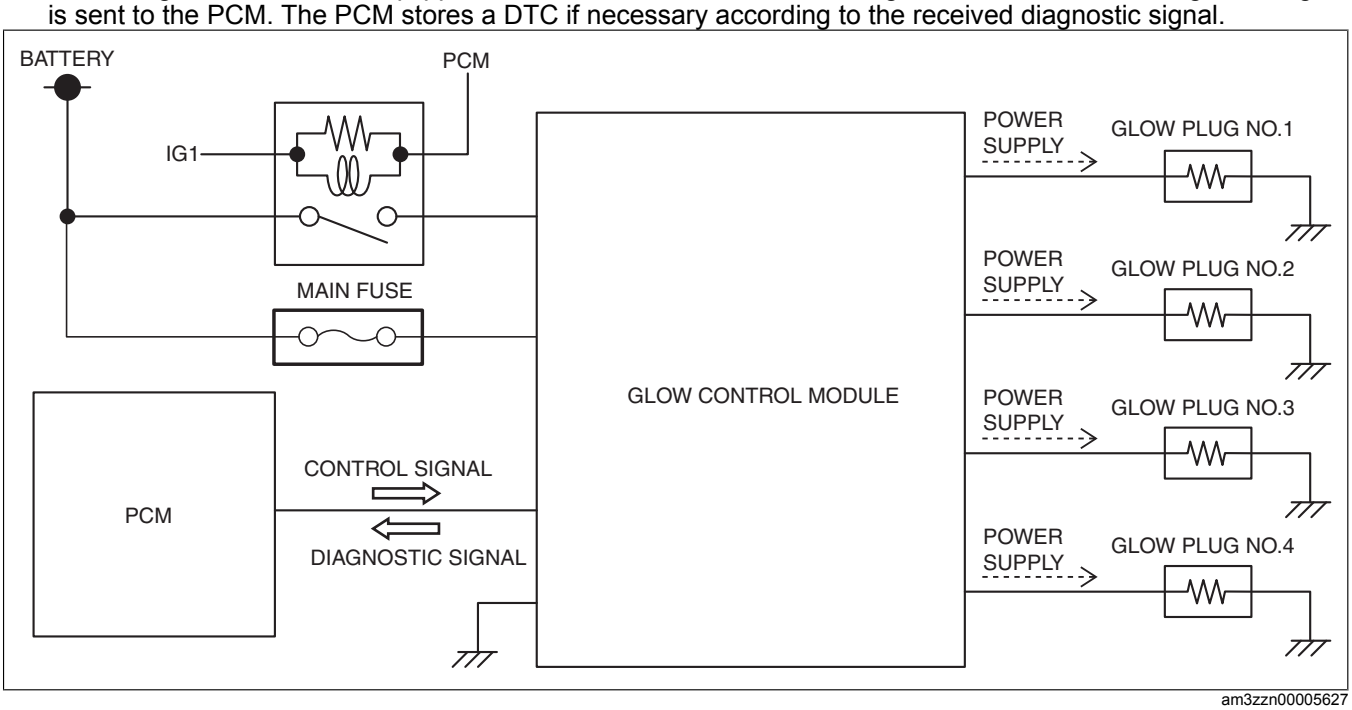

am3zzn00005627

Fail-safe

- Not applicable