
INTAKE-AIR SYSTEM LOCATION INDEX [SKYACTIV-D 1.5]

id0113q2801700

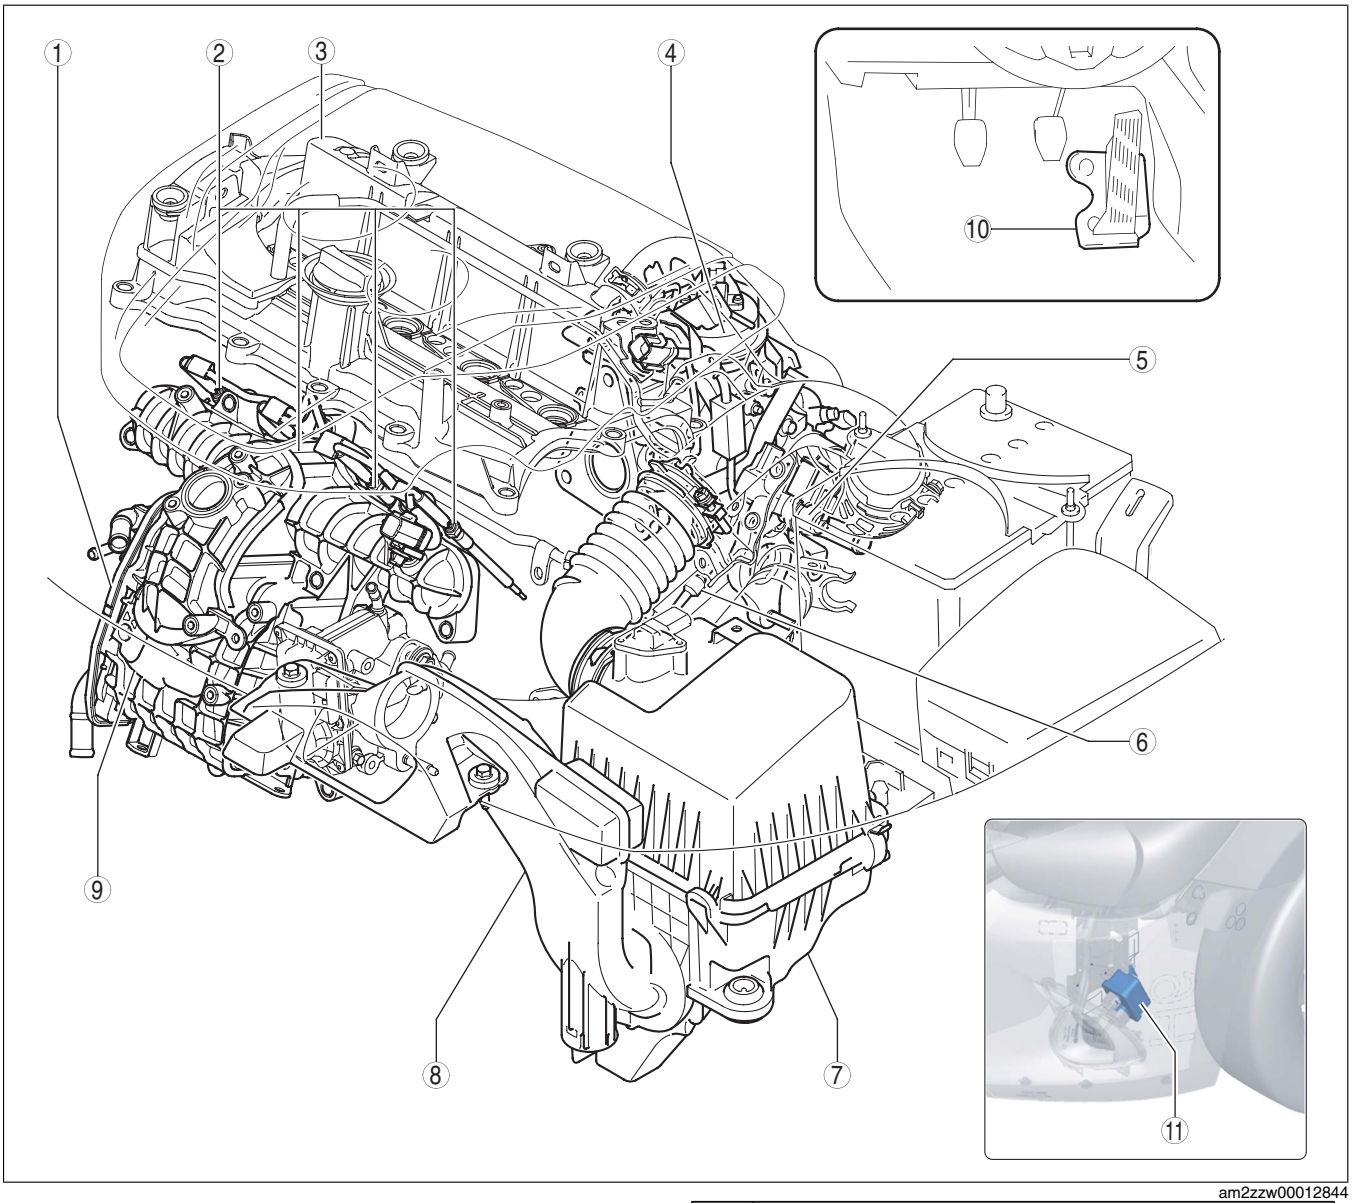

am2zzw00012844

1	Water-cooled charge air cooler (See WATER-COOLED CHARGE AIR COOLER REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See WATER-COOLED CHARGE AIR COOLER INSPECTION [SKYACTIV-D 1.5].)
2	Glow plug (See GLOW PLUG REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See GLOW PLUG INSPECTION [SKYACTIV-D 1.5].)
3	Cylinder head cover (with vacuum chamber function) (See TIMING CHAIN REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See VACUUM CHAMBER INSPECTION [SKYACTIV-D 1.5].)
4	Turbocharger with variable turbine geometry (See TURBOCHARGER WITH VARIABLE TURBINE GEOMETRY REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See TURBOCHARGER WITH VARIABLE TURBINE GEOMETRY INSPECTION [SKYACTIV-D 1.5].)
5	Turbocharger solenoid valve (See TURBOCHARGER SOLENOID VALVE REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See TURBOCHARGER SOLENOID VALVE INSPECTION [SKYACTIV-D 1.5].)
6	Check valve (See CHECK VALVE REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See CHECK VALVE INSPECTION [SKYACTIV-D 1.5].)
7	Air cleaner (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See AIR CLEANER ELEMENT REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See AIR CLEANER ELEMENT INSPECTION [SKYACTIV-D 1.5].)
8	Fresh-air duct (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)

9	Intake manifold (See INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [SKYACTIV-D 1.5].)
10	Accelerator pedal (See ACCELERATOR PEDAL REMOVAL/ INSTALLATION [SKYACTIV-D 1.5].)

11	Glow control module (See GLOW PLUG CONTROL MODULE REMOVAL/ INSTALLATION [SKYACTIV-D 1.5].) (See GLOW PLUG CONTROL MODULE INSPECTION [SKYACTIV-D 1.5].)