

GLOW PLUG REMOVAL/INSTALLATION [SKYACTIV-D 1.5]

id0113q2804400

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the engine cover. (See ENGINE COVER REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
3. Remove the EGR pipe. (See EGR PIPE REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
4. Remove the wiring harness clips and the generator connector shown in the figure.
5. Set the water-cooled charge air cooler reserve tank aside so that it does not interfere with the servicing. (See WATER-COOLED CHARGE AIR COOLER RESERVE TANK REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
6. Remove in the order shown in the figure.
7. Install in the reverse order of removal.

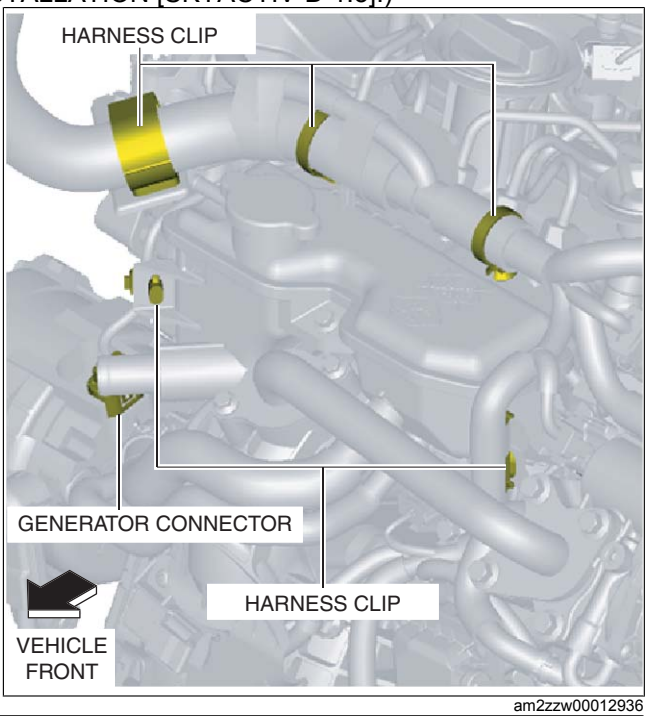

am2zzw00012936

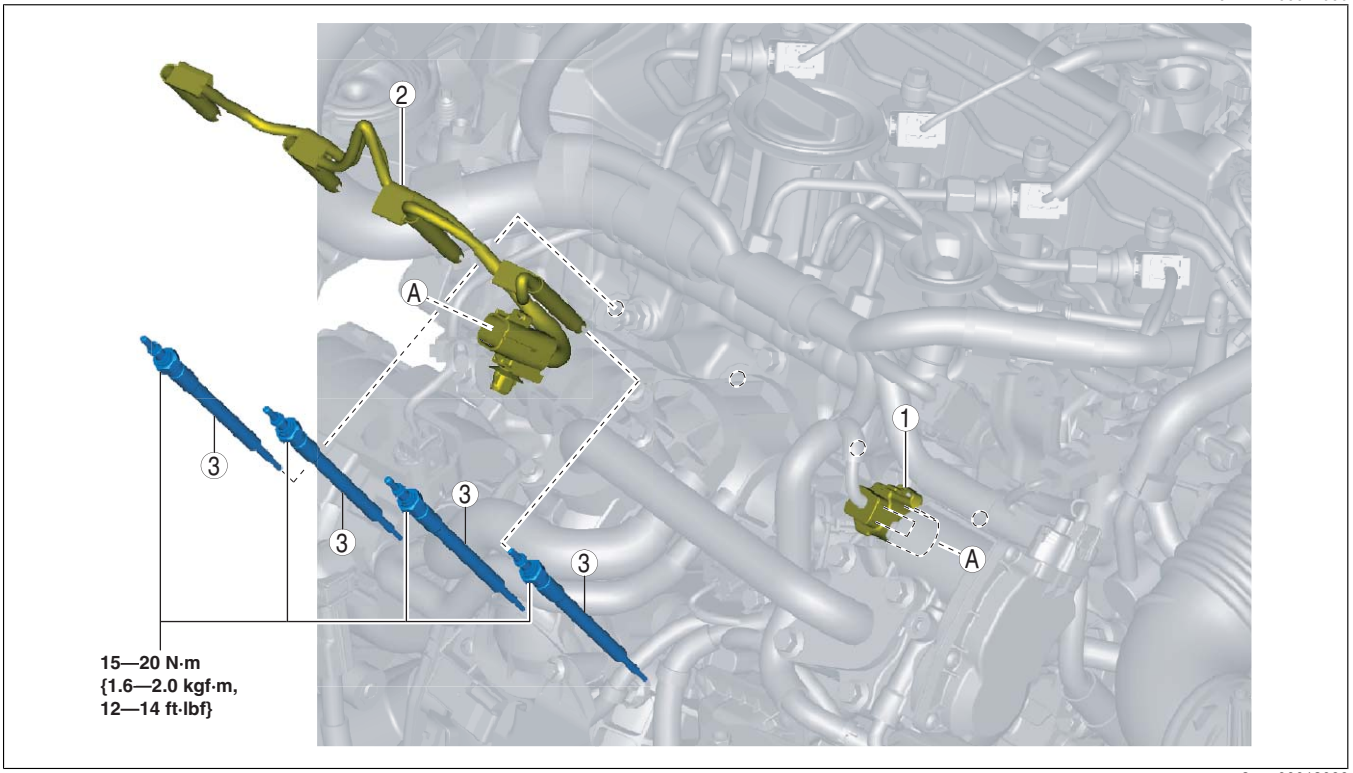

am2zzw00012066

1	Glow plug short-cord connector
2	Glow plug short-cord (See Glow Plug Short-cord Installation Note.)

3	Glow plug (See Glow Plug Removal Note.) (See Cleaning Before Glow Plug Installation.) (See Glow Plug Installation Note.)

Glow Plug Removal Note


1. Loosen the glow plug using the tool until the thread is held by one thread, loosen it by hand, and then remove it.

Cleaning Before Glow Plug Installation

Caution


- **If carbon adheres to the glow plug, it could damage the glow plug and the engine. Before installing the glow plug, remove the carbon adhering to the glow plug and the glow plug installation hole.**

1. Wrap the drill (**5.0—5.2 mm {0.197—0.204 in}** and **5.2—5.4 mm {0.205—0.212 in}** drill bit) from the end to the **119—121 mm {4.69—4.76 in}** position with tape.

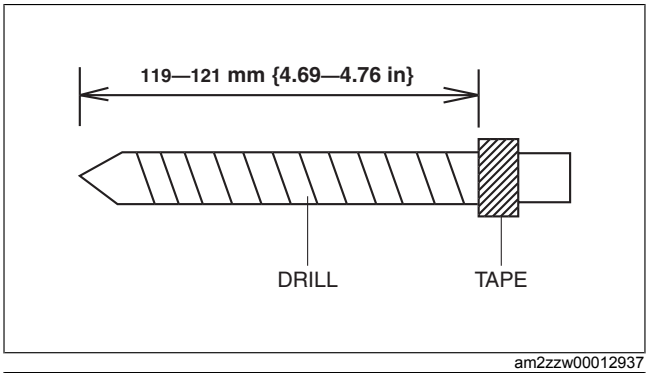

am2zzw00012937

2. Press the drill (**5.0—5.2 mm {0.197—0.204 in}** drill bit) until the wrapped part is inserted completely.
3. Rotate the drill by hand and remove the carbon from the glow plug installation hole.
4. Perform Steps 2 and 3 using a drill (**5.2—5.4 mm {0.205—0.212 in}** drill bit).

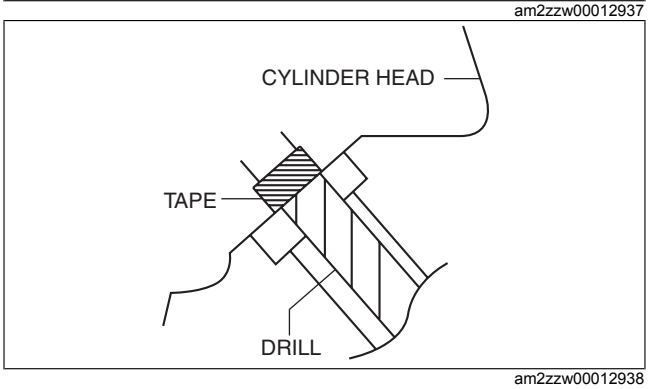

am2zzw00012938


Glow Plug Installation Note

1. Tighten the glow plug by hand until the thread is installed to one thread and tighten it using the tool.

Glow Plug Short-cord Installation Note

Caution

- **Insert the glow plug short-cord perpendicularly to the glow plug to attach it to the lock part. If the glow plug short-cord is not inserted correctly into the glow plug lock part, it could be damaged.**

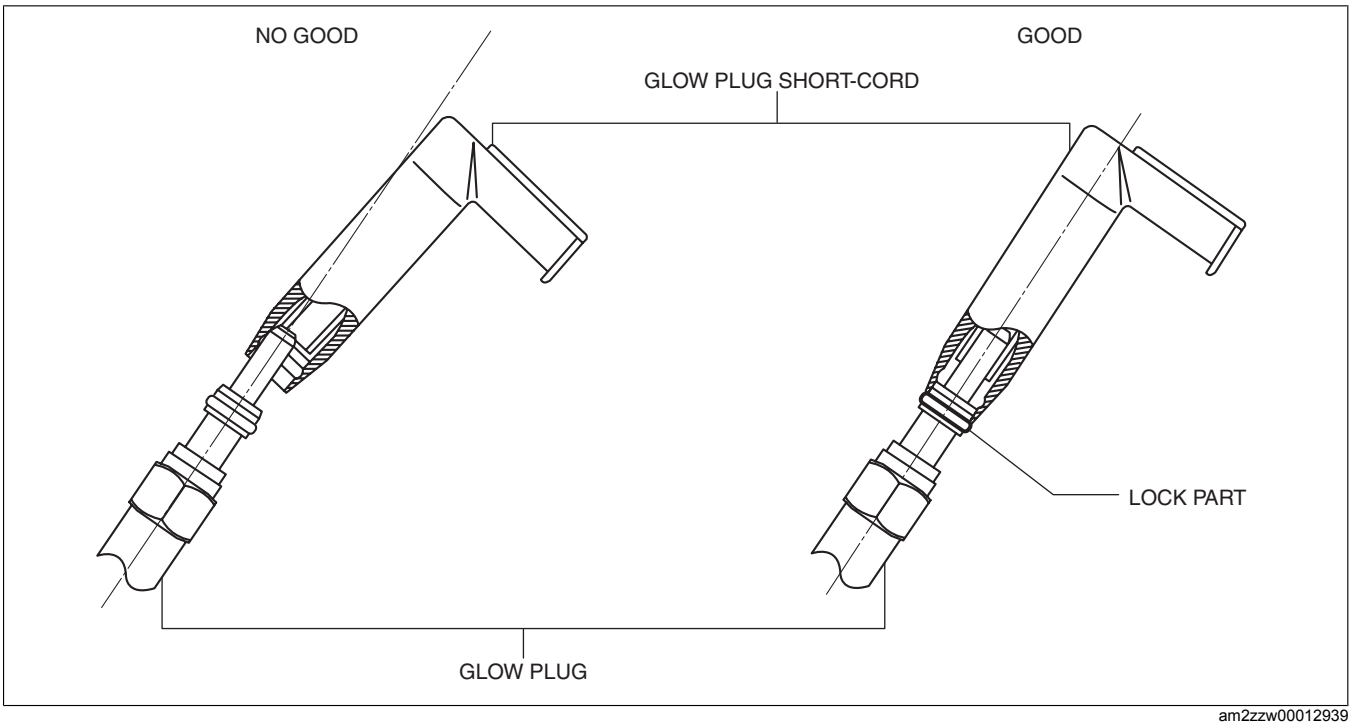

am2zzw00012939

1. Insert the glow plug short-cord until its tip attaches to the lock part of the glow plug.
2. Insert the glow plug short-cord until the glow plug contacts the bottom of the glow plug short-cord.