QUICK RELEASE (FUEL SYSTEM) CONNECTOR [SKYACTIV-G 1.3, SKYACTIV-G 1.5]


id0114q1003800

Purpose, Function

- Serviceability has been improved by the easy disconnection/connection of the quick release connector.


Construction

- Quick release connectors are located on the following:

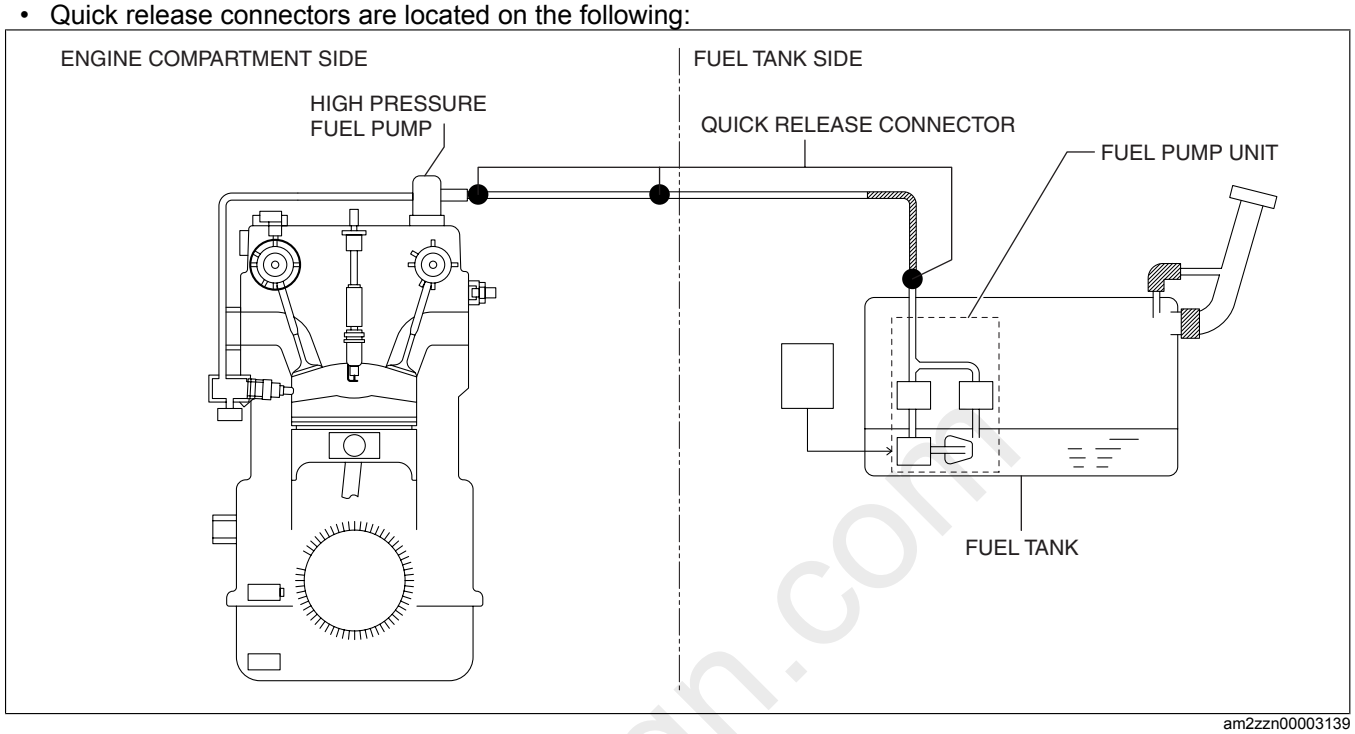

am2zzn00003139

- An **SST** is not used with this type.
- Mainly consists of a retainer and O-ring. The quick release connector is integrated with the fuel hose and therefore cannot be disassembled.
- When the quick release connector is connected, the fuel pipe projection is locked at the clamp lock point. To release the quick connector lock for each type, follow the procedure in the order shown in each figure.

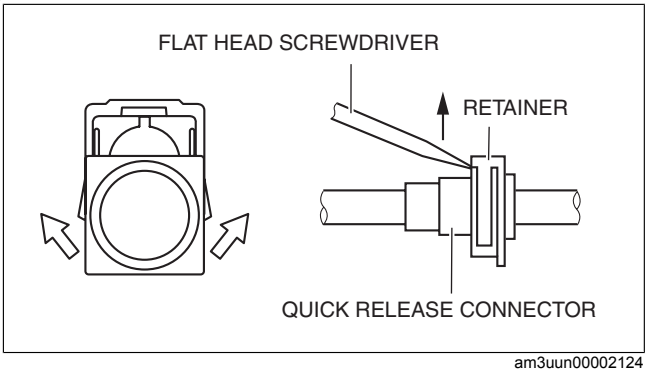

am3uun00002124

carsiagn.com