FUEL PUMP CONTROL MODULE [SKYACTIV-G 1.3, SKYACTIV-G 1.5]


id0114q1003900

Purpose, Function

- The fuel pump control module controls the voltage applied to the fuel pump for reducing fuel pump load and improving fuel economy.
- Controls the voltage applied to the fuel pump based on the control signal from the PCM.

Construction


- The fuel pump control module is located on the left side in the trunk compartment.

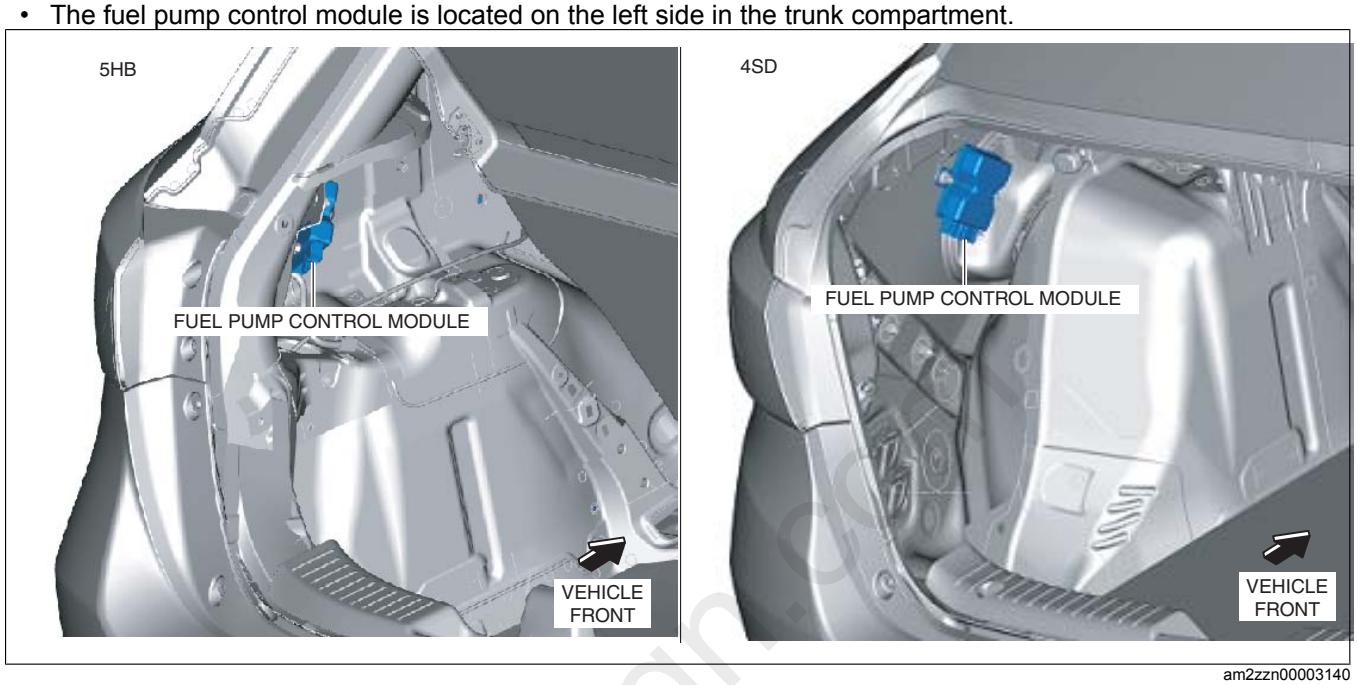

am2zzn00003140

Operation

- Controls the voltage applied to the fuel pump based on the control signal from the PCM.

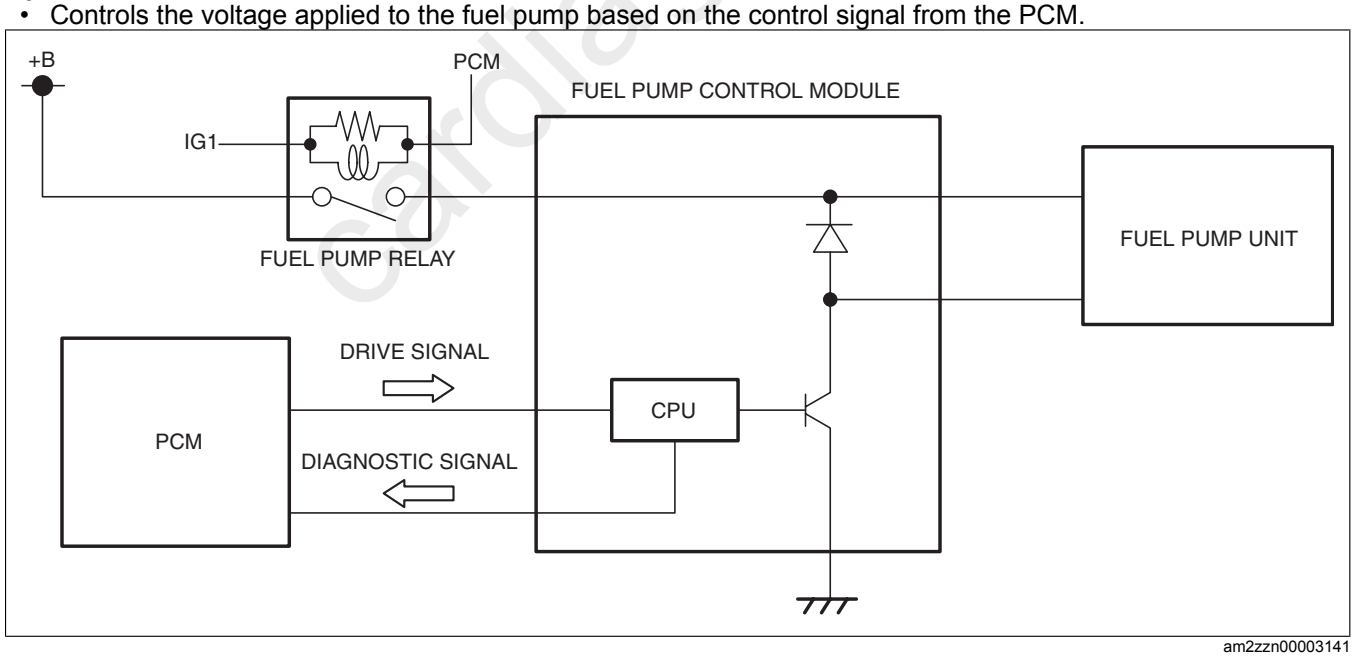

am2zzn00003141

- In addition, an on-board diagnostic function is equipped, and if there is a malfunction in the fuel pump control module, a diagnostic signal is sent to the PCM.
- The PCM stores a DTC if necessary according to the received diagnostic signal.
- For the fuel pump control module, refer to CONTROL SYSTEM. (See FUEL PUMP CONTROL [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

cardiagn.com

Fail-safe

P025B:00	• Stops the fuel pump control (when overheating is detected).
P0629:00	• Stops the fuel pump control.

cardiagn.com