FUEL PUMP UNIT [SKYACTIV-G 1.3, SKYACTIV-G 1.5]


id0114q1103600

Purpose, Function

- The fuel pump unit supplies fuel in the fuel tank to the high pressure fuel pump.
- Based on the control signal from the PCM, the fuel pump operates by the operation of the fuel pump relay and the fuel pump control module.


Construction

- The fuel pump unit is located on the fuel tank.

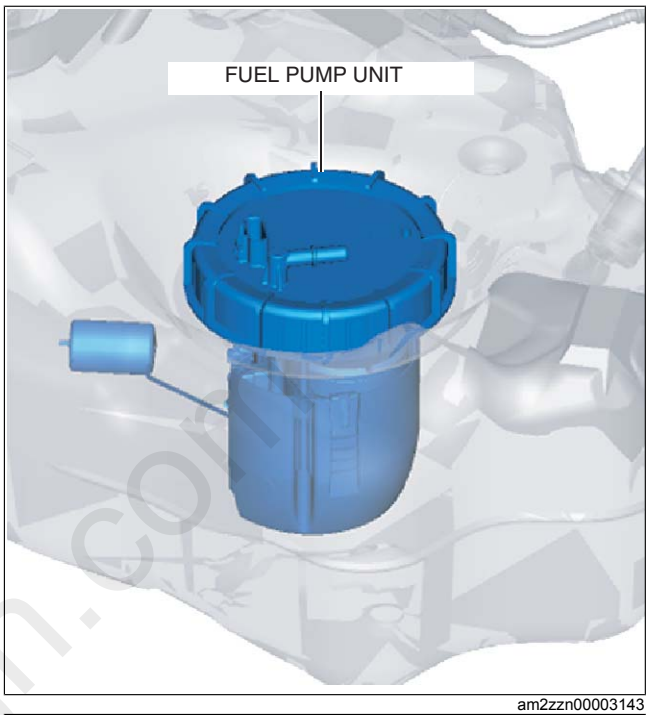

am2zzn00003143

- The fuel pump unit consists of a fuel pump, fuel filter (low-pressure) fuel filter (high-pressure), pressure regulator, and lower cover.

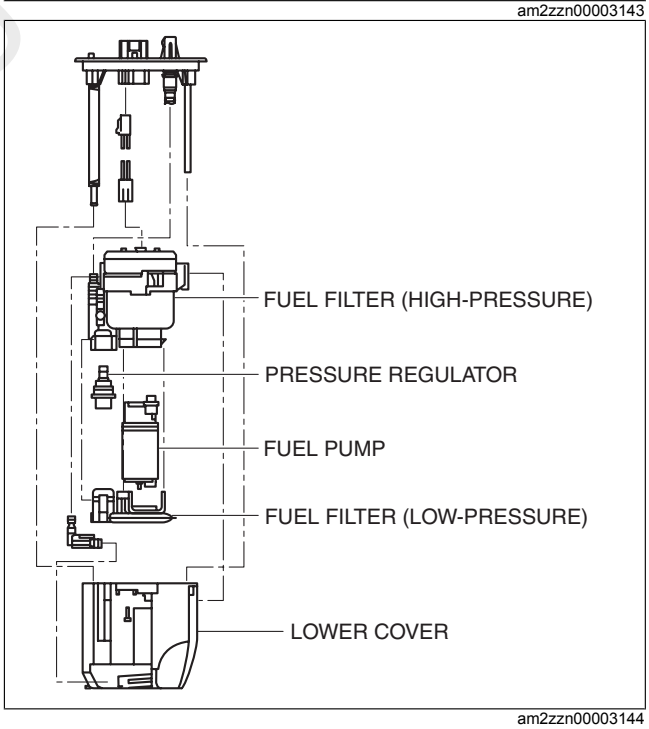


am2zzn00003144

cardiagn.com

Operation

- Based on the control signal from the PCM, the fuel pump suctions fuel in the lower cover and pumps it to the high pressure fuel pump. After fuel is sufficiently filtered through the fuel filter (low-pressure) and fuel filter (high-pressure), fuel pressure is adjusted to **approx. 450 kPa {4.59 kgf/cm^2, 65.3 psi} (European (L.H.D.), General (L.H.D.) specs.) approx. 430 kPa {4.38 kgf/cm^2, 62.4 psi} (Except European (L.H.D.), General (L.H.D.) specs.)** by the pressure regulator.
- For fuel pump control details, refer to the CONTROL SYSTEM. (See FUEL PUMP CONTROL [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

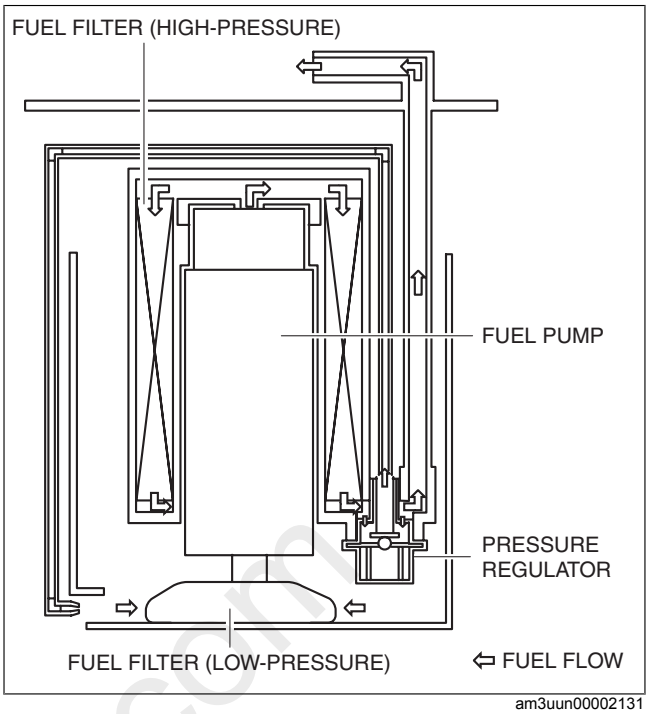

am3uun00002131

Fail-safe

- Function not equipped.

cardiagn.com