FUEL PUMP RELAY [SKYACTIV-G 1.3, SKYACTIV-G 1.5]


id0114q1129100

Purpose, Function

- The fuel pump relay controls the fuel pump on/off according to control signals from the PCM.
- Operates the fuel pump only at engine start or while the engine is running to improve safety.

Construction


- The fuel pump relay is located on the relay and fuse block.

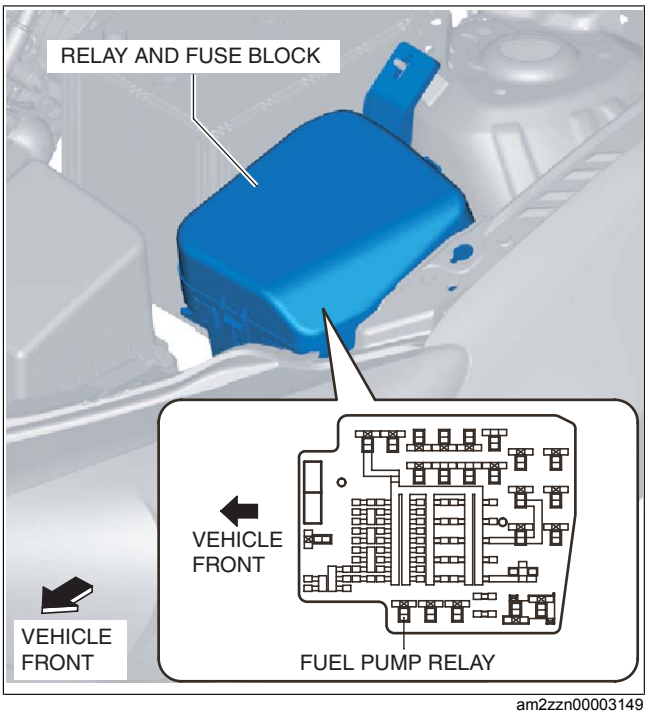

am2zzn00003149

Operation

- The contact point is on when the coil is energized based on the signals from the PCM, and battery voltage is supplied to the fuel pump control module.

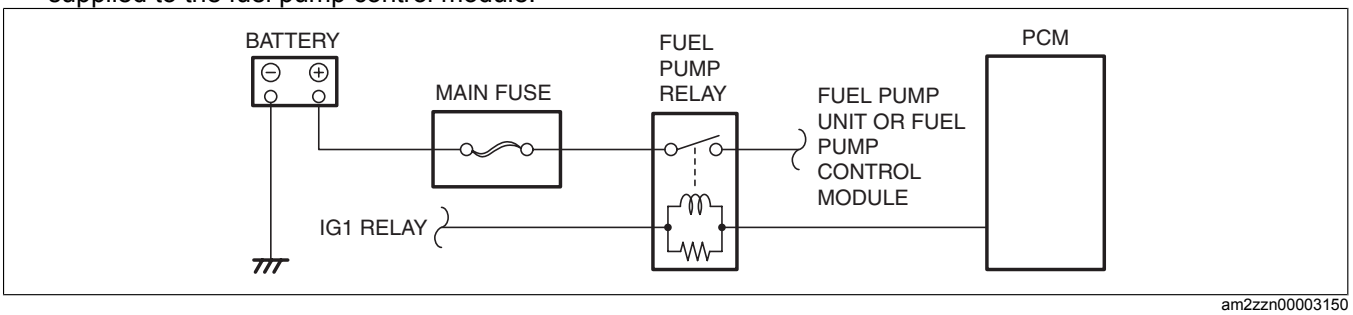

am2zzn00003150

Fail-safe

- Function not equipped.