FUEL DISTRIBUTOR [SKYACTIV-G 1.3, SKYACTIV-G 1.5]


id0114q1160000

Purpose, Function

- The fuel distributer distributes fuel pumped from the high pressure fuel pump to each fuel injector.


Construction

- The fuel distributor is located on the cylinder head.

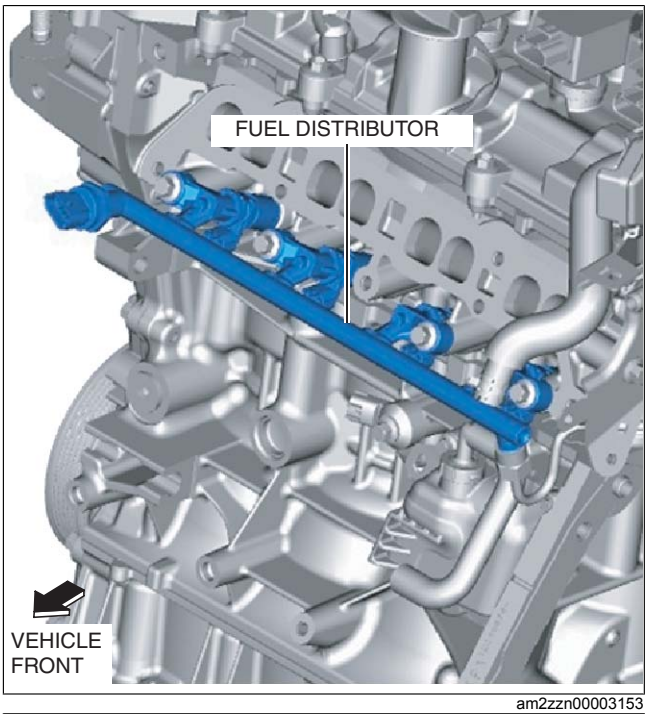

am2zzn00003153

- The fuel distributor is integrated with the fuel pressure sensor.

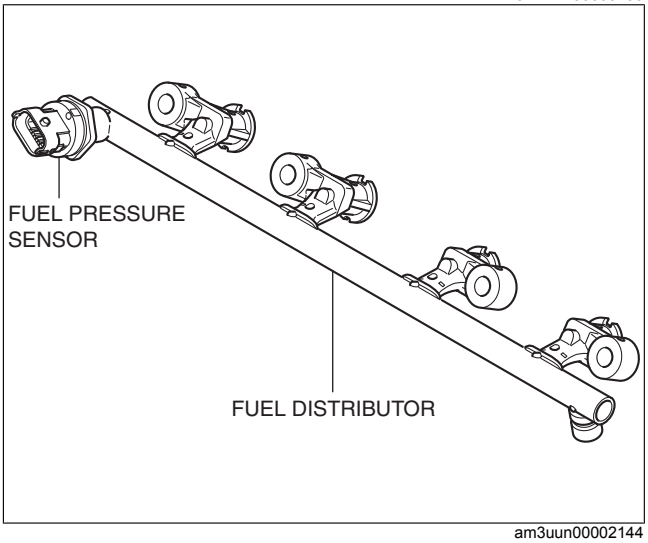

am3uun00002144