
FUEL PUMP CONTROL MODULE REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0114q1175000


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the trunk side trim (LH). (See TRUNK SIDE TRIM REMOVAL/INSTALLATION.)
3. Disconnect the fuel pump control module connector.
4. Remove in the order indicated in the table.

4SD

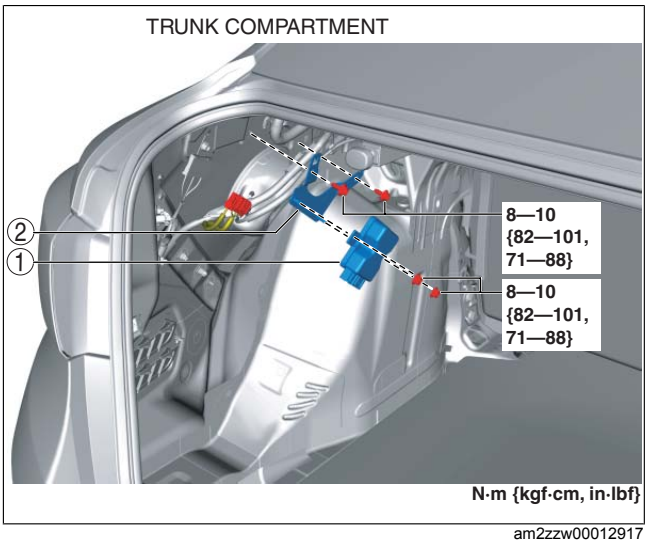

am2zzw00012917

5HB

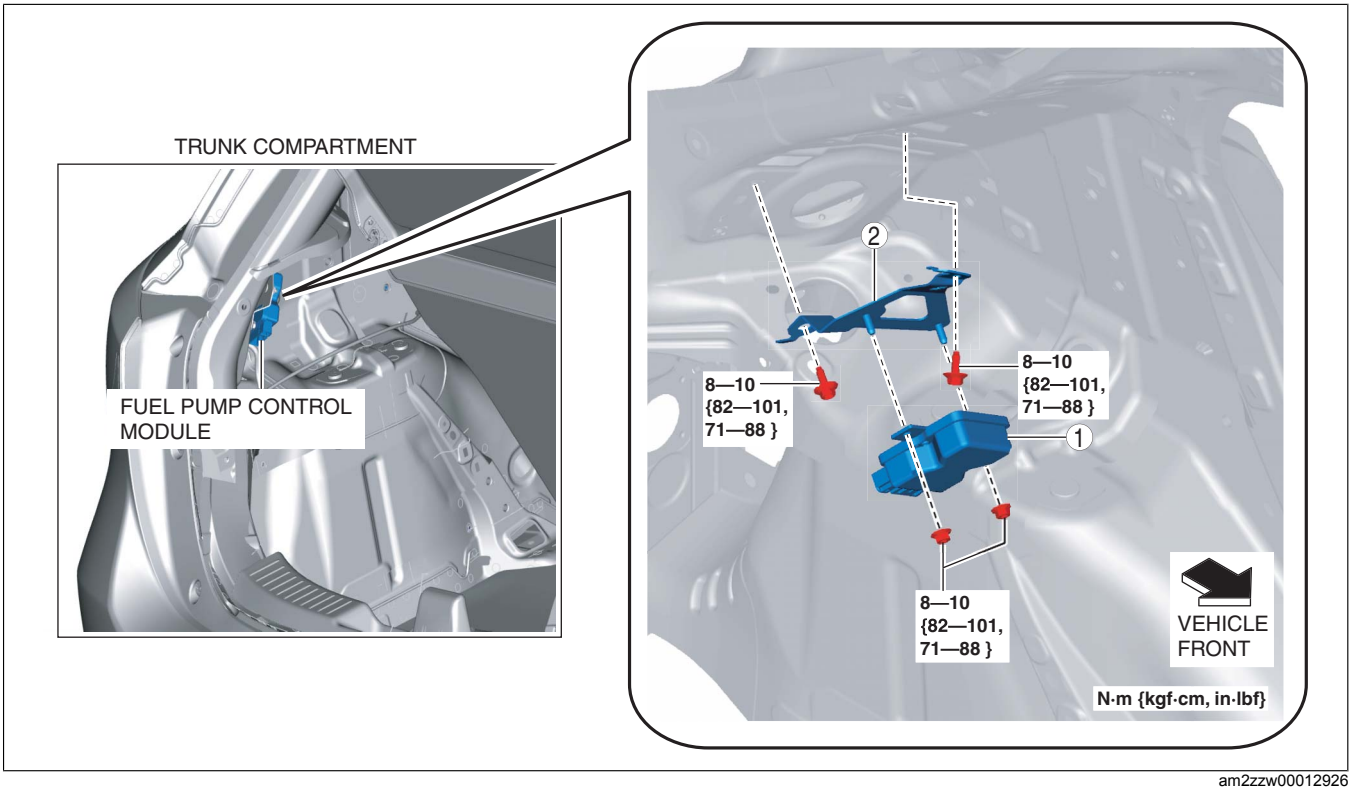

am2zzw00012926

1	Fuel pump control module
2	Fuel pump control module bracket

5. Install in the reverse order of removal.