
FUEL SYSTEM LOCATION INDEX [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0114q1800100

Engine Compartment Side

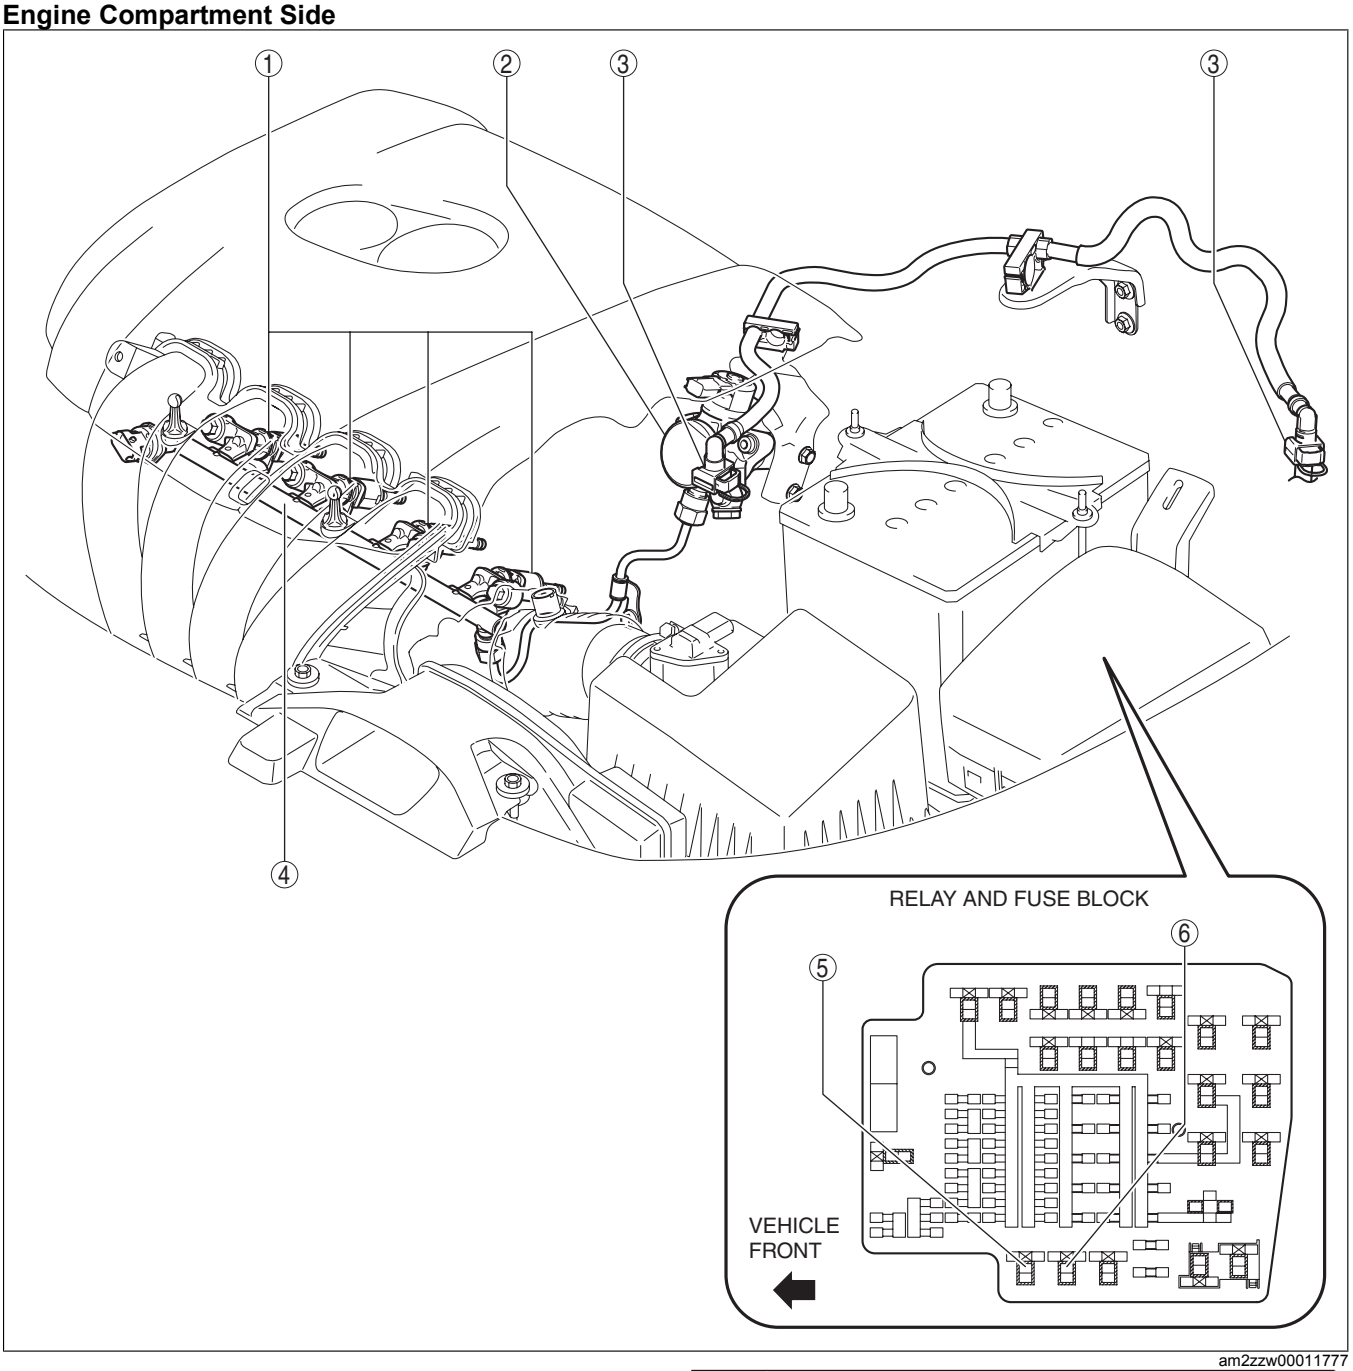


am2zzw00011777

1	Fuel injector (See FUEL INJECTOR REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See FUEL INJECTOR INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
2	High pressure fuel pump (See HIGH PRESSURE FUEL PUMP REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See HIGH PRESSURE FUEL PUMP INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
3	Quick release connector (See QUICK RELEASE CONNECTOR REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

4	Fuel distributor (See FUEL INJECTOR REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
5	Fuel pump relay (See RELAY INSPECTION.)
6	Fuel injector relay (See RELAY INSPECTION.)

Fuel Tank Side

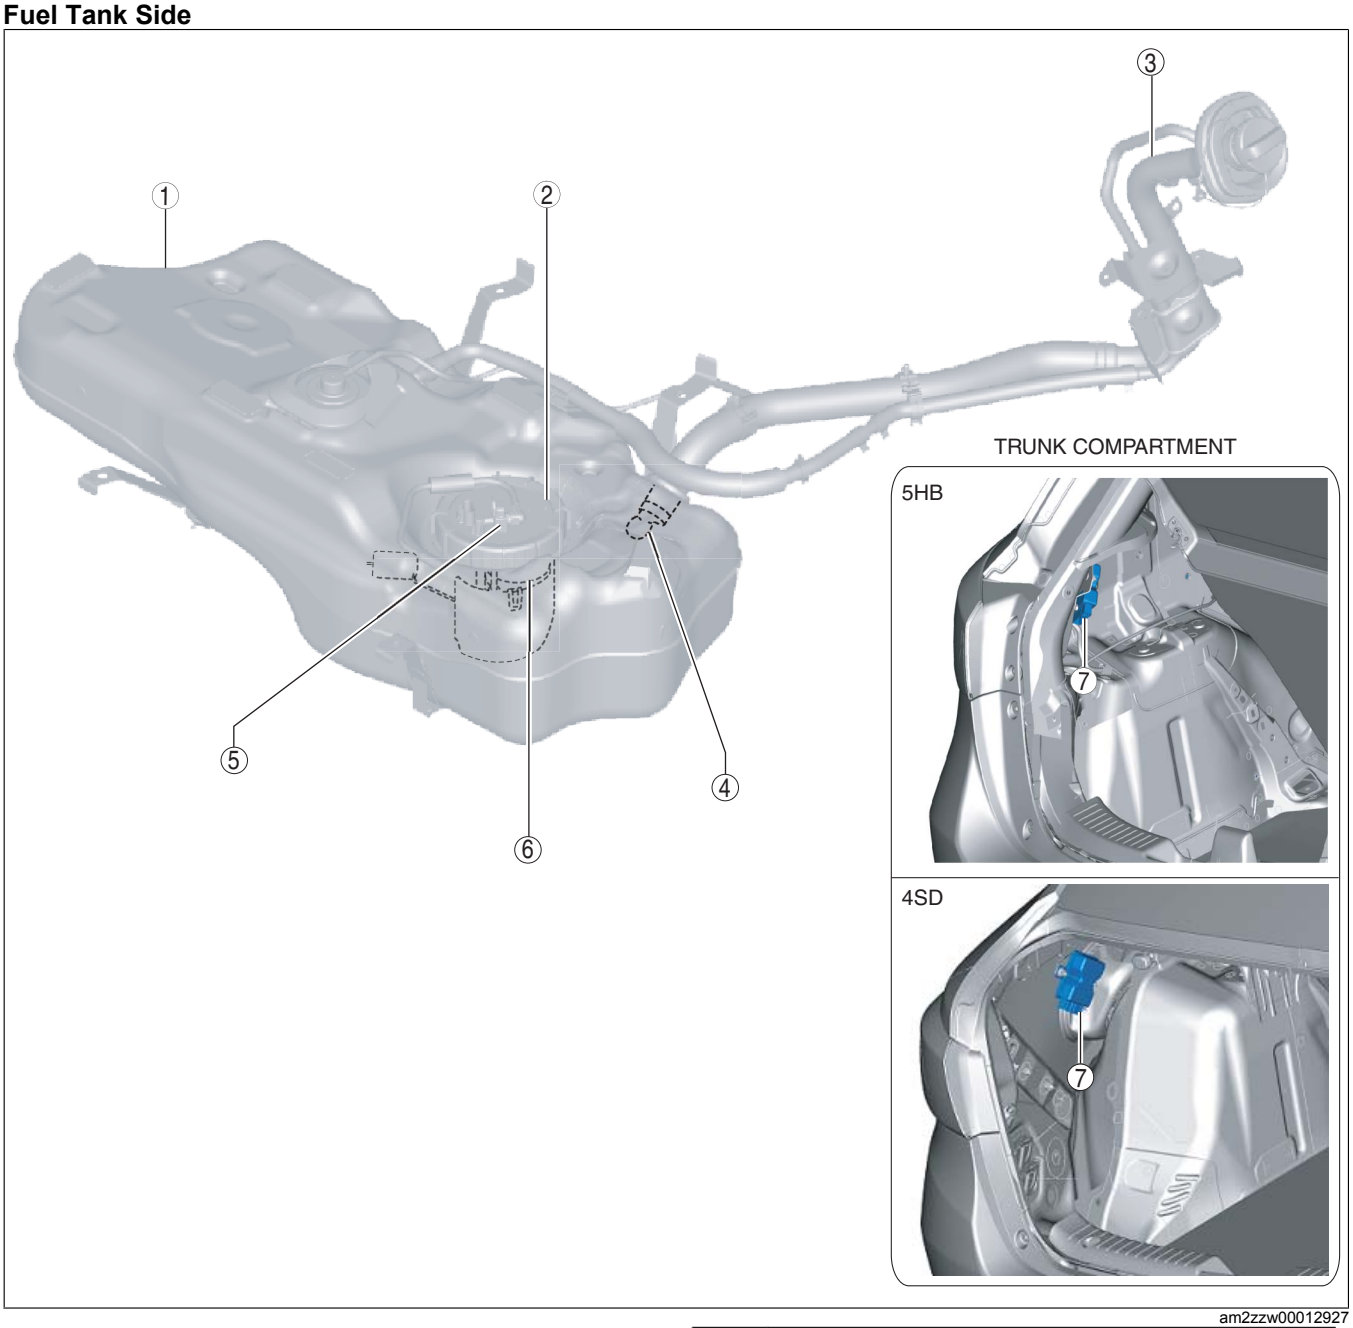

am2zzw00012927

1	Fuel tank (See FUEL TANK REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See FUEL TANK INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
2	Fuel pump unit (See FUEL PUMP UNIT REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See FUEL PUMP UNIT DISASSEMBLY/ASSEMBLY [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See FUEL PUMP UNIT INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
3	Fuel-filler pipe (See FUEL-FILLER PIPE REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

4	Non-return valve (See NON-RETURN VALVE INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
5	Quick release connector (See QUICK RELEASE CONNECTOR REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
6	Fuel filter (high-pressure) (See FUEL FILTER (HIGH-PRESSURE) REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
7	Fuel pump control module (See FUEL PUMP CONTROL MODULE REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See FUEL PUMP CONTROL MODULE INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)