FUEL INJECTOR INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5]


id0114q1800700

Resistance Inspection

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the plug hole plate. (See PLUG HOLE PLATE REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
3. Disconnect the fuel injector connector.
4. Inspect the resistance between fuel injector terminals A and B.

   Fuel injector resistance
   1.6—2.52 ohms [Surrounding temperature: 0—80 °C {32—176 °F}]

   - If not within the specification, replace the fuel injector. (See FUEL INJECTOR REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

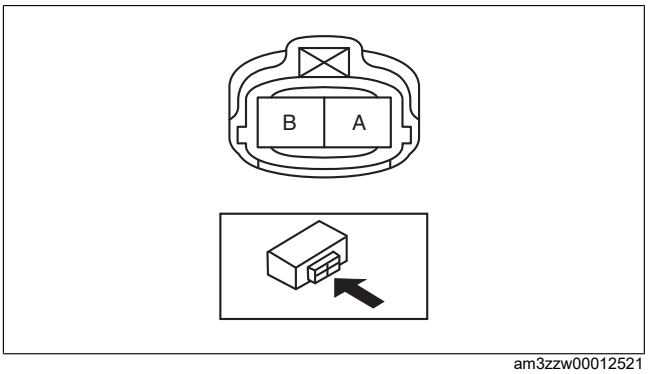

am3zzw00012521