
FUEL PUMP UNIT INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0114q1801100

Continuity Inspection

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the rear seat cushion. (See REAR SEAT CUSHION REMOVAL/INSTALLATION.)
3. Remove the service hole cover. (See FUEL TANK REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
4. Disconnect the fuel pump unit connector.
5. Inspect for continuity between fuel pump unit terminals A—B.
   - If there is no continuity, replace the fuel pump unit. (See FUEL PUMP UNIT REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

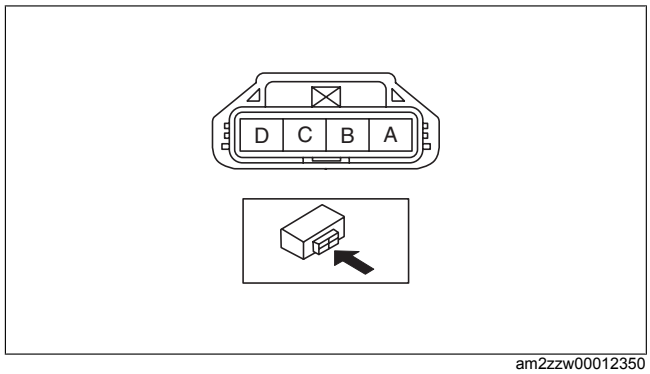

am2zzw00012350