FUEL-FILLER PIPE REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0114q1806900


Warning

- **Fuel is very flammable liquid. If fuel spills or leaks from the pressurized fuel system, it will cause serious injury or death and facility breakage. Fuel can also irritate skin and eyes. To prevent this, always complete the "Fuel Line Safety Procedure", while referring to the "BEFORE SERVICE PRECAUTION".**
- **A person charged with static electricity could cause a fire or explosion, resulting in death or serious injury. Before draining fuel, make sure to discharge static electricity by touching the vehicle body.**

Caution

- **Disconnecting/connecting the quick release connector without cleaning it may cause damage to the fuel pipe and quick release connector. Always clean the quick release connector joint area before disconnecting/connecting using a cloth or soft brush, and make sure that it is free of foreign material.**

1. Level the vehicle.
2. Complete the "BEFORE SERVICE PRECAUTION". (See BEFORE SERVICE PRECAUTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
3. Drain the fuel. (See FUEL DRAINING PROCEDURE [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
4. Open the fuel-filler lid.
5. Remove in the order indicated in the table.
6. Install in the reverse order of removal.
7. Complete the "AFTER SERVICE PRECAUTION". (See AFTER SERVICE PRECAUTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

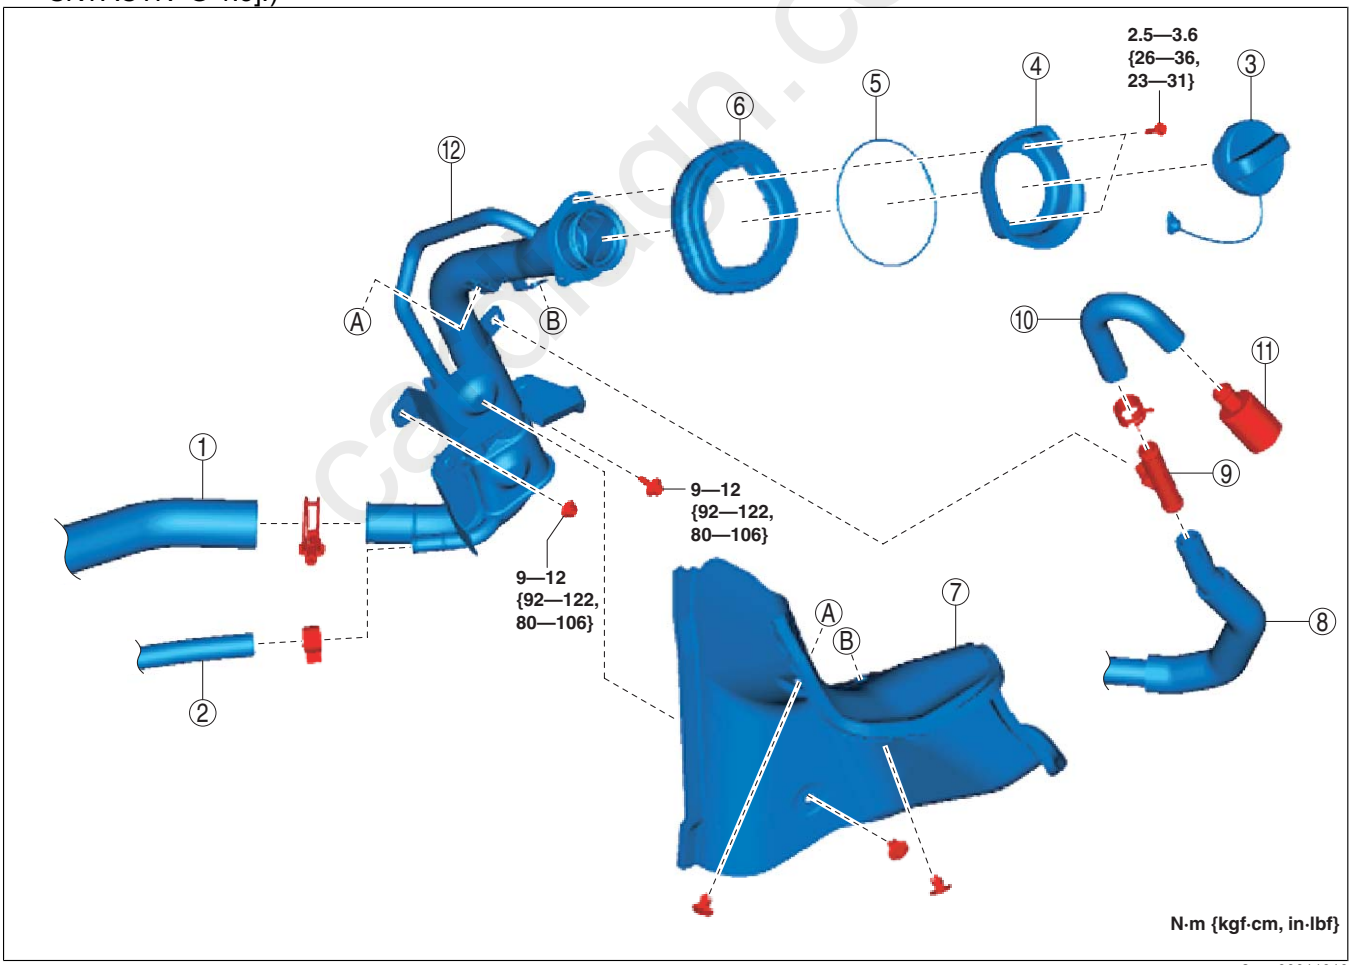

am2zzw00011910

1	Joint hose (See Breather Hose No.1 Installation Note.)
2	Breather hose No.1 (See Joint Hose Installation Note.)
3	Fuel-filler cap
4	Protector


5	O-ring
6	Dust cover
7	Fuel-filler pipe protector
8	Evaporative hose
9	Joint
10	Hose

11	Plug

12	Fuel-filler pipe

Breather Hose No.1 Installation Note


1. Connect the breather hose to the fuel-filler pipe as shown in the figure.

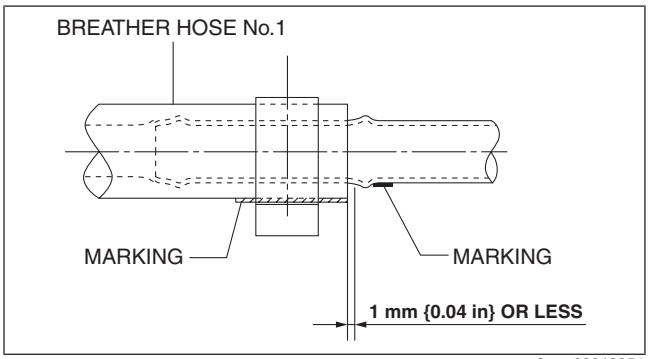

am2zzw00012854

Joint Hose Installation Note

1. Connect the joint hose to the fuel-filler pipe as shown in the figure.

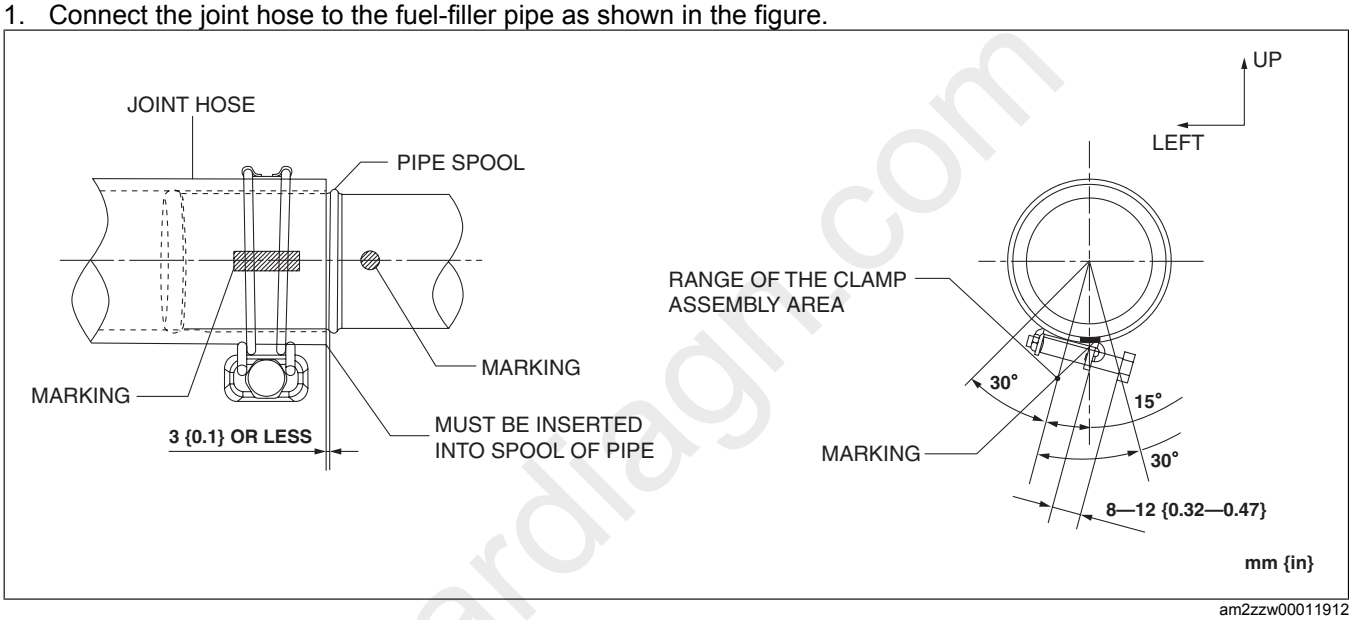

am2zzw00011912

cardiagn.com