SUCTION CONTROL VALVE INSPECTION [SKYACTIV-D 1.5]


id0114q2087800

Caution
- **The supply pump is sealed to maintain the function. Therefore, SSTs and tester are required to disassemble the supply pump securely.**
- **If a malfunction in the supply pump is verified, place a repair order with the DENSO, Ltd. services network (supply pump manufacturer), and do not disassemble the supply pump yourself.**

Resistance inspection
1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the air cleaner. (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
3. Remove the battery and the battery tray. (See BATTERY REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
4. Disconnect suction control valve connector.
5. Measure the resistance between the suction control valve terminals A and B.

   Suction control valve resistance (specification)
   Approx. 2.1 ohms [20 °C {68 °F}]

- If not within the specification, replace the suction control valve. (See SUCTION CONTROL VALVE REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)

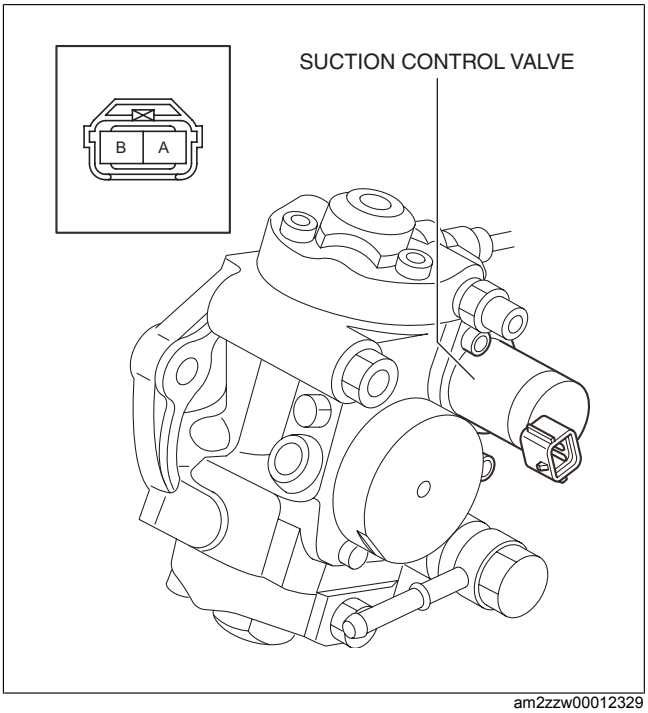

am2zzw00012329