SUCTION CONTROL VALVE REMOVAL/INSTALLATION [SKYACTIV-D 1.5]

id0114q2087900

Warning

- **Fuel is very flammable liquid. If fuel spills or leaks from the pressurized fuel system, it will cause serious injury or death and facility breakage. Fuel can also irritate skin and eyes. To prevent this, always complete the "Fuel Line Safety Procedure", while referring to the "BEFORE SERVICE PRECAUTION".**
- **A person charged with static electricity could cause a fire or explosion, resulting in death or serious injury. Before draining fuel, make sure to discharge static electricity by touching the vehicle body.**


Caution

- **If parts are exposed to the fuel, their function may be decreased or a fire may occur. Spread a rag to absorb any leaked fuel.**
- **Do not let foreign matter get into the injection pipe to prevent clogging. In addition, always tighten the injection pipe to the specified torque.**

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Complete the "BEFORE SERVICE PRECAUTION". (See BEFORE SERVICE PRECAUTION [SKYACTIV-D 1.5].)
3. Remove the battery. (See BATTERY REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
4. Remove in the order shown in the figure.

1.	Suction control valve connector
2.	Suction control valve

5. Install in the reverse order of removal.
6. Complete the "AFTER SERVICE PRECAUTION". (See AFTER SERVICE PRECAUTION [SKYACTIV-D 1.5].)

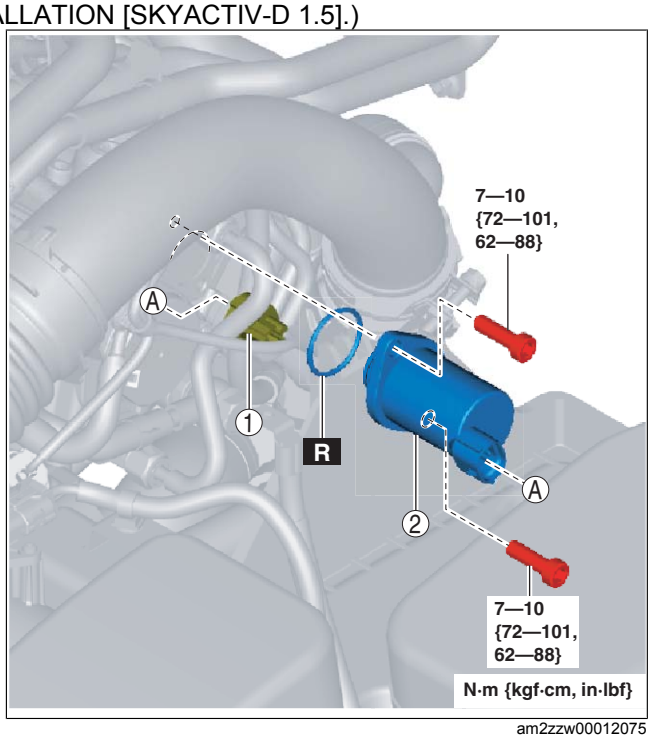

am2zzw00012075