
FUEL WARMER INSPECTION [SKYACTIV-D 1.5]

id0114q2089300

1. Perform the DTC inspection using the M-MDS. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-D 1.5].)
   - If DTC P0182:00 or P0183:00 is detected, repair the malfunctioning location according to the applicable DTC troubleshooting. (See DTC P0182:00 [SKYACTIV-D 1.5].) (See DTC P0183:00 [SKYACTIV-D 1.5].)
2. Access the FRT PID using the M-MDS. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-D 1.5].)
3. FRT PID value is less than 5 °C {41 °F}, go to the next step.
4. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
5. Perform the “Fuel Line Safety Procedure” referring to the “BEFORE SERVICE PRECAUTION”. (See BEFORE SERVICE PRECAUTION [SKYACTIV-D 1.5].)
6. Remove the fuel warmer. (See FUEL FILTER DISASSEMBLY/ASSEMBLY [SKYACTIV-D 1.5].)
7. Measure the resistance between the fuel warmer terminals A and B.

   Fuel warmer resistance (specification)
   Approx. 0.85—1.28 ohms

   - If not within the specification, replace the fuel filter. (See FUEL FILTER REMOVAL/ INSTALLATION [SKYACTIV-D 1.5].)

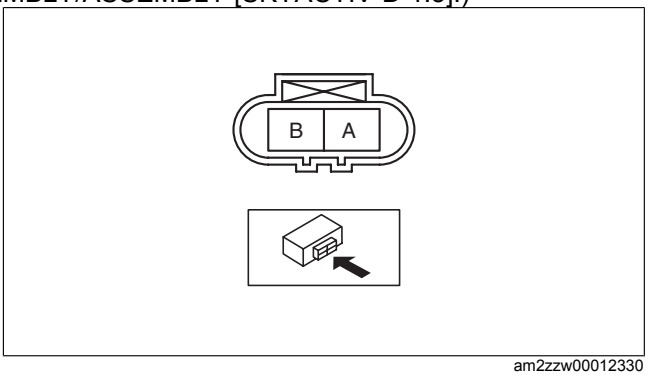

am2zzw00012330