FUEL PRESSURE RELIEF VALVE [SKYACTIV-D 1.5]


id0114q2707800

Purpose, Function

- The fuel pressure relief valve discharges fuel to control the pressure in the common rail at the target value.


Construction

- The fuel pressure relief valve is located in the common rail.

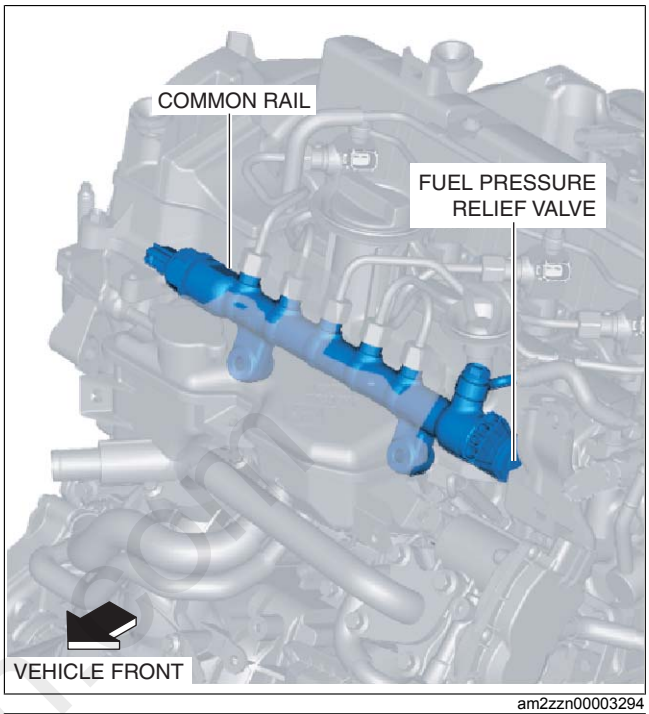

am2zzn00003294

- The fuel pressure relief valve consists of the spring, ball, and push rod.

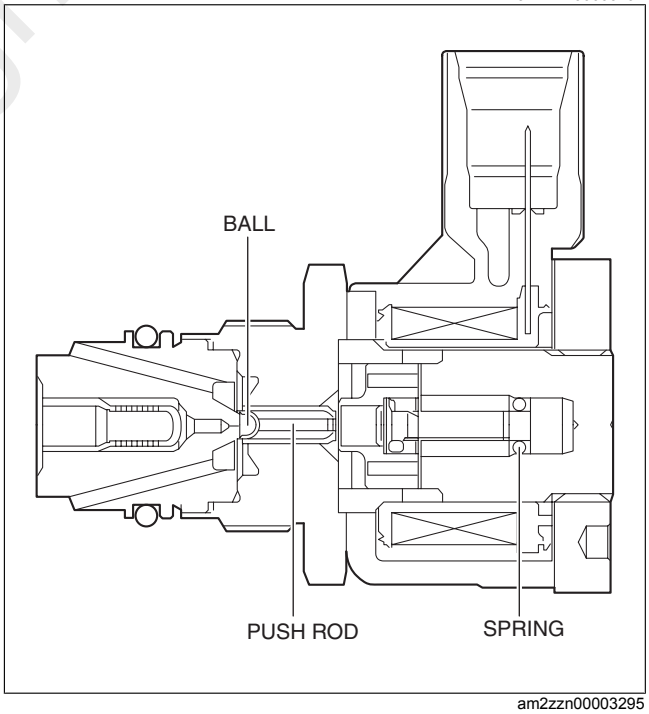


am2zzn00003295

Operation


- The coil is energized and the push rod is operated to open the fuel passage according to the control signal from the PCM.

cardiagn.com

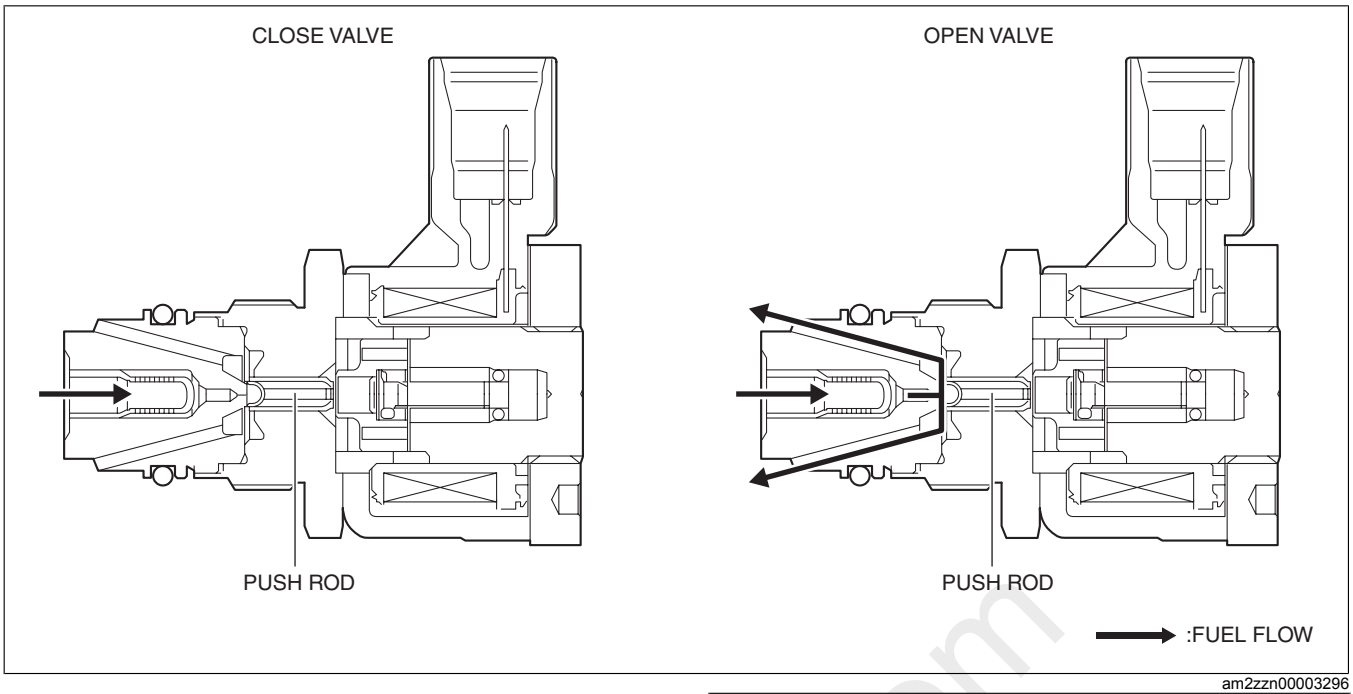

am2zzn00003296

- The fuel passage opens and the pressure in the common rail flows to the lower case side.

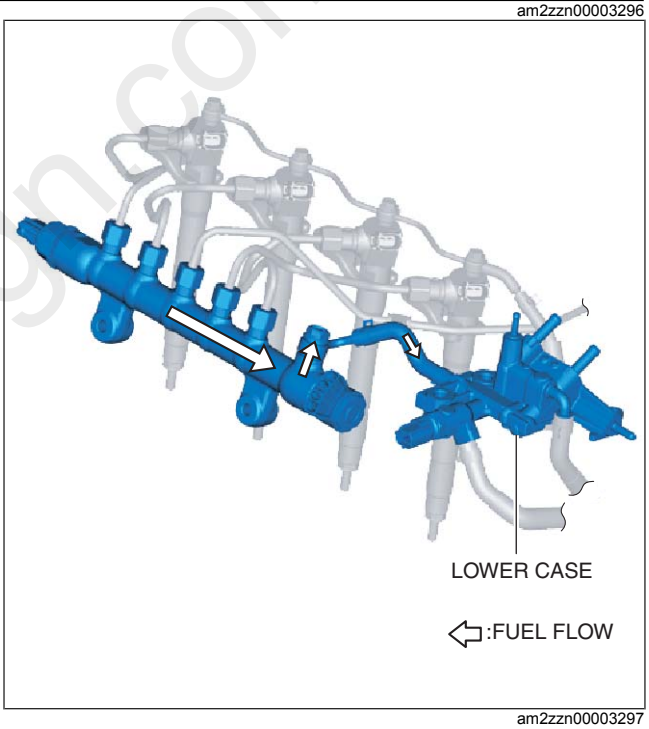

am2zzn00003297

cardiagn.com

Fail-safe

DTC No.	Fail-safe function
P0087:00	• Inhibits the EGR control. • Increase the idle speed. • Inhibits the auto DPF regeneration control. • Inhibits the compulsory DPF regeneration control. • Inhibits engine-stop by operating the i-stop function. • PCM restricts engine-transaxle integration control. (ATX)
P0088:00	• Inhibits the EGR control. • Inhibits the auto DPF regeneration control. • Inhibits the compulsory DPF regeneration control. • Inhibits engine-stop by operating the i-stop function. • PCM restricts engine-transaxle integration control. (ATX)

DTC No.	Fail-safe function
P0089:00	• Limits the engine torque.
P009E:00	• Limits the upper limit of the engine speed.
P009F:00	• Inhibits engine-stop by operating the i-stop function. • PCM restricts engine-transaxle integration control. (ATX)
P009B:00	• Inhibits engine-stop by operating the i-stop function.
P009C:00	
P009D:00	

cardiagn.com