
FUEL SYSTEM LOCATION INDEX [SKYACTIV-D 1.5]

id0114q2800100


Engine compartment side

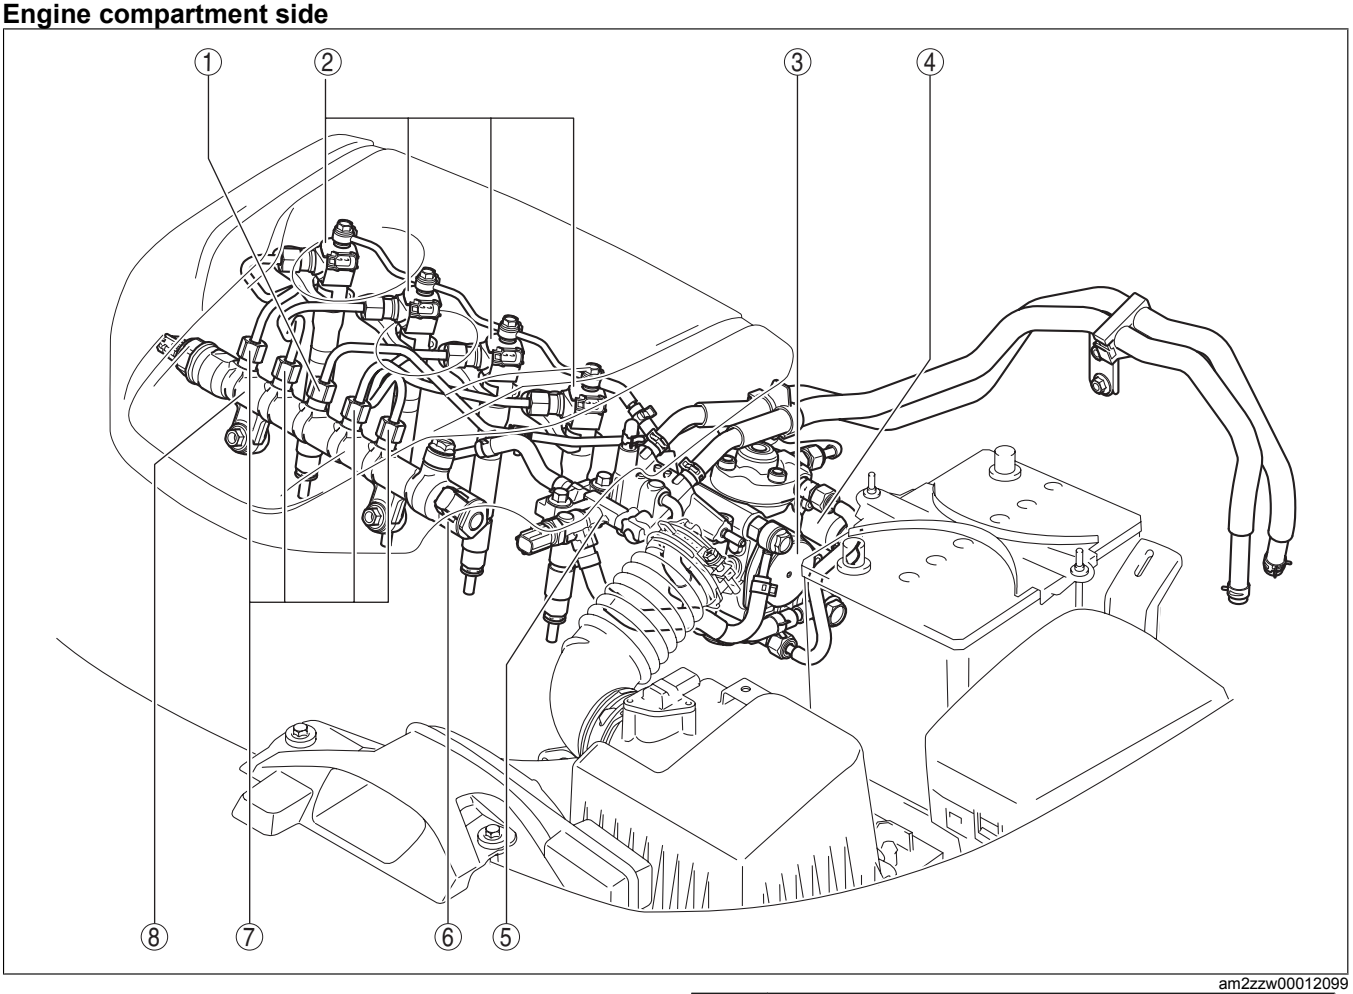

am2zzw00012099

1	Injection pipe (supply pump side) (See INJECTION PIPE REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
2	Fuel injector (See FUEL INJECTOR REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See FUEL INJECTOR INSPECTION [SKYACTIV-D 1.5].)
3	Supply pump (See SUPPLY PUMP REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See SUPPLY PUMP INSPECTION [SKYACTIV-D 1.5].)
4	Suction control valve (See SUCTION CONTROL VALVE REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See SUCTION CONTROL VALVE INSPECTION [SKYACTIV-D 1.5].)
5	Lower case (See LOWER CASE REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
6	Fuel pressure relief valve (See FUEL PRESSURE RELIEF VALVE REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See FUEL PRESSURE RELIEF VALVE INSPECTION [SKYACTIV-D 1.5].)
7	Injection pipe (fuel injector side) (See INJECTION PIPE REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
8	Common rail (See COMMON RAIL REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See COMMON RAIL INSPECTION [SKYACTIV-D 1.5].)

Fuel tank side

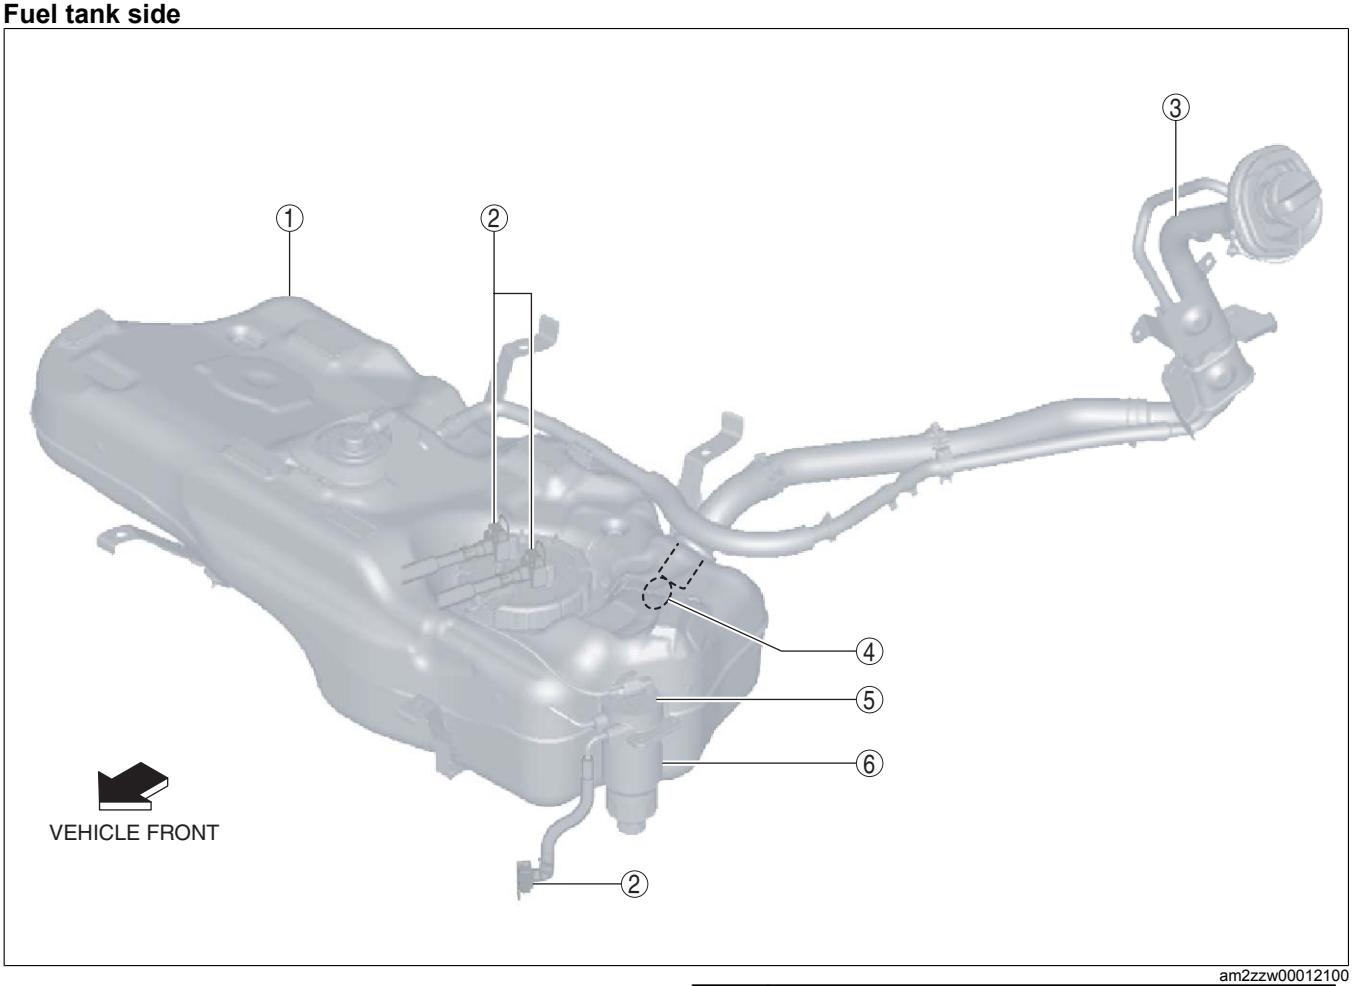

am2zzw00012100

1	Fuel tank (See FUEL TANK REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See FUEL TANK INSPECTION [SKYACTIV-D 1.5].)
2	Quick release connector (See QUICK RELEASE CONNECTOR REMOVAL/ INSTALLATION [SKYACTIV-D 1.5].)
3	Fuel-filler pipe (See FUEL-FILLER PIPE REMOVAL/ INSTALLATION [SKYACTIV-D 1.5].)
4	Non-return valve (See NON-RETURN VALVE INSPECTION [SKYACTIV-D 1.5].)

5	Fuel warmer (See FUEL FILTER DISASSEMBLY/ASSEMBLY [SKYACTIV-D 1.5].) (See FUEL WARMER INSPECTION [SKYACTIV-D 1.5].)
6	Fuel filter (See FUEL FILTER REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See FUEL FILTER DISASSEMBLY/ASSEMBLY [SKYACTIV-D 1.5].) (See FUEL FILTER INSPECTION [SKYACTIV-D 1.5].)