PURGE SOLENOID VALVE [SKYACTIV-G 1.3, SKYACTIV-G 1.5]


id0116q1112300

Purpose, Function

- The purge solenoid valve introduces evaporative gas absorbed by the charcoal canister to the intake manifold.
- The purge solenoid valve opens according to the control signal from the PCM.


Construction

- The purge solenoid valve is located in the engine compartment.

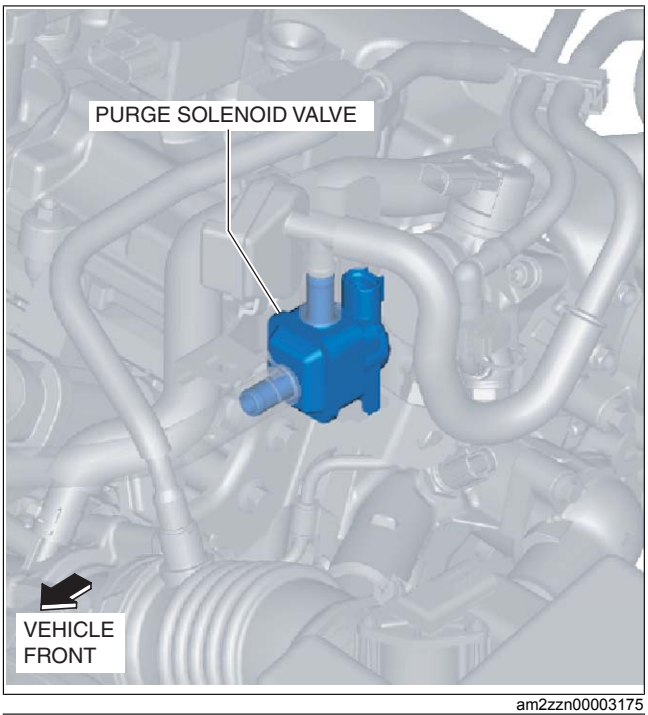

am2zzn00003175


- The purge solenoid valve consists of a coil, spring, and plunger.

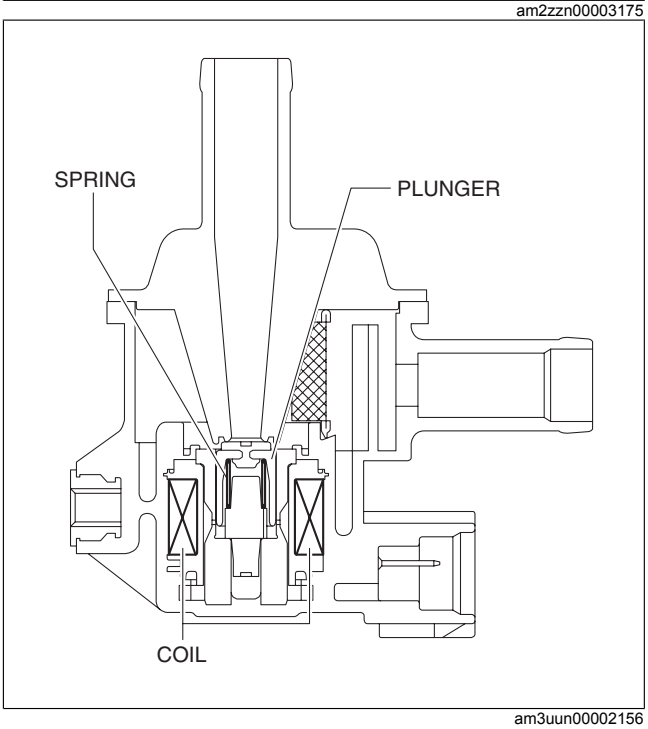

am3uun00002156

Operation


- According to the control signal from the PCM, the coil is energized and the plunger is operated to open/close the purge solenoid valve.

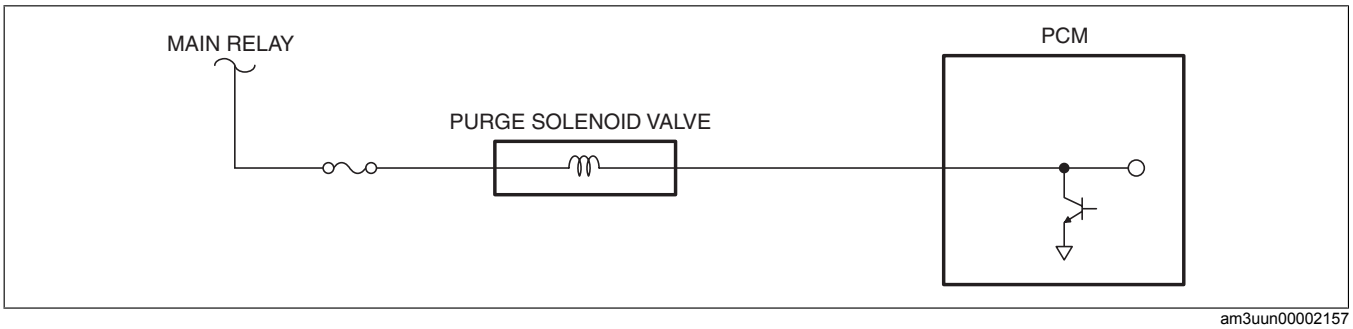

am3uun00002157

- When the purge solenoid valve is open, evaporative gas flows from the charcoal canister to the intake manifold side.

Purge solenoid valve open/closed view

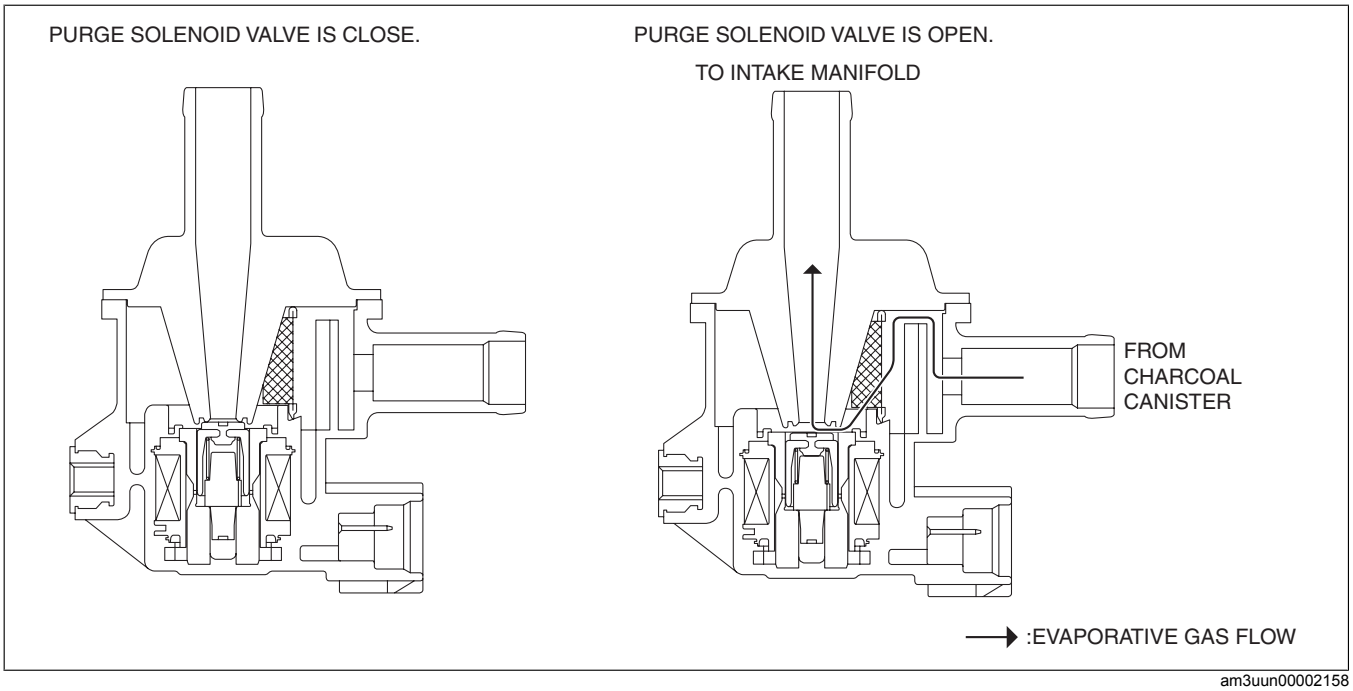

am3uun00002158

- For evaporative purge control details, refer to CONTROL SYSTEM. (See PURGE CONTROL [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

Fail-safe

- Function not equipped.