FUEL-FILLER CAP [SKYACTIV-G 1.3, SKYACTIV-G 1.5]


id0116q1112700

Purpose, Function

- The fuel-filler cap releases evaporative gas from the fuel tank if there is a malfunction in the evaporative gas passage between the fuel tank and the intake manifold. As a result, deformation of the fuel tank caused by evaporative gas pressure is prevented.


Construction

- The fuel-filler cap is located on the fuel-filler opening.

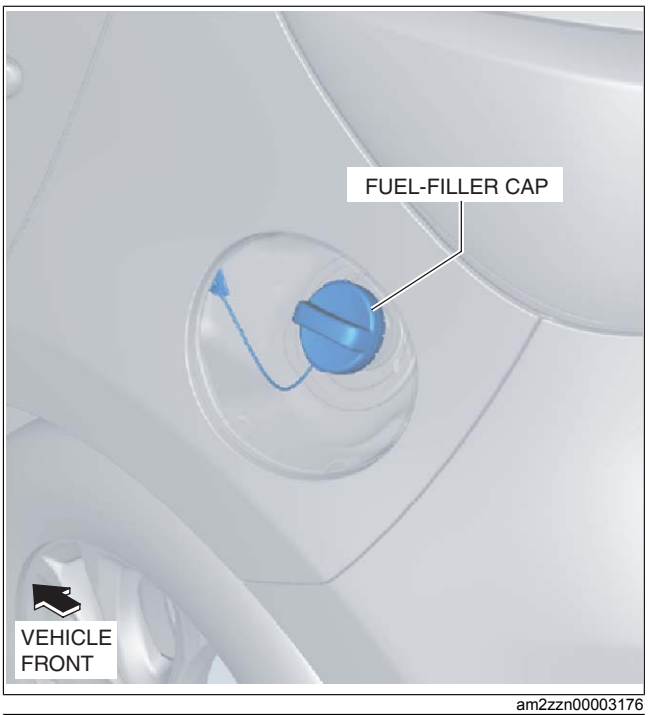

am2zzn00003176


- The fuel-filler cap consists of a valves, retainer, and springs.

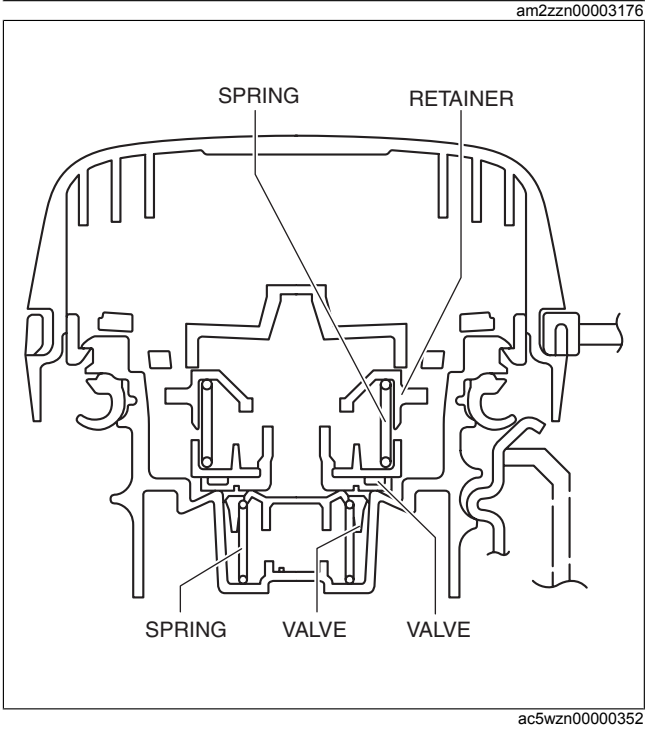

ac5wzn00000352

Operation

- When there is positive pressure in the fuel tank due to evaporative gas, evaporative gas is released into the atmosphere. When there is negative pressure, air is introduced to the fuel tank.

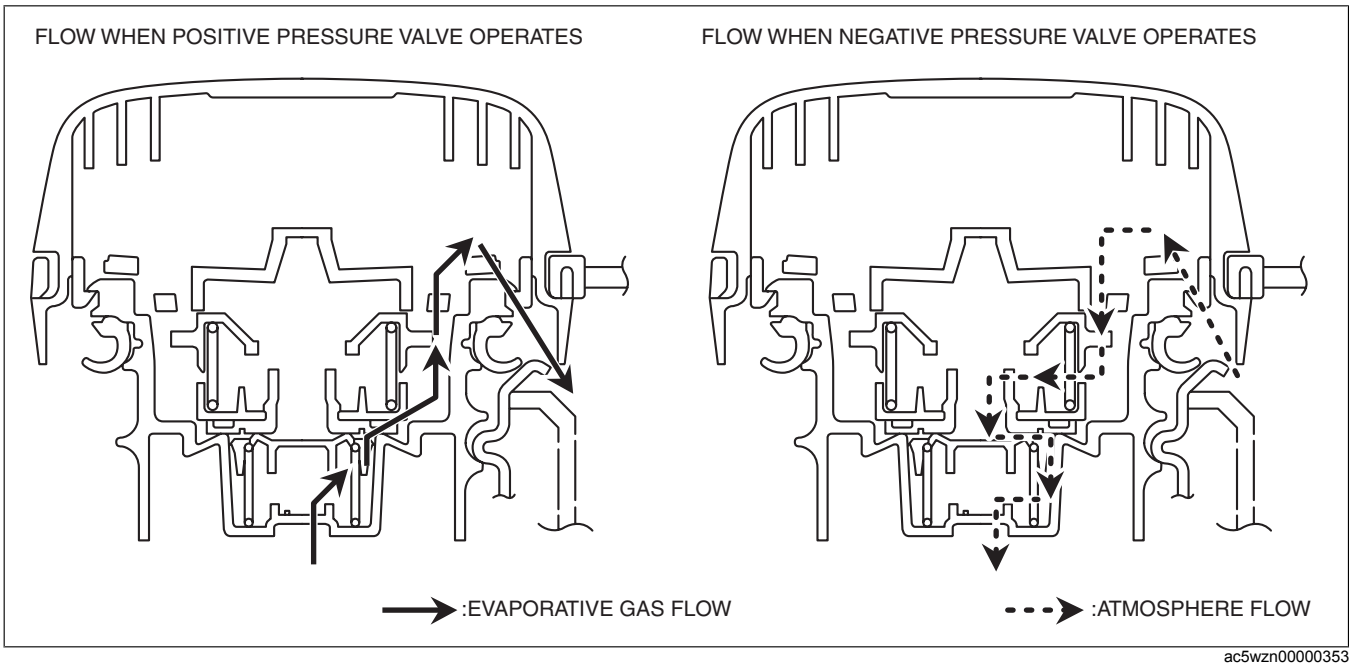

ac5wzn00000353