POSITIVE CRANKCASE VENTILATION (PCV) VALVE [SKYACTIV-G 1.3, SKYACTIV-G 1.5]


id0116q1153200

Purpose, Function

- The PCV valve prevents release of blow-by gas (unburnt gas) into the atmosphere.
- The PCV valve is open/closed by the intake manifold vacuum.


Construction

- The PCV valve is located on the oil separator.

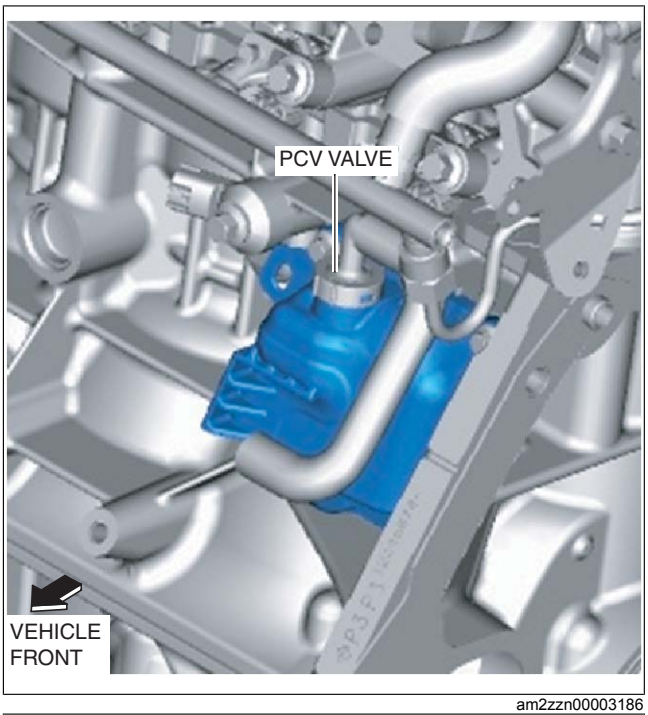

am2zzn00003186


- The PCV valve consists of a spring and valve.

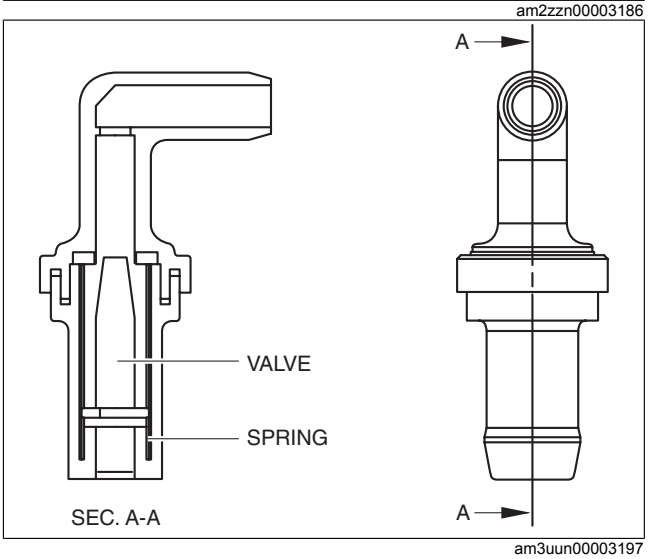

am3uun00003197

Operation

- When the valve is pulled by the intake manifold vacuum, blow-by gas flows to the intake manifold.
- The blow-by gas flow amount is determined by the balance of the intake manifold vacuum and the spring force.

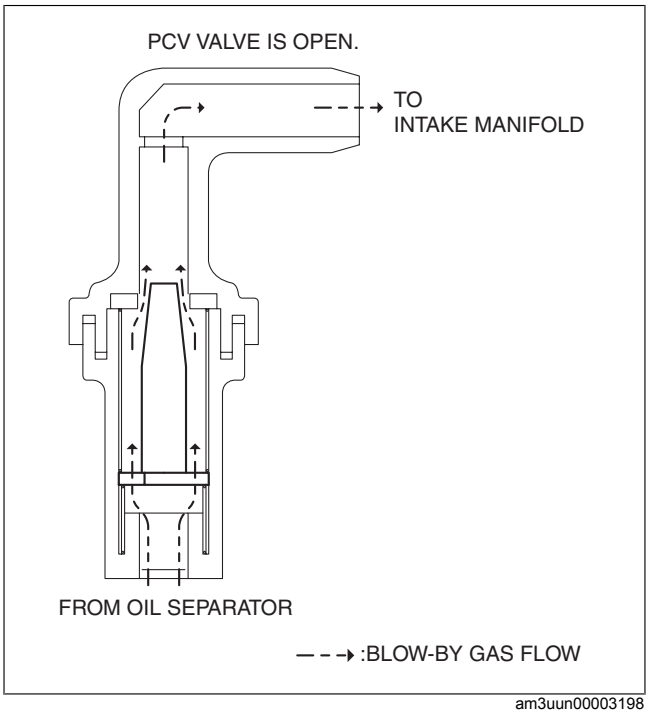

am3uun00003198