CHECK VALVE [SKYACTIV-G 1.3, SKYACTIV-G 1.5]


id0116q1196900

Purpose, Function

- The check valve adjusts and maintains the pressure in the fuel tank at a constant pressure.

Construction

- The check valve is built into the rollover valve.

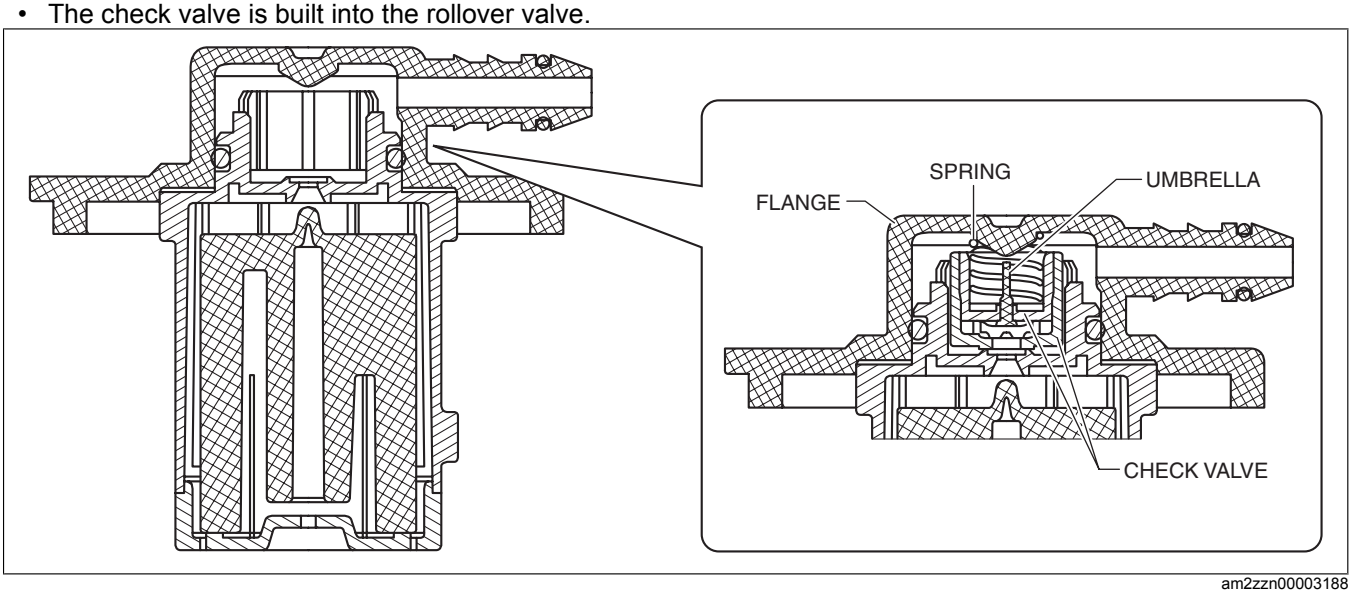

am2zzn00003188

Operation

- The valve moves in response to the difference in air pressure between the fuel tank side and the atmospheric side, thereby changing the path of airflow.
- When the pressure in the fuel tank becomes negative due to fuel consumption or other factors, the path opens, drawing atmospheric air into the fuel tank.