
CHARCOAL CANISTER INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0116q1800500

Leakage Inspection


1. Perform the following procedures:
   - Assemble the hose used for inspection to port A.
   - Cover ports B and C with the caps.

   Caution
   - **Do not apply a pressure 20 kPa {150 mmHg, 5.91 inHg} or more to the charcoal canister for 1 min. or more. Doing so will damage the charcoal canister.**

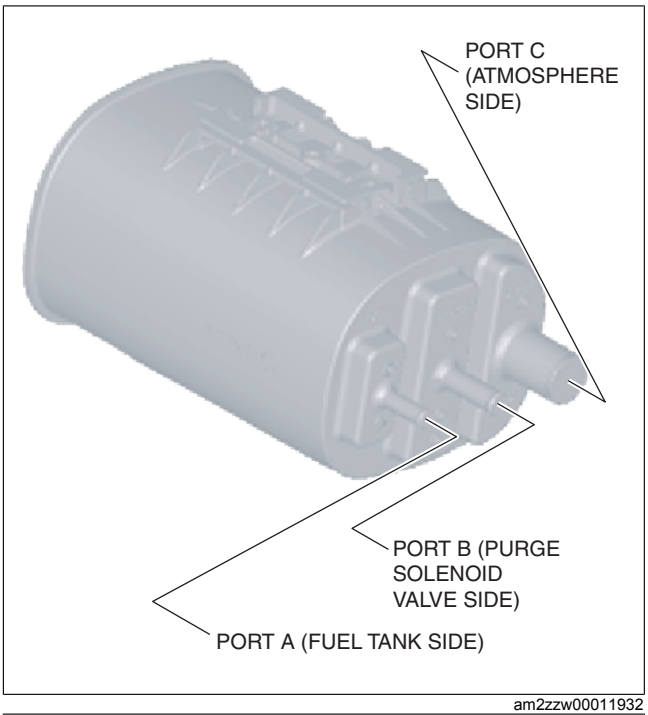

am2zzw00011932

2. Apply pressure (**19.6 kPa {147 mmHg, 5.79 inHg}**) through the hose, and verify that air does not leak from the charcoal canister.
   - If there is airflow, replace the charcoal canister. (See CHARCOAL CANISTER REMOVAL/ INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
   - If there is no airflow, perform the following “Airflow Inspection”. (See Airflow Inspection.)

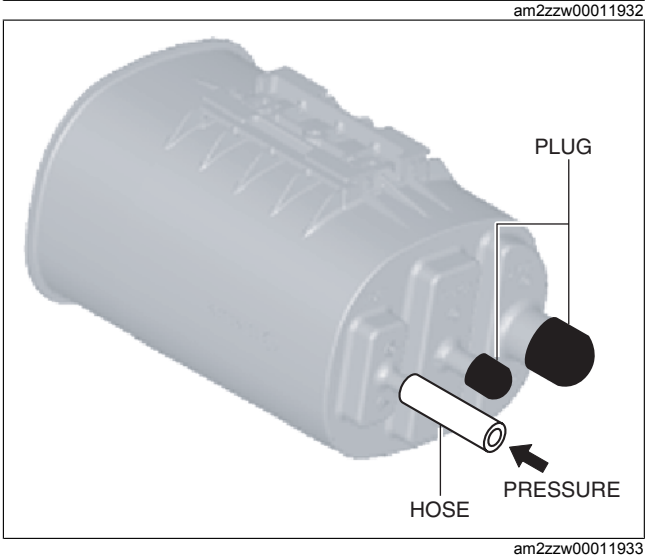


am2zzw00011933

Airflow Inspection

1. Perform the following procedure to verify the charcoal canister airflow.

Between port A and port C


1. Plug the port B.
2. Apply a pressure of **0.98 kPa {7.4 mmHg, 0.29 inHg}** to port A.
3. Verify that there is airflow from port C.
   - If there is no airflow, replace the charcoal canister. (See CHARCOAL CANISTER REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

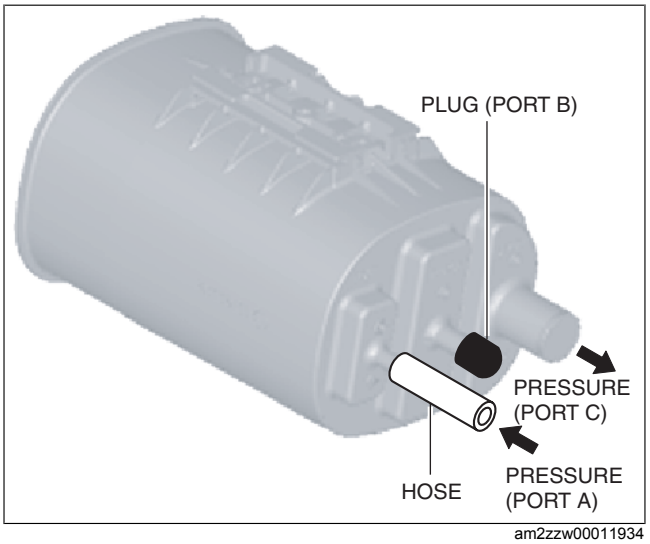

am2zzw00011934

Between port B and port C

1. Plug the port A.
2. Apply a pressure of **0.98 kPa {7.4 mmHg, 0.29 inHg}** to port B.
3. Verify that there is airflow from port C.
   - If there is no airflow, replace the charcoal canister. (See CHARCOAL CANISTER REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

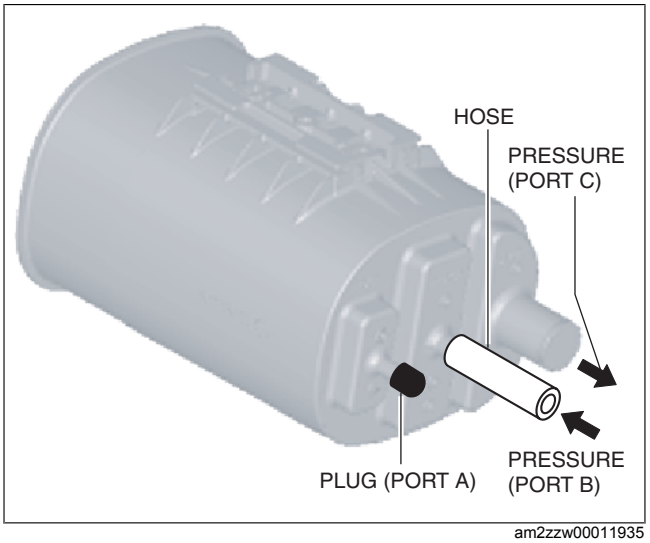

am2zzw00011935