PURGE SOLENOID VALVE INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5]


id0116q1800900

Airflow Inspection

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the plug hole plate. (See PLUG HOLE PLATE REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
3. Remove the purge solenoid valve. (See PURGE SOLENOID VALVE REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
4. Inspect airflow between the ports under the following conditions.

Measured condition	Continuity between ports A—B
When voltage is not applied between terminals A and B	No airflow
When voltage is applied between terminals A and B	Airflow detected

- If not as specified, replace the purge solenoid valve. (See PURGE SOLENOID VALVE REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

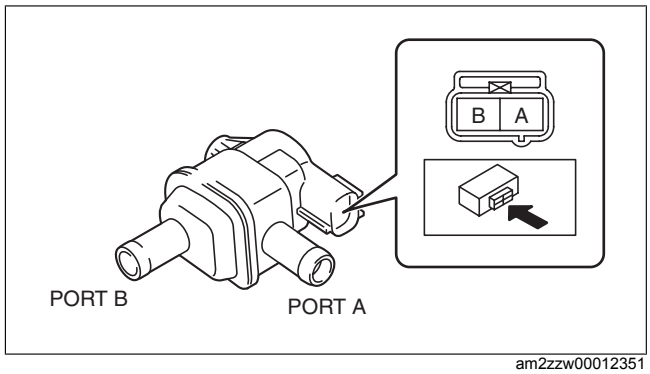

am2zzw00012351