
EMISSION SYSTEM LOCATION INDEX [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0116q1803700

Engine Compartment Side

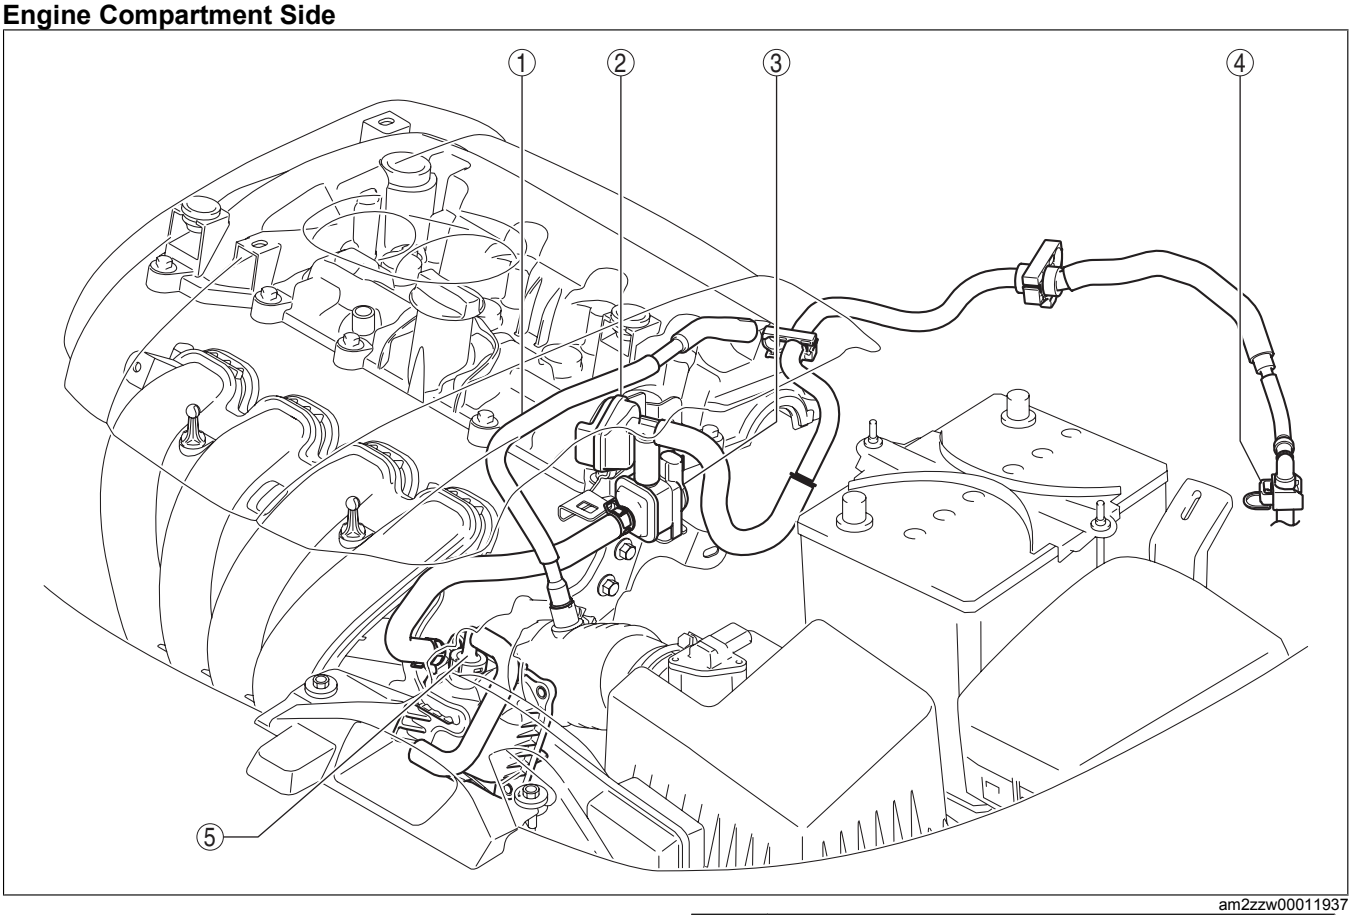


am2zzw00011937

1	Ventilation hose (See INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
2	Catch tank (See PURGE SOLENOID VALVE REMOVAL/ INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See CATCH TANK INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
3	Purge solenoid valve (See PURGE SOLENOID VALVE REMOVAL/ INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See PURGE SOLENOID VALVE INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
4	Quick release connector (See QUICK RELEASE CONNECTOR (EMISSION SYSTEM) REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
5	PCV valve (See POSITIVE CRANKCASE VENTILATION (PCV) VALVE REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See POSITIVE CRANKCASE VENTILATION (PCV) VALVE INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)


Exhaust System Side

SKYACTIV-G 1.3, SKYACTIV-G 1.5 (with 4-1 exhaust system)

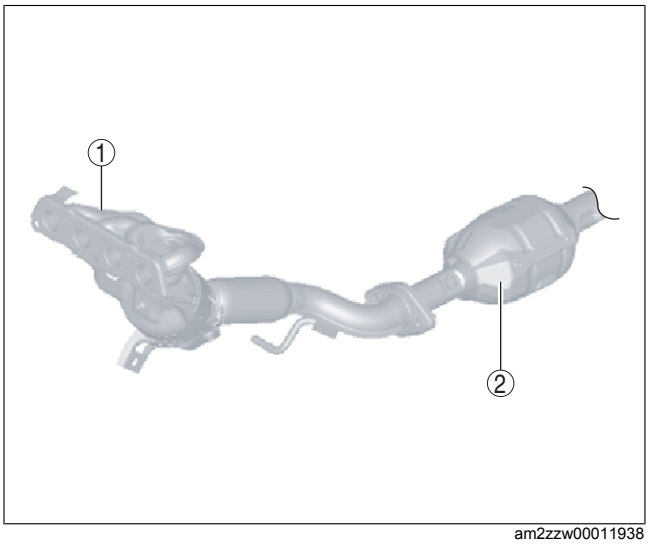

am2zzw00011938

SKYACTIV-G 1.5 (with 4-2-1 exhaust system)

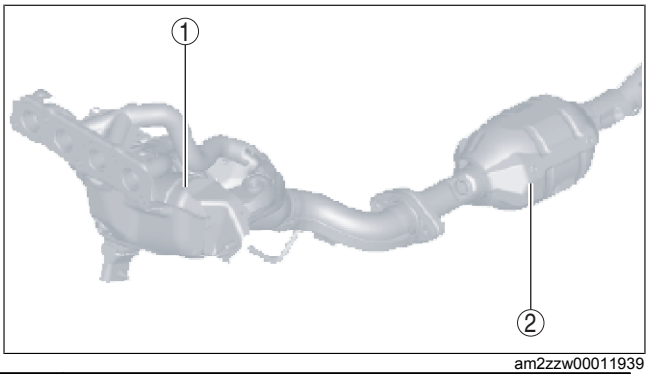


am2zzw00011939

1	WU-TWC (See EXHAUST SYSTEM REMOVAL/ INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

2	TWC (See EXHAUST SYSTEM REMOVAL/ INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

Fuel Tank Side

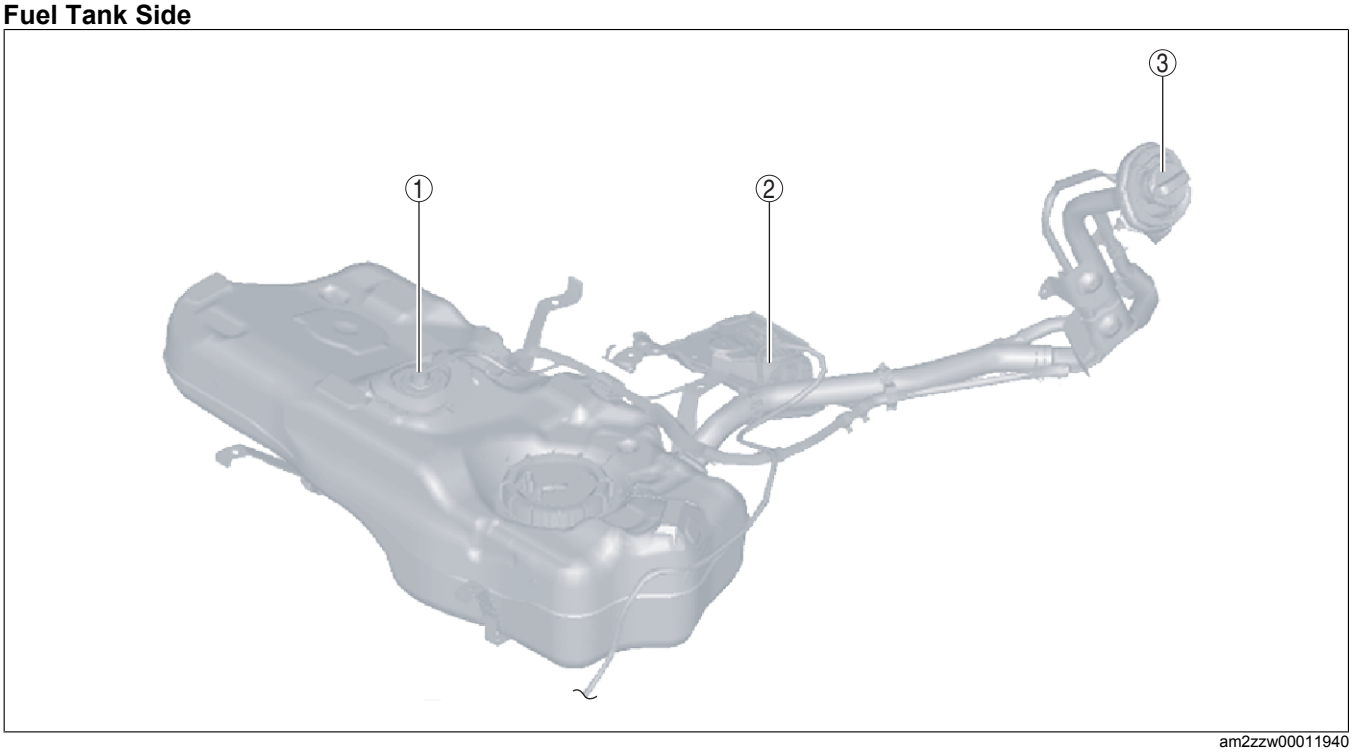

am2zzw00011940

1	Rollover valve (check valve) (See ROLLOVER VALVE REMOVAL/ INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See ROLLOVER VALVE INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See CHECK VALVE REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See CHECK VALVE INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
2	Charcoal canister (See CHARCOAL CANISTER REMOVAL/ INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See CHARCOAL CANISTER INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
3	Fuel-filler cap (See FUEL-FILLER PIPE REMOVAL/ INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)